

## Satisfyer 051574SF

# Satisfyer Sugar Rush Vibrator User Manual

Model: 051574SF

[Introduction](#)

[Setup](#)

[Operating  
Instructions](#)

[Maintenance  
Warranty &  
Support](#)

[Troubleshooting](#)

[Specifications](#)

## INTRODUCTION

The Satisfyer Sugar Rush is a clitoral stimulator designed for external use. It features a rounded head for broad surface area stimulation and utilizes non-contact pressure-wave technology combined with vibrations. The device is made from body-friendly silicone and is waterproof.

Your browser does not support the video tag.

Official product video demonstrating the Satisfyer Sugar Rush features and design.

## SETUP

### Charging the Device

Before first use, fully charge the Satisfyer Sugar Rush. A magnetic USB charging cable is included in the package.

1. Locate the magnetic charging port on the device.
2. Attach the magnetic end of the USB cable to the charging port.
3. Connect the USB-A end of the cable to a compatible USB power source (e.g., computer, USB wall adapter).
4. A full charge typically takes approximately 3 hours. The device will indicate when charging is complete (e.g., LED indicator changes color or turns off).



## Comfortable to Hold and Easy to Use:



Image showing the Satisfyer Sugar Rush connected to its magnetic USB charging cable.

### First Use Preparation

- Clean the device thoroughly before its first use. Refer to the "Maintenance" section for detailed cleaning instructions.
- Apply a water-based lubricant to the device for comfortable use.

### OPERATING INSTRUCTIONS

The Satisfyer Sugar Rush features two independently controlled motors: one for air-pulse stimulation and one for vibration. The device is designed to be ergonomic, allowing easy access to controls.



## Comfortable to Hold and Easy to Use:



Image illustrating the control buttons on the Satisfyer Sugar Rush.

### Air-Pulse Stimulation

- To turn on the air-pulse function, press and hold the central power button (often marked with a wave or pulse icon) for approximately 2 seconds.
- There are 11 air-pulse intensity levels. Short press the central power button to cycle through the intensity levels.
- To turn off the air-pulse function, press and hold the central power button for approximately 2 seconds.



Visual representation of the air pulse technology and its 11 intensity levels.

### Vibration Programs

- To turn on the vibration function, press and hold the vibration button (often marked with a wavy line or multiple lines) for approximately 2 seconds.
- There are 12 vibration programs. Short press the vibration button to cycle through the different patterns and intensities.
- To turn off the vibration function, press and hold the vibration button for approximately 2 seconds.

## Combined Use

Both the air-pulse and vibration functions can be used simultaneously or independently. To turn off both functions if they are active, press and hold both the air-pulse and vibration buttons for approximately 2 seconds.

The device offers versatile use. The main opening provides direct air-pulse stimulation, while the flat sides can be used for broader vibratory sensations on various body parts.

## MAINTENANCE

### Cleaning

- Clean the device thoroughly after each use.
- Wash the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
- Rinse thoroughly with clean water.
- Dry the device completely with a lint-free cloth before storage.

The Satisfyer Sugar Rush is waterproof (IPX7), allowing for easy cleaning under running water or in the shower.

## Satisfyer



### Why you will love it:



The device is waterproof (IPX7), making it suitable for use and cleaning in wet environments.

## Storage

- Store the device in a clean, dry, and dust-free environment.
- Avoid storing with other toys made of different materials to prevent material degradation.

## TROUBLESHOOTING

---

### Device Not Turning On

- Ensure the device is fully charged. Connect it to the charger and allow sufficient time for a full charge (approx. 3 hours).
- Verify that you are pressing and holding the correct power button for at least 2 seconds.

### Weak or No Stimulation

- Check the battery level. A low battery can result in weaker performance.
- Ensure the device is clean and free from debris that might obstruct the air-pulse opening.
- Adjust the intensity settings. Cycle through the 11 air-pulse levels or 12 vibration programs to find a suitable setting.
- Ensure proper contact with the skin for optimal air-pulse and vibration transfer.

### Charging Issues

- Confirm the magnetic charging cable is securely attached to the device and the USB power source.
- Try a different USB power source or wall adapter to rule out issues with the power supply.
- Inspect the charging cable for any damage.

## SPECIFICATIONS

---

<b>Model Number</b>	051574SF
<b>Brand</b>	Satisfyer
<b>Material</b>	Body-friendly Silicone
<b>Color</b>	Blue
<b>Water Resistance</b>	Waterproof (IPX7)
<b>Air-Pulse Intensities</b>	11
<b>Vibration Programs</b>	12
<b>Charging Time</b>	Approx. 3 hours
<b>Operating Time</b>	Approx. 60 minutes
<b>Package Dimensions</b>	10.28 x 7.4 x 2.4 inches
<b>Item Weight</b>	10.55 ounces

## WARRANTY & SUPPORT

---

### Warranty Information

The Satisfyer Sugar Rush comes with a 15-year guarantee, ensuring long-lasting satisfaction. Please retain your proof of purchase for warranty claims.

## **Customer Support**

For further assistance, product inquiries, or warranty claims, please visit the official Satisfyer website or contact their customer support directly. Refer to the packaging or the official website for the most up-to-date contact information.

Always ensure to read all safety information provided with the product before use.