

[Manuals.plus](#) /

> [Aqua Joe](#) /

> Aqua Joe AJ-MSG-TND Hose-Powered Multi Spray Gun User Manual

Aqua Joe AJ-MSG-TND

Aqua Joe AJ-MSG-TND Hose-Powered Multi Spray Gun

User Manual

1. INTRODUCTION

Thank you for choosing the Aqua Joe AJ-MSG-TND Hose-Powered Multi Spray Gun. This versatile tool is designed to simplify your outdoor cleaning and watering tasks, offering a convenient way to apply water or a mixture of water and detergent. With its ergonomic design and multiple spray patterns, it's an ideal solution for gardening, car washing, patio cleaning, and more.

Please read this manual carefully before operating the spray gun to ensure safe and efficient use. Keep these instructions for future reference.

2. PRODUCT OVERVIEW

The Aqua Joe AJ-MSG-TND features a durable plastic construction, an integrated detergent bottle, and a multi-pattern spray nozzle. It connects directly to a standard garden hose.

Key Features:

- **7 Spray Patterns:** Includes powerful tornado spiral, jet, soap, mist, soaker, flat, and shower.
- **Quick-Select Dial:** Easily adjust between soap and water flow.
- **Detergent Bottle:** 17 fl oz (500 ml) capacity with measurement markings.
- **Ergonomic Grip with Trigger Lock:** Reduces hand fatigue during extended use.
- **Standard Garden Hose Connection:** Compatible with most garden hoses.



Figure 2.1: Front view of the Aqua Joe AJ-MSG-TND Multi Spray Gun, showing the spray head, detergent bottle, and handle.

3. SETUP AND ASSEMBLY

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts are present and undamaged. The package should contain the Aqua Joe AJ-MSG-TND Multi Spray Gun with its integrated detergent bottle.

3.2 Connecting to a Garden Hose

1. Ensure your garden hose has a standard male threaded connector.
2. Screw the female threaded end of the Aqua Joe spray gun onto the male threaded end of your garden hose.
3. Tighten by hand until secure. Do not overtighten, as this may damage the threads.

3.3 Filling the Detergent Bottle

1. Unscrew the detergent bottle from the main spray gun body by twisting it counter-clockwise.
2. Fill the bottle with your desired liquid detergent or cleaning solution. The bottle has markings for fluid ounces (fl oz) and milliliters (ml) up to 17 fl oz (500 ml).
3. Screw the detergent bottle back onto the main spray gun body by twisting it clockwise until securely fastened.



Figure 3.1: The Aqua Joe spray gun with its detergent bottle filled with a cleaning solution, ready for use.

4. OPERATION

4.1 Turning On/Off Water Flow

Once connected to the garden hose, turn on the water supply from your spigot. The spray gun features a trigger for controlling water flow. Squeeze the trigger to start the flow and release to stop.

4.2 Using the Trigger Lock

For continuous spraying without holding the trigger, push the trigger lock forward (or down, depending on model orientation) while the trigger is squeezed. To release the lock, simply squeeze the trigger again.

4.3 Selecting Spray Patterns

The spray gun features a rotating nozzle head with 7 distinct spray patterns. To change the pattern, rotate the blue outer ring of the nozzle head until the desired pattern aligns with the indicator. The available patterns are:

- **Tornado Spiral:** A powerful, concentrated spiral spray for blasting away dirt and debris.
- **Jet:** A strong, focused stream for targeted cleaning.

- **Soap:** Designed for optimal detergent application.
- **Mist:** A fine, gentle spray for delicate plants or light rinsing.
- **Soaker:** A heavy, drenching flow for deep watering.
- **Flat:** A wide, flat spray for broad coverage.
- **Shower:** A soft, dispersed spray for general watering or rinsing.



Figure 4.1: Operating the spray gun to apply water, demonstrating a wide spray pattern.

4.4 Adjusting Soap/Water Flow

The quick-select dial located on top of the spray gun allows you to adjust the ratio of soap to water, or to use water only. Rotate the dial to select your desired setting:

-

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BS75HDZY>

More documents and user manuals: <https://manuals.plus/>