

[Manuals.plus](#) /

› [Pets Alive](#) /

› Pets Alive Hamstermania (Blue) by ZURU Hamster Instruction Manual

Pets Alive 9543A

Pets Alive Hamstermania (Blue) by ZURU Hamster Instruction Manual

1. INTRODUCTION AND OVERVIEW

Welcome to the world of Pets Alive Hamster Mania! This electronic pet hamster offers interactive play with realistic movements and sounds. Designed to scurry around, these hamsters can operate both independently and within their clear hamster ball, providing engaging entertainment.

- **Interactive Movement:** Hamster Mania pets can run both inside and outside of their included ball.
- **Authentic Sounds:** Experience over 20 adorable hamster sounds for a lifelike play experience.
- **Smart Navigation:** Equipped with smart technology, these hamsters can sense and react to obstacles like walls and doors.
- **Collect Them All:** There are multiple hamsters in the Hamster Mania series to collect.



Image 1: Blue Pets Alive Hamstermania hamster in its clear plastic ball packaging.

2. SETUP INSTRUCTIONS

2.1 Unboxing

Carefully remove the Hamster Mania toy from its packaging. The hamster is secured within a clear plastic ball. Gently separate the two halves of the ball to access the hamster.

2.2 Battery Installation

The Hamster Mania toy requires 2 AAA batteries (not included) for operation. To install the batteries:

1. Locate the battery compartment on the underside of the hamster.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image 2: Blue Pets Alive Hamstermania hamster out of its ball, showcasing its soft fur and compact design.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

To activate the hamster, locate the small button on its back (often indicated by a musical note or similar symbol). Press this button to turn the hamster on. Press it again to turn it off.

3.2 Independent Play

Once powered on, the hamster will begin to move and make sounds. Its wheels allow it to scurry across smooth surfaces. The hamster is equipped with sensors to detect obstacles, causing it to change direction when it encounters walls or other objects.

3.3 Hamster Ball Play

For play within the hamster ball:

1. Ensure the hamster is powered on.
2. Place the hamster inside one half of the clear plastic ball.
3. Carefully snap the second half of the ball into place, ensuring it is securely closed.
4. Place the assembled hamster ball on a flat surface and watch your hamster explore!



Image 3: A child holding a clear plastic hamster ball with a blue Pets Alive Hamstermania hamster inside, ready for play.

4. MAINTENANCE

4.1 Cleaning

To clean your Hamster Mania toy, gently wipe the surface with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

4.2 Battery Replacement

If the hamster's movements become sluggish or its sounds are faint, it is time to replace the batteries. Follow the battery installation steps in Section 2.2.

5. TROUBLESHOOTING

- Hamster is not moving or making sounds:

Ensure the batteries are correctly installed and are not depleted. Replace with fresh AAA batteries if necessary. Verify that the power button on the hamster's back has been pressed to the 'ON' position.

- **Hamster is getting stuck frequently:**

Ensure the play surface is flat and clear of obstructions. The hamster's sensors help it navigate, but excessive clutter may impede its movement.

- **Hamster ball is not closing securely:**

Check for any debris or misalignment between the two halves of the plastic ball. Ensure the hamster is positioned correctly inside before attempting to close.

6. SPECIFICATIONS

Brand Name	Pets Alive
Toy Figure Type	Stuffed Toy
Character	Hamster
Model Name	Series 1
Model Number	9543A
Unit Count	1.0 Count
Minimum Age	36 Months (3 Years)
Maximum Age	180 Months (15 Years)
Included Components	Hamster Toy
Item Dimensions (L x W x H)	4.53"L x 4.53"W x 4.53"H
Item Weight	0.2 Pounds
Color	Blue
Material Type	Plastic
Battery Type	2 AAA batteries (not included)



Image 4: Four Pets Alive Hamstermania hamsters in different colors: blue, purple, pink, and orange, highlighting the variety available.

7. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official ZURU website. Keep your purchase receipt as proof of purchase.