

Morris 72234

Morris Products LED Kitchen Ceiling Light Fixture User Manual

Model: 72234

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your Morris Products LED Kitchen Ceiling Light Fixture. This flush mount fixture features a satin nickel finish, two light bands, and provides 4000K color temperature illumination. Designed for various indoor spaces, it offers efficient and bright lighting.



Figure 1: Morris Products LED Kitchen Ceiling Light Fixture, Satin Nickel, Flush Mount.

This image displays the Morris Products LED Kitchen Ceiling Light Fixture. It is a round, flush-mount fixture with a satin nickel finish. The design features two concentric bands of satin nickel surrounding a central white diffuser, which emits the LED light. Small decorative fasteners are visible on the outer band. The overall appearance is modern and clean, suitable for various interior decors.

2. SAFETY INFORMATION

Please read all instructions carefully before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be hazardous or even fatal. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

- **WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installing or servicing.
- **WARNING:** Risk of fire. Use only with specified wattage and voltage (120 Volts, 32 Watts).
- Do not alter or modify the fixture.
- Ensure all electrical connections are secure and comply with local codes and ordinances.
- This fixture is designed for indoor use only. Do not expose to water or excessive moisture.
- Handle with care to avoid damage to LED components.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Morris Products LED Kitchen Ceiling Light Fixture (1 unit)
- Mounting Hardware (screws, wire nuts, etc.)
- Installation Guide (this manual)

4. SPECIFICATIONS

Feature	Detail
Model Number	72234
Brand	Morris Products
Type	LED Ceiling Light Fixture, Flush Mount
Wattage	32 Watts
Voltage	120 Volts
Color Temperature	4000K (Bright White)
Finish	Satin Nickel, Brushed
Material	Nickel
Dimensions (Approx.)	16 inches (Diameter)
Item Weight	4.24 pounds
Control Method	App (Dimmable)
Certifications	cETL, ETL

5. INSTALLATION INSTRUCTIONS (SETUP)

Tools Required: Phillips screwdriver, wire strippers, electrical tape, safety glasses, ladder.

1. **Turn Off Power:** Before starting, ensure the power to the junction box is turned off at the circuit breaker or fuse box. Verify with a voltage tester.
2. **Prepare Wiring:** If replacing an existing fixture, carefully remove it. Pull the supply wires from the junction box.
3. **Attach Mounting Bracket:** Secure the fixture's mounting bracket to the junction box using the provided screws. Ensure it is firmly attached and level.
4. **Make Electrical Connections:**
 - Connect the **black** wire from the fixture to the **black** (hot) supply wire using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (neutral) supply wire using a wire nut.
 - Connect the **green** or bare copper ground wire from the fixture to the **green** or bare copper ground wire from the supply using a wire nut. If no ground wire is present in the junction box, connect to the metal junction box itself if it is grounded.
 - Ensure all wire nuts are securely tightened and connections are wrapped with electrical tape for added safety.
5. **Mount Fixture:** Carefully push the connected wires into the junction box. Align the fixture with the mounting bracket and secure it using the provided screws or twist-lock mechanism. Ensure the fixture is flush against the ceiling.
6. **Restore Power:** Once the fixture is securely mounted, turn the power back on at the circuit breaker. Test the light fixture.

6. OPERATING INSTRUCTIONS

The Morris Products LED Kitchen Ceiling Light Fixture is designed for simple operation.

- **Standard Operation:** Control the light using a standard wall switch connected to the fixture's circuit. Flip the switch to turn the light on or off.
- **Dimmable Functionality:** This fixture is dimmable. To utilize the dimming feature, ensure you have installed a compatible LED dimmer switch (sold separately) in place of a standard wall switch. Follow the dimmer switch manufacturer's instructions for installation and operation.
- **App Control:** The product specifications indicate "App" as a control method. For app control functionality, please refer to any additional documentation or QR codes provided with the product packaging, or visit the Morris Products website for specific app pairing instructions. This typically involves connecting the fixture to a smart home hub or directly to a smartphone app via Wi-Fi or Bluetooth.

7. MAINTENANCE

This LED fixture requires minimal maintenance due to its long-lasting LED components.

- **Cleaning:** To clean the fixture, ensure the power is turned off at the circuit breaker. Use a soft, dry, or slightly damp cloth to wipe down the exterior surfaces. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or electrical components.
- **LED Replacement:** The LED components are integrated and not designed for user replacement. If the LEDs fail, the entire fixture typically needs to be replaced.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose wiring, or wear. If any issues are found, disconnect power and consult a qualified electrician.

8. TROUBLESHOOTING

If you experience issues with your Morris Products LED Ceiling Light Fixture, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture; loose wiring; faulty switch; faulty fixture.	Check circuit breaker/fuse. Ensure all wire connections are secure. Test the wall switch. If issues persist, consult a qualified electrician or contact customer support.
Light flickers or dims unexpectedly.	Incompatible dimmer switch; loose wiring; voltage fluctuations.	Ensure a compatible LED dimmer switch is used. Check all electrical connections. Consult an electrician if voltage issues are suspected.
Light is not as bright as expected.	Dimmer setting too low; incorrect voltage; fixture defect.	Adjust dimmer to maximum brightness. Verify correct voltage supply. Contact customer support if brightness remains low.
App control not working.	Fixture not paired; Wi-Fi connectivity issues; app malfunction.	Refer to app pairing instructions. Check Wi-Fi signal strength. Reinstall the app or contact Morris Products support for app-specific troubleshooting.

9. WARRANTY AND SUPPORT

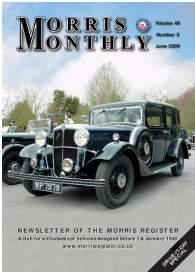

Warranty: The product specifications indicate "Warranty Description: N/a." Please refer to your point of purchase or the official Morris Products website for the most current warranty information, as policies may vary.

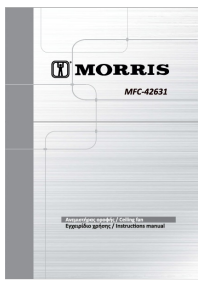
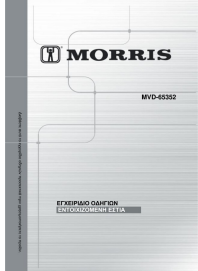
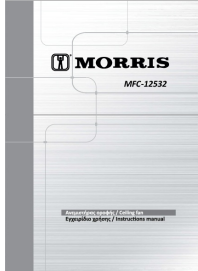
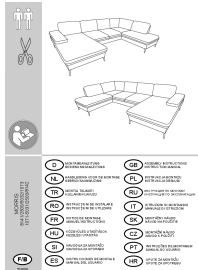
Customer Support: For technical assistance, replacement parts, or further inquiries, please contact Morris Products customer service. Visit their official website for contact details, including phone numbers and email addresses.

Morris Products Official Website: www.morrisproducts.com

© 2024 Morris Products. All rights reserved.
Information in this manual is subject to change without notice.

Related Documents - 72234

	<p>Morris Monthly - June 2009 - Morris Register Newsletter</p> <p>The June 2009 issue of Morris Monthly, the official newsletter of the Morris Register club, featuring club news, member stories, technical articles, and event reports for Morris vehicle enthusiasts.</p>
	<p>MORRIS 52" Ceiling Fan with LED Light Instructions Manual - MCF-16233, MCF-16234</p> <p>Comprehensive instructions manual for the MORRIS 52-inch ceiling fan with LED light (models MCF-16233 and MCF-16234). Includes safety precautions, detailed installation steps, remote control operation, fan direction settings, and pair setting instructions. Also covers recycling information and declaration of conformity.</p>

	<p>MORRIS MFC-42631 Ceiling Fan: User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the MORRIS MFC-42631 ceiling fan, covering safety instructions, assembly, operation, and maintenance.</p>
	<p>MORRIS MVD-65352 Built-in Ceramic Hob User Manual and Installation Guide</p> <p>This document provides comprehensive instructions for the MORRIS MVD-65352 built-in ceramic hob, including safety guidelines, technical specifications, installation procedures, operating instructions, cleaning and maintenance tips, and troubleshooting advice.</p>
	<p>MORRIS MFC-12532 Ceiling Fan User Manual and Installation Guide</p> <p>This document provides comprehensive instructions for the MORRIS MFC-12532 ceiling fan, covering essential safety guidelines, step-by-step assembly and installation, detailed operating instructions, WiFi connectivity setup via the Tuya Smart app, and important cleaning and maintenance advice.</p>
	<p>MORRIS Sectional Sofa Assembly Instructions - Model 8141/2500/5032/1073</p> <p>Detailed assembly instructions for the MORRIS sectional sofa (models 8141/2500/5032/1073, 1071-5031/2500/8142, 231005). This guide provides step-by-step instructions, component identification, hardware details, and operation of the sofa bed feature. Ensure correct assembly for optimal comfort and durability.</p>