

E3W, E3, US2-E3-01F, D5W, S6W, X760+W

Generic Replacement Remote Control Instruction Manual

For EUG Projector Models: E3W, E3, US2-E3-01F, D5W, S6W, X760+W

1. INTRODUCTION

This manual provides instructions for the Generic replacement remote control, designed for seamless compatibility with various EUG projector models including E3W, E3, US2-E3-01F, D5W, S6W, and X760+W. This remote control is pre-programmed and requires no additional setup or coding. Simply insert batteries, and it is ready for use.

Package Contents:

- 1 x Generic Replacement Remote Control

Note: Batteries and a detailed instruction booklet for the projector are not included.

2. SETUP: BATTERY INSTALLATION

To begin using your remote control, you must first install two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two new AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, revealing the two AAA battery slots.

Once batteries are installed, the remote is ready for immediate use with your compatible EUG projector.

3. OPERATING INSTRUCTIONS

This remote control provides standard functions for operating your compatible EUG projector. Ensure there is a clear line of sight between the remote control and the projector's infrared (IR) receiver.



Image: Front view of the remote control, displaying its button layout.

Common Functions:

- **Power Button:** Turns the projector On or Off.
- **Navigation Buttons (Up, Down, Left, Right):** Used to navigate through menus and selections.
- **OK/Enter Button:** Confirms selections or enters menus.
- **Volume Up/Down:** Adjusts the audio output level.
- **Source/Input Button:** Cycles through available input sources (e.g., HDMI, USB, AV).
- **Menu Button:** Accesses the projector's main settings menu.
- **Back/Exit Button:** Returns to the previous screen or exits a menu.

Refer to your EUG projector's original instruction manual for specific functions and menu navigation details.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or if it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to extreme temperatures, direct sunlight, moisture, or impact.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

1. Remote Not Responding:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the projector's IR receiver.
- Make sure you are within the effective operating range (up to 10 meters).

2. Intermittent Operation:

- This could indicate low battery power. Replace batteries.
- Ensure the remote's IR emitter is clean and not obstructed.

3. Specific Button Not Working:

- Gently press the button multiple times. If it remains unresponsive, the button may be faulty.

If the issue persists after trying these steps, the remote control may be defective. Please refer to the warranty information.

6. SPECIFICATIONS

Brand	Generic
Compatibility	EUG E3W, E3, US2-E3-01F, D5W, S6W, X760+W Projectors
Special Feature	No additional programming required
Max Number of Supported Devices	1
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	2 x AAA batteries (not included)

7. WARRANTY INFORMATION

This Generic replacement remote control comes with a **90-day quality warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product is free from defects in material and workmanship under normal use.

The warranty does not cover damage caused by:

- Accident, misuse, abuse, neglect, or improper installation.
- Unauthorized repairs or modifications.
- Battery leakage or incorrect battery installation.
- Normal wear and tear.

For warranty claims, please contact your retailer or the point of purchase. Proof of purchase may be required.

8. SUPPORT

For further assistance or inquiries regarding this replacement remote control, please contact the seller or retailer from whom you purchased the product. They can provide specific support related to your purchase. For operational details of your EUG projector, please refer to the original instruction manual provided with your projector.