

VECELO KHD-TV01-GRY-160-BC07

VECELO Industrial TV Stand User Manual

Model: KHD-TV01-GRY-160-BC07 | Brand: VECELO

1. INTRODUCTION

The VECELO Industrial TV Stand is designed to complement your living space with its chic vintage style and practical structure. Featuring a robust metal frame and quality particleboard shelves, this entertainment center offers ample storage and a stable platform for your television and media devices. Its versatile design makes it suitable for various rooms, including living rooms, bedrooms, and offices.

2. PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- 1 x TV Stand (disassembled components)
- 1 x Tool Kit (including screwdriver)
- 1 x Instructions Manual

3. SPECIFICATIONS

| Feature                      | Detail                                      |
|------------------------------|---------------------------------------------|
| Color                        | Grey                                        |
| Material                     | Engineered Wood, Metal                      |
| Dimensions (L x W x H)       | 62.99 x 15.74 x 16.22 inches                |
| Item Weight                  | 35.3 pounds                                 |
| Tabletop Weight Capacity     | Up to 180 lbs                               |
| Open Shelves Weight Capacity | Up to 65 lbs per shelf                      |
| Number of Shelves            | 3 (1 main tabletop, 2 open storage shelves) |
| Special Feature              | Adjustable Feet                             |

|                    |                 |
|--------------------|-----------------|
| Compatible TV Size | Up to 70 inches |
|--------------------|-----------------|

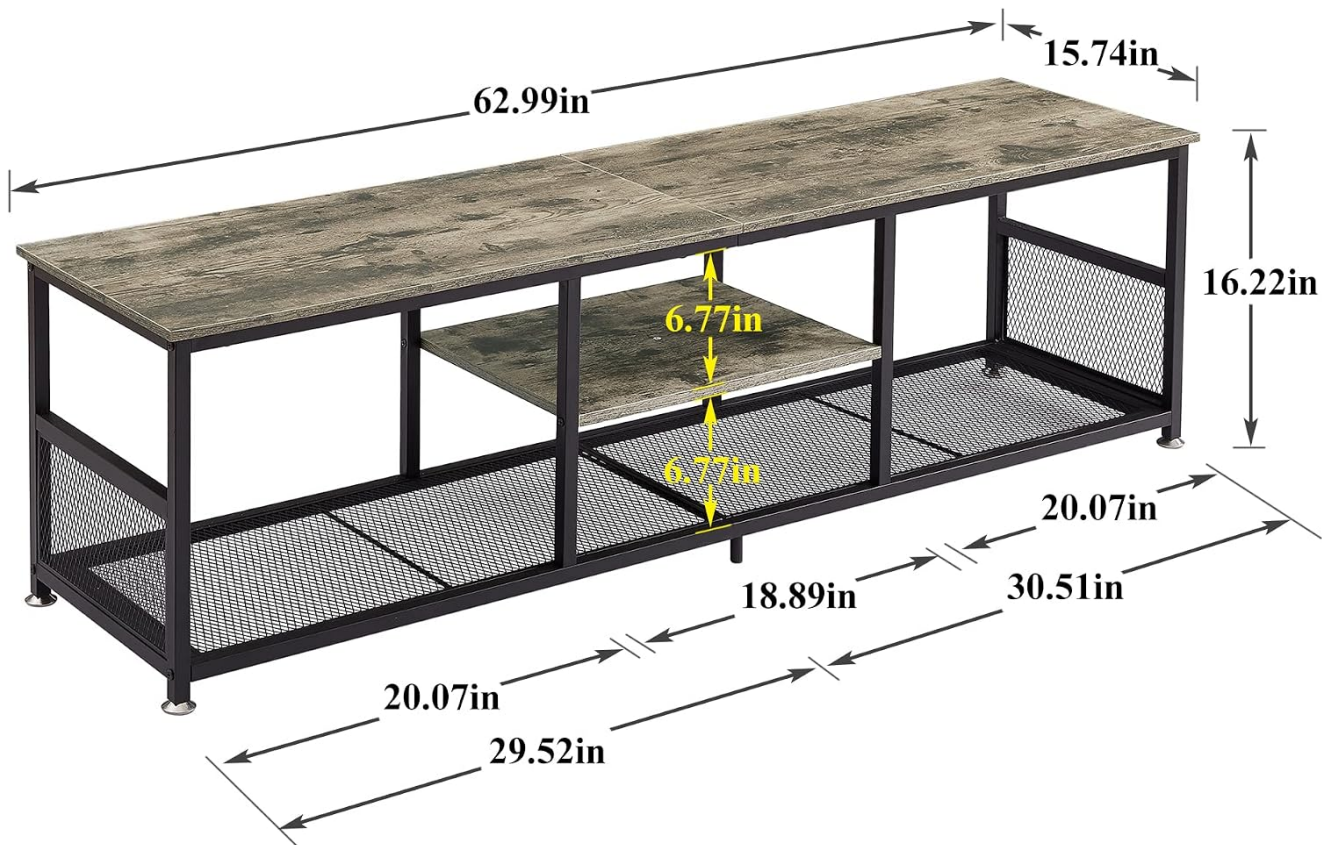


Figure 1: Product Dimensions and TV Compatibility. The stand measures 62.99 inches in length, 15.74 inches in width, and 16.22 inches in height. It can accommodate televisions up to 70 inches.

## 4. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Ensure all parts and screws are firmly attached before placing items on the stand.
- Do not exceed the maximum weight capacities for the tabletop (180 lbs) and open shelves (65 lbs per shelf).
- Place the TV stand on a flat, stable, and level surface to prevent tipping. The adjustable feet can help stabilize on uneven floors.
- Keep small parts and packaging materials away from children and pets to prevent choking hazards.
- Do not stand or climb on the TV stand.
- Avoid exposing the product to direct sunlight or extreme temperatures.

## 5. ASSEMBLY INSTRUCTIONS

Assembly is straightforward and typically takes about 30 minutes. All parts are clearly labeled, and a tool kit is included. Follow the step-by-step instructions below.

### Assembly Overview Video

Your browser does not support the video tag.

Video: Official VECELO TV Stand Assembly and Overview. This video provides a visual guide to the assembly process and highlights key features of the TV stand.

### Step-by-Step Guide

### Step 1: Attach Adjustable Feet to Side Frames

Begin by attaching the adjustable feet (F) to the bottom of the two side frames (4). Ensure they are securely tightened.



Figure 2: Securely fasten the adjustable feet.

### Step 2: Connect Long Metal Bars

Connect the two long metal bars (5 and 6) using the provided connectors and screws (C). This forms the main horizontal support for the stand.



Figure 3: Join the horizontal support bars.

### Step 3: Assemble Mesh Shelves

Connect the two mesh shelves (8) using the provided connectors and screws (C, E). This forms the bottom storage area.



Figure 4: Assemble the mesh base.

#### Step 4: Attach Side Frames to Mesh Base

Attach the side frames (4) to the assembled mesh base (8) using screws (A). Ensure the feet are facing downwards.



Figure 5: Secure the side supports to the base.

### Step 5: Install Vertical Supports

Install the vertical support bars (7) between the long horizontal bars (5, 6) and the mesh base (8) using screws (A). These supports create the compartments for the middle shelves.

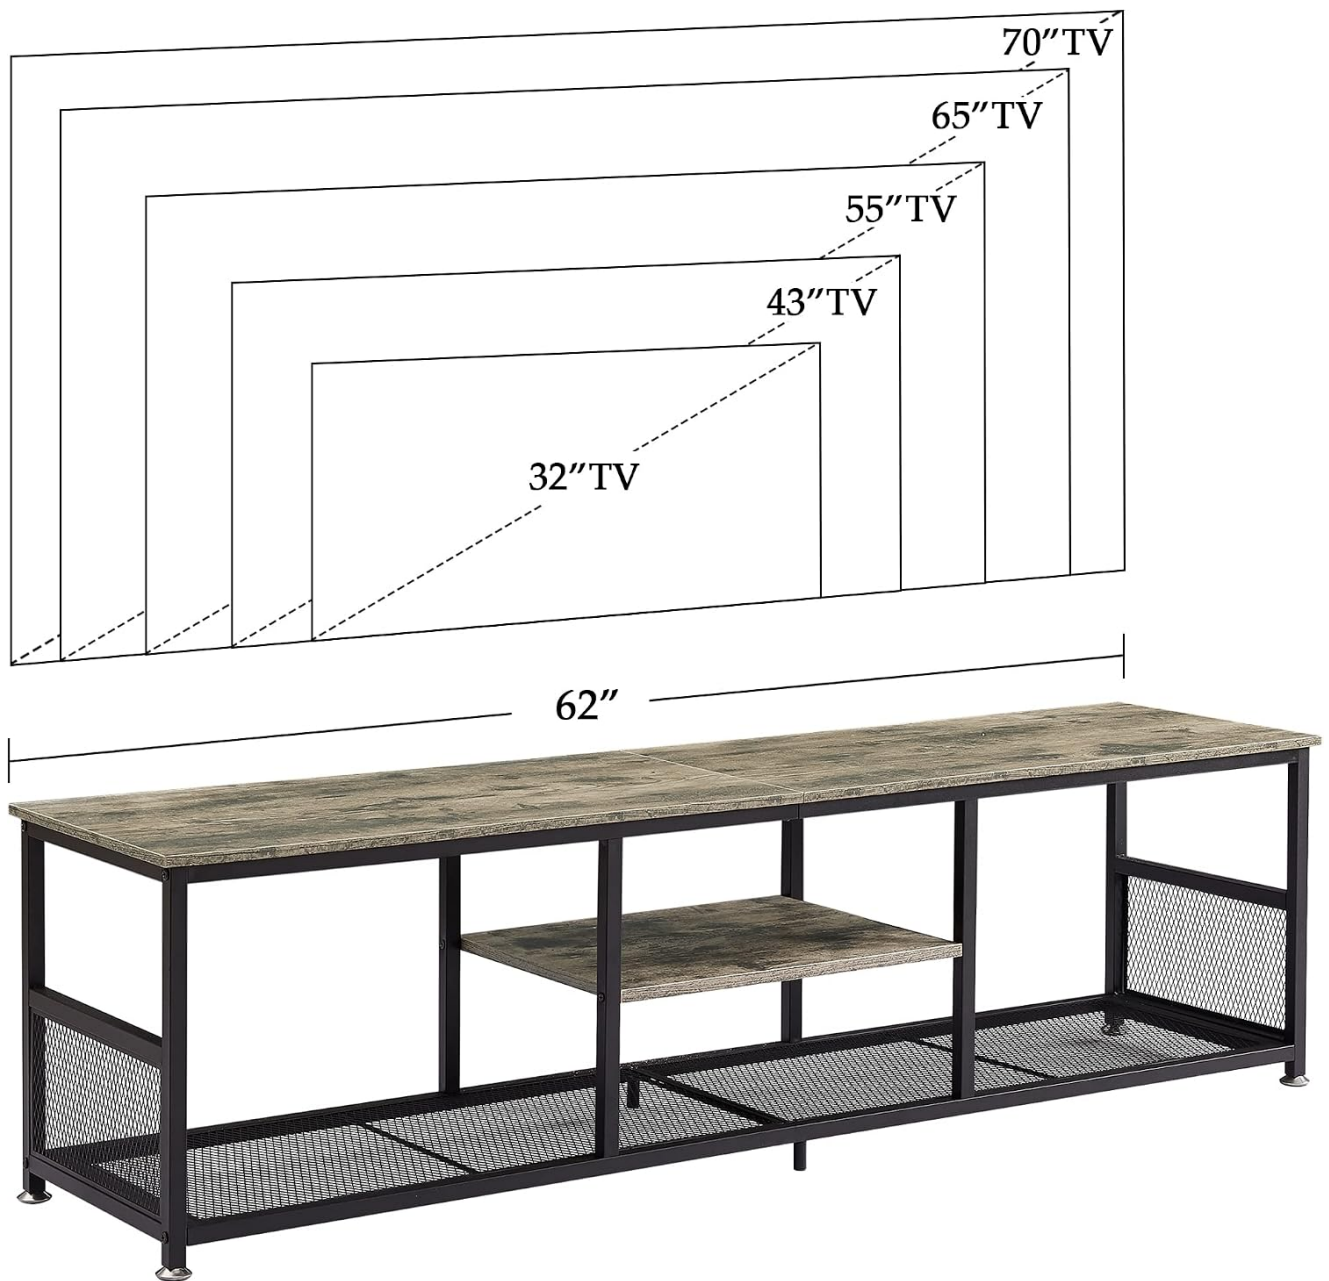


Figure 6: Place the internal vertical supports.

### Step 6: Place Middle Shelves

Place the two middle shelves (2, 3) into their designated slots within the frame. Secure them with screws (B).



Figure 7: Insert and secure the middle shelves.

### Step 7: Attach Top Panels

Finally, place the top panels (1) onto the frame and secure them using screws (B). Ensure all screws are tightened for stability.



Figure 8: Complete the assembly by attaching the top panels.

## 6. OPERATING INSTRUCTIONS (USAGE TIPS)

- **Placement:** Position the TV stand in your desired location, ensuring it is on a flat and stable surface. Adjust the feet as needed to eliminate any wobbling.
- **TV Placement:** Carefully place your television on the top surface, ensuring it is centered and stable. The stand is designed to support TVs up to 70 inches.
- **Organizing Media:** Utilize the two tiers of open storage shelves for your DVDs, gaming consoles, sound systems, remote controls, magazines, or other decorative items.
- **Cable Management:** While not explicitly designed with cable management features, the open back design allows for easy routing of cables behind the shelves to maintain a tidy appearance.



Figure 9: Example of TV stand in use, showcasing storage capabilities.

## 7. MAINTENANCE AND CARE

- **Cleaning:** Wipe the surfaces with a dry cloth to remove dust and debris. For tougher spots, a slightly damp cloth can be used, followed immediately by a dry cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals, as they may damage the finish of the wood or metal.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Protect Surfaces:** Use coasters or protective pads under items that might scratch or stain the tabletop.

## 8. TROUBLESHOOTING

- **Wobbling Stand:** If the TV stand wobbles, ensure it is placed on a level surface. Adjust the individual adjustable feet at the bottom until the stand is stable. Check that all assembly screws are securely tightened.
- **Missing Parts:** If any parts are missing from the package, refer to the "Package Contents" section and contact VECELO customer service for assistance.
- **Difficulty Assembling:** Review the assembly instructions and diagrams carefully. Ensure you are using the correct screws and parts for each step. If issues persist, refer to the assembly video or contact customer support.

## 9. WARRANTY AND SUPPORT

VECELO is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase. For any questions, concerns, or assistance with your VECELO Industrial TV Stand, please contact our customer service team. We are here to help.

You can find contact information on the VECELO official website or through your original point of purchase.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0BSF6L6B7>

More documents and user manuals: <https://manuals.plus/>