

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ufesa](#) /

› [Ufesa Monza Compact Digital Espresso and Cappuccino Machine User Manual](#)

Ufesa 71705461

Ufesa Monza Compact Digital Espresso and Cappuccino Machine User Manual

Model: 71705461

INTRODUCTION

Thank you for choosing the Ufesa Monza Compact Digital Espresso and Cappuccino Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the machine, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Use only original accessories and spare parts.
- Do not operate the machine if the power cord or plug is damaged. Contact authorized service personnel.
- Avoid contact with hot surfaces, especially the steam nozzle and cup warmer.
- Ensure the water tank is filled to the appropriate level before operation.
- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Ufesa Monza Espresso Machine.



Image: Front view of the Ufesa Monza Compact Digital Espresso Machine, showing the control panel, portafilter, and drip tray.

1. Control Panel with Digital Touch Screen and LED indicators
2. Cup Warmer Tray
3. Water Tank (1.5L capacity, removable)
4. Steam Nozzle / Milk Frother
5. Portafilter Handle
6. Drip Tray (removable)
7. Steam Control Knob
8. Measuring Spoon with Tamper



Image: Top-rear view of the Ufesa Monza Compact Digital Espresso Machine, highlighting the removable 1.5L water tank with its lid open.

Control Panel Overview

The digital touch screen provides intuitive control over the machine's functions.



Image: A hand interacting with the digital touch screen of the Ufesa Monza Compact Digital Espresso Machine, showing the various function buttons.

SETUP

- 1. Unpacking:** Carefully remove all packaging materials. Ensure all components are present and undamaged.
- 2. Initial Cleaning:** Before first use, wash the water tank, portafilter, filters, and drip tray with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
- 3. Positioning:** Place the machine on a stable, flat, heat-resistant surface, away from water sources and heat. Ensure adequate ventilation around the unit.
- 4. Fill Water Tank:** Remove the water tank, fill it with fresh, cold water up to the MAX level, and place it back securely.
- 5. First Use (Priming):**
 - Plug the machine into a grounded power outlet.
 - Press the power button to turn on the machine. The indicator lights will flash as the machine heats up.
 - Once the lights are solid, place a cup under the portafilter.

- Press the single espresso button to run water through the system without coffee. Repeat this process 2-3 times to clean and prime the internal components.
- Turn the steam control knob to release steam for a few seconds to prime the steam wand.

OPERATING INSTRUCTIONS

Making Espresso with Ground Coffee

1. **Prepare the Portafilter:** Insert the desired filter (for 1 or 2 cups) into the portafilter.
2. **Add Ground Coffee:** Fill the filter with finely ground espresso coffee. Use the measuring spoon to add the correct amount (approx. 7g for single, 14g for double).
3. **Tamp the Coffee:** Use the tamper to press the coffee firmly and evenly. Wipe any excess coffee from the rim.
4. **Attach Portafilter:** Insert the portafilter into the brewing head and turn it firmly to the right until it is securely locked.
5. **Place Cup(s):** Position one or two pre-warmed cups on the drip tray under the portafilter spouts. The cup warmer on top of the machine can be used to pre-warm cups.
6. **Brew Espresso:** Once the machine is heated (indicator lights solid), press the single or double espresso button on the digital touch screen. The machine will dispense the coffee and stop automatically.
7. **Remove Portafilter:** After brewing, carefully remove the portafilter by turning it to the left. Dispose of the used coffee grounds.



Image: The Ufesa Monza Compact Digital Espresso Machine actively brewing espresso into a glass cup, showcasing the coffee extraction process.

Using ESE Pods

The machine is compatible with ESE (Easy Serving Espresso) single-dose pods.

1. Insert the special ESE pod filter into the portafilter.
2. Place one ESE pod into the filter. Do not tamp.
3. Attach the portafilter to the brewing head.
4. Place a cup under the spout and press the single espresso button.

Using the Steam Nozzle (Milk Frothing)

1. **Prepare for Steam:** Ensure the water tank is filled. Press the steam button on the control panel. The steam indicator light will flash and then become solid when the machine reaches steaming temperature.
2. **Prepare Milk:** Fill a metal frothing pitcher with cold milk (dairy or non-dairy) to about one-third full.
3. **Froth Milk:** Position the steam nozzle just below the surface of the milk. Slowly turn the steam control knob to

release steam. Move the pitcher up and down to create foam. Once desired foam and temperature are reached, turn off the steam knob.

4. **Clean Nozzle:** Immediately after frothing, wipe the steam nozzle with a damp cloth to remove any milk residue. Briefly open the steam knob again to clear any milk from inside the nozzle.



Image: The Ufesa Monza Compact Digital Espresso Machine with a hand frothing milk using the adjustable steam wand, preparing for a cappuccino.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your machine.

• Daily Cleaning:

- Empty and clean the drip tray and grid after each use.
- Remove and clean the portafilter and filter basket. Rinse thoroughly.
- Wipe the exterior of the machine with a damp cloth.
- Clean the steam nozzle immediately after use to prevent milk residue buildup.

- **Water Tank:** Empty and rinse the water tank daily. Refill with fresh water.
- **Descaling:** Depending on water hardness and frequency of use, descaling should be performed every 2-3 months.
 - Use a commercial descaling solution suitable for espresso machines.
 - Follow the descaling solution manufacturer's instructions carefully.
 - Run several cycles of clean water through the machine after descaling to rinse thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee dispenses.	No water in tank; machine not primed; clogged filter.	Fill water tank; perform priming cycle; clean filter and portafilter.
Coffee flows too slowly.	Coffee ground too fine; too much coffee; coffee tamped too hard; clogged filter.	Use coarser grind; reduce coffee amount; tamp lighter; clean filter.
Coffee flows too quickly.	Coffee ground too coarse; too little coffee; coffee not tamped enough.	Use finer grind; increase coffee amount; tamp firmer.
No steam from nozzle.	Machine not at steam temperature; nozzle clogged.	Wait for steam indicator light to be solid; clean steam nozzle.
Water leaks from machine.	Water tank not seated correctly; drip tray full; portafilter not secured.	Reseat water tank; empty drip tray; secure portafilter firmly.

SPECIFICATIONS

Brand: Ufesa

Model Number: 71705461

Product Dimensions (L x W x H): 30.5 x 31.8 x 25 cm

Item Weight: 3 Kilograms

Capacity: 1.5 Liters (Water Tank)

Power: 1050 Watts

Voltage: 220 Volts

Pressure: 20 Bars

Material: Stainless Steel

Special Features: Cup Warmer, Suitable for Ground Coffee or ESE Pods, Milk Frother, Removable Water Tank, Automatic Stop Function, Digital Touch Screen

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Ufesa website. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, contact Ufesa customer service through their official channels.

