

[Manuals.plus](#) /

› [Epson](#) /

› Epson 552 EcoTank Ink Instruction Manual

Epson 552 EcoTank Ink

Epson 552 EcoTank Ink Instruction Manual

ULTRA-HIGH CAPACITY BOTTLE FIVE COLOR COMBO PACK & PHOTO BLACK

Product Overview

The Epson 552 EcoTank Ink set is designed for use with Epson EcoTank Photo ET-8500 and ET-8550 supertank printers. This high-capacity 6-color ink set features Claria ET Premium Inks, engineered to deliver smooth gradations and accurate color reproductions for stunning photo prints. The combo pack includes dye-based Cyan, Magenta, Yellow, Gray, and Photo Black inks, along with a pigment Black ink bottle for crisp, sharp text documents. Each bottle contains 70 mL of ink, providing a high page yield and reducing the frequency of refills.

- **Amazing Image Quality:** Claria ET Premium Ink provides smooth gradations and accurate color reproductions.
- **High-Capacity EcoFit Bottles:** 70 mL bottles are uniquely keyed for easy and mess-free filling.
- **Compatible Printers:** Specifically designed for EcoTank Photo ET-8500 and ET-8550 printers.
- **Genuine Ink Recommendation:** Epson strongly recommends using genuine ink for optimal print quality and performance.
- **Crisp Text:** Includes pigment Black ink for sharp text output.

Package Contents

Your Epson 552 EcoTank Ink Combo Pack includes the following:

- 1 x 70 mL Cyan (C) EcoTank Ink Bottle (T552220-S)
- 1 x 70 mL Magenta (M) EcoTank Ink Bottle (T552320-S)
- 1 x 70 mL Yellow (Y) EcoTank Ink Bottle (T552420-S)
- 1 x 70 mL Gray (GY) EcoTank Ink Bottle (T552520-S)
- 1 x 70 mL Photo Black (PB) EcoTank Ink Bottle (T552620-S)
- 1 x 70 mL Photo Black (T552120-S) EcoTank Ink Bottle

Please note that the standard pigment Black (BK) ink is sold separately and is not included in this combo pack. Only Photo Black (PB) is included in the multi-pack.



Epson 552 EcoTank Ink Combo Pack showing Cyan, Magenta, Yellow, Gray, and Photo Black bottles.



Epson 552 EcoTank Photo Black Ink Bottle (T552120-S).

Setup: Ink Filling

The Epson EcoTank system is designed for easy and mess-free ink refilling. Follow these steps to fill your printer's ink tanks:

1. Open the ink tank unit cover on your Epson EcoTank printer.
2. Identify the correct color tank for the ink bottle you are using. Each EcoFit bottle is uniquely keyed to fit only its corresponding color tank, preventing accidental misfilling.
3. Unscrew the cap from the ink bottle. Do not squeeze the bottle.
4. Insert the bottle into the correct ink tank. The ink will flow automatically into the tank. The bottle is designed to stop filling once the tank is full.
5. Once the ink stops flowing, remove the bottle and securely close the ink tank cap.
6. Repeat for all other colors as needed.

Important: Do not squeeze the ink bottle during refilling. The ink is designed to flow on its own. Store any leftover

ink in its original box for future use.

Video: Detailed guide on how to fill the ink tanks of the Epson ET-8550 printer and complete the initialization process.

Video: Unboxing and overview of the Epson EcoTank ET-8550 Inkjet Printer, showcasing its features and components.

Operating

These Epson 552 EcoTank inks are specifically formulated to work seamlessly with Epson EcoTank Photo ET-8500 and ET-8550 printers. For optimal printing results, ensure your printer's firmware is up to date and use genuine Epson paper types appropriate for your printing needs (e.g., photo paper for photo prints, plain paper for documents).

Video: Guide on how to set up the Epson ET-8550 printer's Wi-Fi connection using a phone or computer, and how to print a test page.

Maintenance

To maintain the longevity and performance of your Epson EcoTank printer and the quality of your prints, always use genuine Epson ink. Store unused ink bottles in a cool, dark place, ideally in their original packaging, to prevent degradation. Regularly perform printer maintenance tasks as recommended in your printer's user manual, such as print head cleaning and nozzle checks, to ensure consistent output quality.

Troubleshooting

If you encounter any issues with print quality (e.g., streaking, faded colors, incorrect colors) or ink flow, first ensure that the ink tanks are filled correctly and that you are using genuine Epson ink. For more detailed troubleshooting steps, refer to your specific Epson EcoTank printer's user manual or visit the official Epson support website. Common issues like clogged nozzles can often be resolved through the printer's built-in maintenance utilities.

Specifications

Brand	Epson
Model	552 EcoTank Ink
Ink Color	Cyan, Magenta, Yellow, Gray, Photo Black, Black (Pigment)
Bottle Capacity	70 mL per bottle
Compatible Devices	Epson EcoTank Photo ET-8500, ET-8550 Printers
Page Yield	Up to 4667 pages (estimated)
Number of Items	2 (Combo Pack + Photo Black)

Warranty and Support

For information regarding product warranty, technical support, or service, please refer to the documentation included with your Epson EcoTank printer or visit the official Epson support website. Using genuine Epson ink is crucial for maintaining your printer's warranty and ensuring optimal performance and print quality.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0BSFRWC5L>

More documents and user manuals: <https://manuals.plus/>