

CREATE A-4879

CREATE WIND CLEAR Ceiling Fan User Manual

Model: A-4879

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Ensure the power supply is disconnected before installation, maintenance, or cleaning.
- **Mounting:** The ceiling fan must be securely mounted to a structure capable of supporting its weight (approximately 8.8 kg). Do not mount on plasterboard or similar weak materials without proper reinforcement.
- **Blade Clearance:** Ensure there is adequate clearance between the fan blades and any obstacles (walls, furniture) to prevent injury or damage.
- **Children and Pets:** Keep children and pets away from the fan during operation. Do not allow them to play with the fan or its controls.
- **Cleaning:** Always disconnect power before cleaning. Use a soft, damp cloth. Do not use abrasive cleaners or solvents.

2. PACKAGE CONTENTS


Verify that all components are present before beginning installation:

- Ceiling Fan Unit (with integrated LED light and retractable blades)
- Remote Control
- Mounting Bracket and Hardware
- User Manual

3. PRODUCT OVERVIEW

The CREATE WIND CLEAR ceiling fan is designed for efficient air circulation and lighting in small to medium-sized rooms. It features a silent 40W brushless DC motor, retractable ABS blades, and an integrated LED light with adjustable color temperatures. Control is available via remote control and a Wi-Fi

enabled smartphone application.

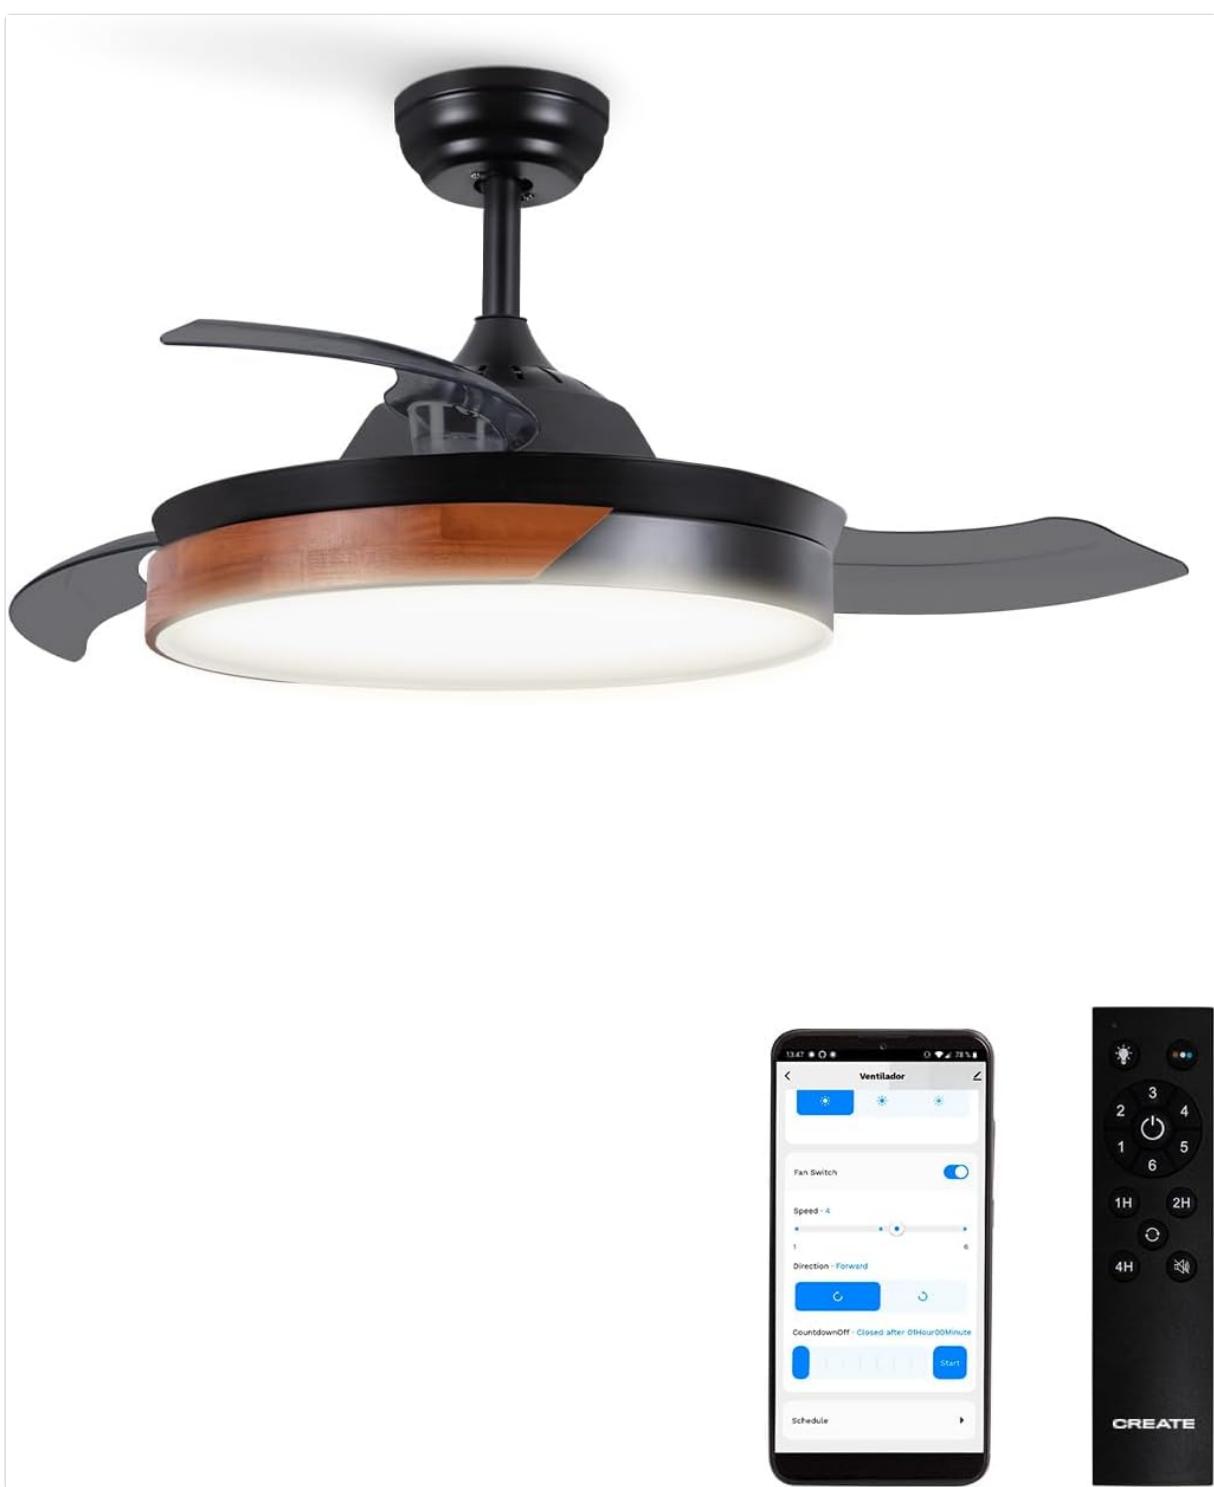

The CREATE WIND CLEAR ceiling fan with its remote control and smartphone app interface, showcasing its modern design and control options.



The CREATE WIND CLEAR ceiling fan with its blades retracted, appearing as a sleek, modern light fixture when not in use for air circulation.



The CREATE WIND CLEAR ceiling fan with its blades extended, ready to provide efficient air movement.

4. INSTALLATION

Professional installation by a qualified electrician is strongly recommended.

- 1. Power Disconnection:** Ensure the main power supply to the installation area is turned off at the circuit breaker.
- 2. Mounting Bracket:** Securely attach the mounting bracket to a ceiling joist or a suitable electrical junction box rated for fan support. Use appropriate screws and anchors.
- 3. Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the separate installation guide (not included in this manual). Ensure all connections are secure and insulated.
- 4. Attach Fan Unit:** Carefully lift the fan unit and attach it to the mounting bracket. Ensure all safety clips and screws are engaged.
- 5. Canopy Installation:** Slide the canopy up to cover the wiring and mounting bracket, securing it in place.
- 6. Power Restoration:** Once installation is complete, restore power and test the fan's functions.



The CREATE WIND CLEAR ceiling fan installed in a room, demonstrating its aesthetic integration into a living space.



A close-up view of the retractable blades of the CREATE WIND CLEAR ceiling fan, highlighting their design and functionality.

5. OPERATION

5.1 Remote Control

The included remote control allows full functionality of the fan and light. Ensure batteries are correctly

inserted.

- **Power Button:** Turns the fan and light on/off.
- **Fan Speed Buttons (1-6):** Adjusts the fan speed from low (1) to high (6).
- **Light On/Off:** Controls the integrated LED light.
- **Light Color Temperature:** Cycles through warm white, neutral white, and cool white light settings.
- **Timer Buttons (1H, 2H, 4H, 8H):** Sets the fan to automatically turn off after the selected duration.
- **Summer/Winter Mode:** Toggles the direction of blade rotation.

5.2 Wi-Fi App Control

For advanced control and scheduling, download the CREATE smart home application (refer to the app's instructions for pairing). The app allows you to:

- Turn the fan and light on/off.
- Adjust fan speed and light color temperature.
- Set custom timers and schedules.
- Control the fan remotely from anywhere with an internet connection.

5.3 Summer/Winter Mode Function

This fan features a reversible motor for year-round comfort:


- **Summer Mode (Counter-clockwise rotation):** Creates a downward airflow, generating a cooling breeze.
- **Winter Mode (Clockwise rotation):** Creates an upward airflow, circulating warm air accumulated near the ceiling downwards, helping to distribute heat more evenly.



ENERG'

CREATE

120732_Kit de iluminacion LED 36W

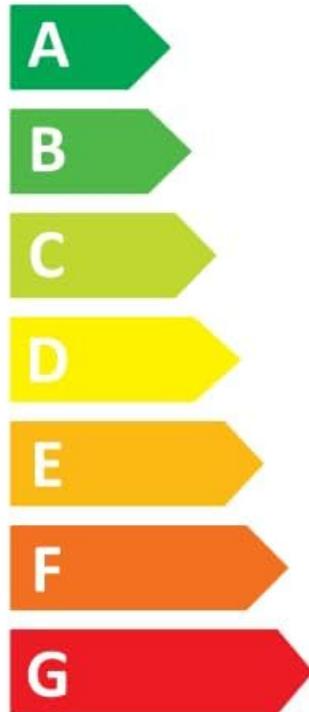

E

36
kWh/1000h



2019/2015

Diagram illustrating the summer mode operation, where the fan blades rotate counter-clockwise to create a direct downward airflow for a cooling effect.

Produktdatenblatt

Delegierte Verordnung (EU) Nr. 1254/2014

Name oder Warenzeichen des Lieferanten	CREATE
Modellkennung	120760 WIND CLEAR DC
Spezifischer Energieverbrauch (kaltes Klima)	70,0 kWh/(m² x a)
Klasse des spezifischen Energieverbrauchs (durchschnittliches Klima)	F
Spezifischer Energieverbrauch (durchschnittliches Klima)	34,7 kWh/(m² x a)
Spezifischer Energieverbrauch (warmes Klima)	12,0 kWh/(m² x a)
Typ	Zwei-Richtung-Lüftungsgerät (ZLG)
Art des Antriebs	Mehrstufenantrieb
Art des Wärmerückgewinnungssystems	Rekuperativ
Temperaturänderungsgrad der Wärmerückgewinnung	76,3 %
Höchster Luftvolumenstrom	9 000 m³/h
Elektrische Eingangsleistung des Ventilatorantriebs	98,0 W
Schallleistungspegel	45 dB
Bezugs-Luftvolumenstrom	3,500 m³/s
Bezugsdruckdifferenz	55 Pa
Spezifische Eingangsleistung	0,33 W/(m³/h)
Steuerungsfaktor	0,85
Steuerungstypologie	Zentrale Bedarfssteuerung – 0,85
Höchste innere Leckluftquoten	0,5 %
Höchste äußere Leckluftquoten	1,1 %
Lage der optischen Filterwarnanzeige	-
Beschreibung der optischen Filterwarnanzeige	-
URL für Anweisungen zur Vormontage/Zerlegung	https://www.create-store.com/es/comprar-ventiladores-de-techo-aspas-retractiles/120760-wind-clear-ventilador-de-techo-40w-silencioso-o107-cm.html
Druckschwankungsempfindlichkeit des Luftstroms bei +20 Pa und -20 Pa	- %
Luftdichtheit zwischen innen und außen	1,0 m³/h
Jahressstromverbrauch	344,0 kWh Elektrizität/a
Jährliche Einsparung an Heizenergie bei kaltem Klima	1 926,0 kWh Primärenergie/a
Jährliche Einsparung an Heizenergie bei durchschnittlichem Klima	4 259,0 kWh Primärenergie/a
Jährliche Einsparung an Heizenergie bei warmem Klima	8 331,0 kWh Primärenergie/a

CREATE

Seite 1 / 1


Diagram illustrating the winter mode operation, where the fan blades rotate clockwise to gently circulate warm air from the ceiling downwards.

5.4 Light Functions

The integrated LED light offers three distinct color temperatures to suit your preference and environment:

- **Warm White:** For a cozy and relaxing ambiance.

- **Neutral White:** Balanced light suitable for general tasks.
- **Cool White:** Bright, invigorating light for focused activities.

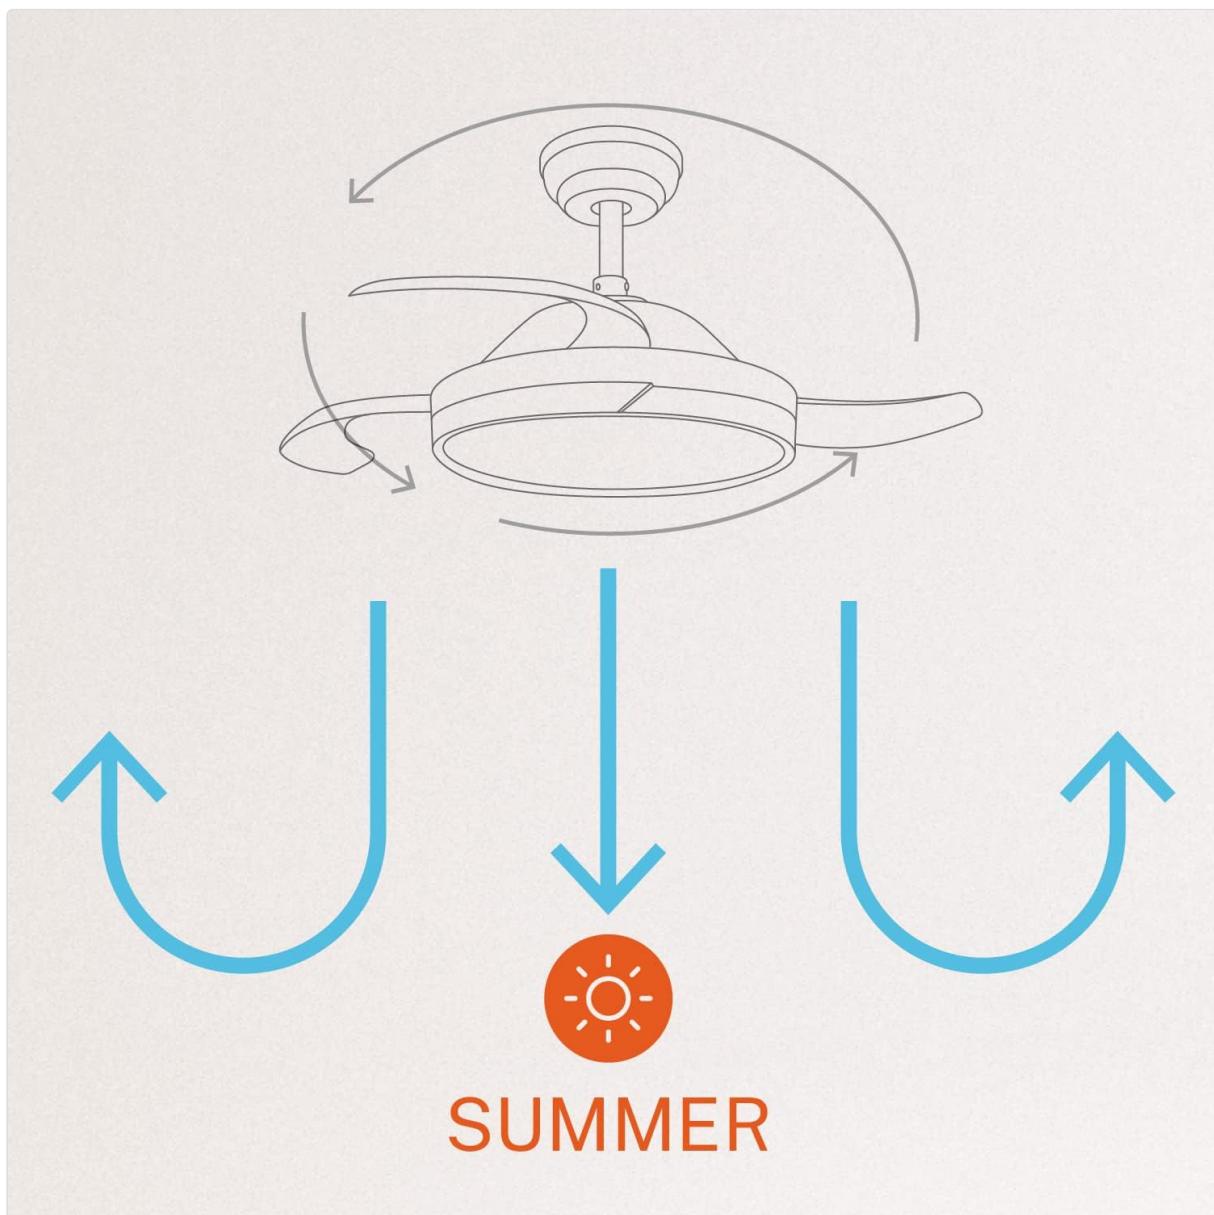

Visual representation of the three adjustable light color temperatures: warm, neutral, and cool white, available with the integrated LED.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Always turn off the power supply before cleaning. Use a soft, lint-free cloth to wipe down the fan body and blades. For stubborn dirt, a slightly damp cloth can be used. Do not use harsh chemicals, abrasive cleaners, or water directly on electrical components.
- **Blade Inspection:** Periodically check the blades for any signs of damage or imbalance.
- **Tighten Screws:** Over time, screws may loosen. Periodically check and tighten all screws on the mounting bracket and fan body.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply Loose wiring Remote control batteries dead	Check circuit breaker Verify wiring connections (consult electrician) Replace remote control batteries
Light does not work	Light switch off Loose wiring LED module fault	Ensure light is switched on via remote/app Verify wiring connections (consult electrician) Contact customer support
Fan makes excessive noise	Loose screws Unbalanced blades Motor issue	Tighten all mounting screws Ensure blades are properly seated and balanced Contact customer support
Remote control not responding	Dead batteries Out of range Interference	Replace batteries Move closer to the fan Remove obstacles or sources of interference

If the problem persists after attempting these solutions, please contact customer support.


8. SPECIFICATIONS

Feature	Specification
Brand	CREATE
Model Number	A-4879 (120760_244663)
Color	Black and Dark Wood
Dimensions (Packaged)	54.3 x 54.2 x 28.2 cm
Power	40 Watts
Voltage	240 Volts
Energy Class	A+ to G (Energy Label E)
Noise Level	45 dB
Item Weight	8.8 Kilograms
Number of Blades	3 (Retractable)
Control Type	Remote Control, Wi-Fi App
Recommended Use	Cooling

For detailed energy information, please refer to the EPREL database: <https://eprel.ec.europa.eu/qr/1958139>



Product data sheet for the CREATE WIND CLEAR ceiling fan, detailing energy efficiency and technical specifications.

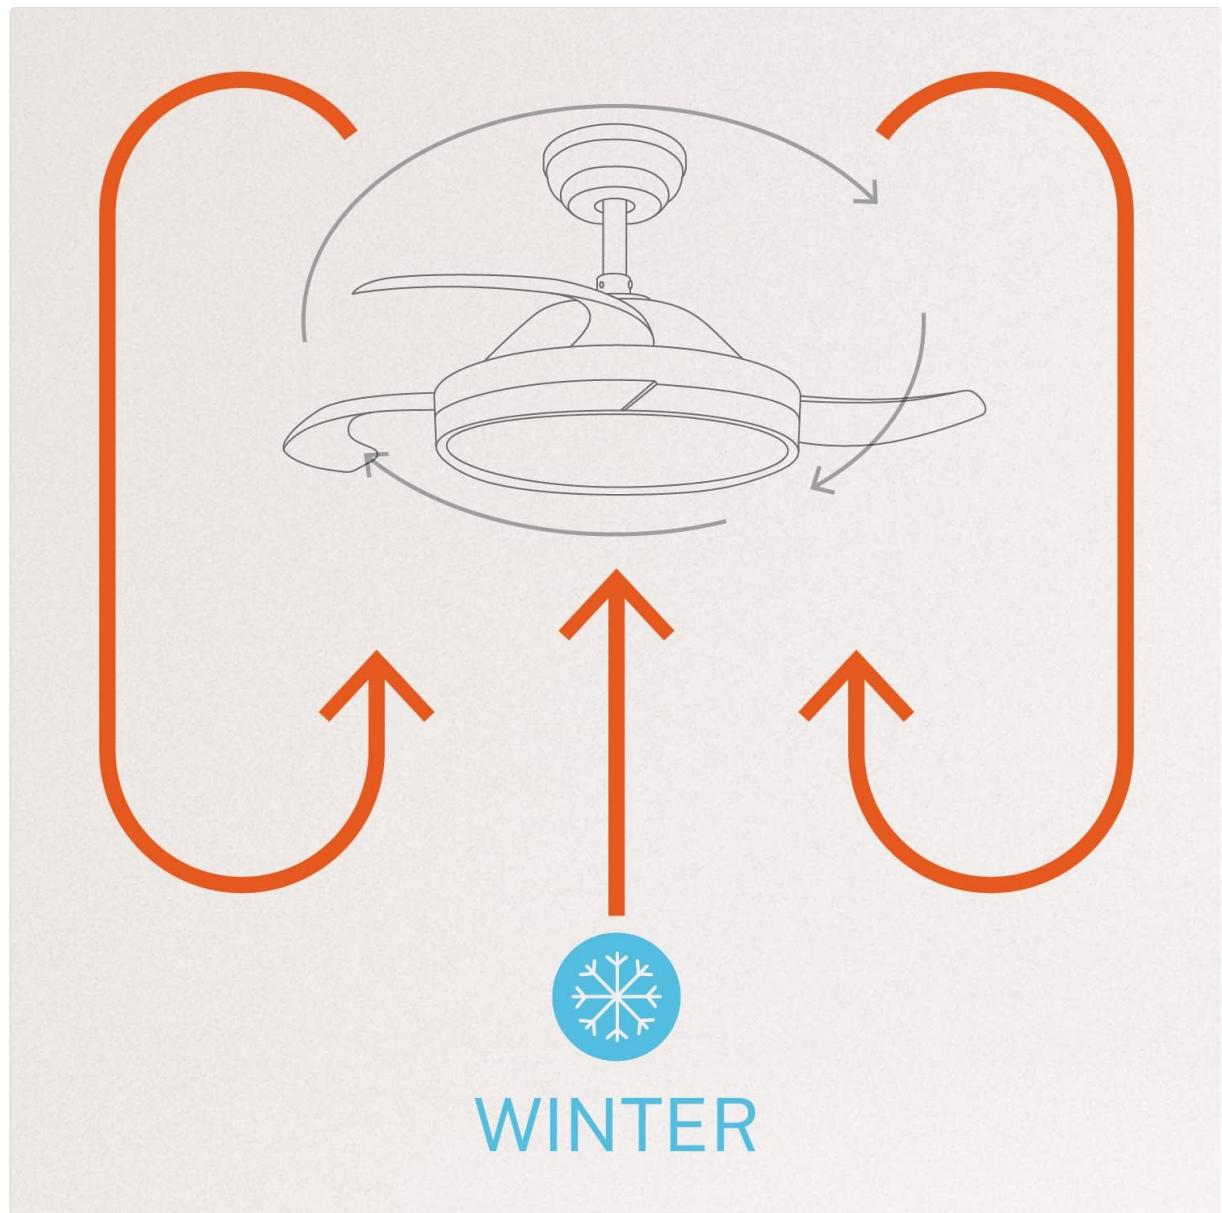


EU Energy Label for the CREATE WIND CLEAR ceiling fan, indicating its energy efficiency class E.

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact CREATE customer service through their official website or the retailer where the product was purchased.

Related Documents - A-4879

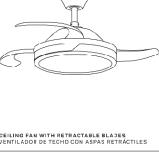 <p>CREATE WIND CLEAR</p> <p>CEILING FAN WITH RETRACTABLE BLADES VENTILADOR DE TECHO CON ASPIAS RETRACTILES</p> <p>USER MANUAL</p>	<p>CREATE WIND CLEAR Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND CLEAR ceiling fan with retractable blades. Includes safety instructions, parts list, remote control guide, installation requirements, and troubleshooting tips.</p>
 <p>CREATE WIND CLEAR</p> <p>CEILING FAN WITH RETRACTABLE BLADES VENTILADOR DE TECHO CON ASPIAS RETRACTILES</p> <p>USER MANUAL</p>	<p>CREATE WIND CLEAR Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND CLEAR ceiling fan with retractable blades, detailing installation, operation, safety, and troubleshooting.</p>
 <p>CREATE</p> <p>Wind Clear Rattan</p> <p>User manual Manual de instrucciones</p>	<p>CREATE Wind Clear Rattan Ceiling Fan User Manual - Installation and Operation Guide</p> <p>Comprehensive user manual for the CREATE Wind Clear Rattan ceiling fan, covering installation, operation, safety instructions, and app connectivity. Learn how to safely install and use your new ceiling fan.</p>
 <p>CREATE</p> <p>Wind Calm Line</p> <p>Handmatige montage</p>	<p>CREATE Wind Calm Line Ceiling Fan Installation Manual</p> <p>Comprehensive installation guide for the CREATE Wind Calm Line ceiling fan, detailing steps from mounting to final assembly and troubleshooting.</p>
 <p>CREATE</p> <p>Wind Clear Rattan</p> <p>User manual Manual de instrucciones</p>	<p>CREATE Wind Clear Rattan Ceiling Fan User Manual</p> <p>Official user manual for the CREATE Wind Clear Rattan ceiling fan, providing comprehensive instructions for installation, operation, safety, and smart app connectivity.</p>
 <p>CREATE</p> <p>Wind Clear Studio</p> <p>User manual Manual de instrucciones</p>	<p>CREATE Wind Clear Studio User Manual</p> <p>Comprehensive user manual for the CREATE Wind Clear Studio ceiling fan, covering installation, operation, safety instructions, parts list, remote control, and app connectivity for optimal and safe use.</p>

