

CREATE 120760_254772

CREATE WIND CLEAR Ceiling Fan with Light and WiFi User Manual

Model: 120760_254772

1. INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your CREATE WIND CLEAR Ceiling Fan. Please read these instructions thoroughly before installation and retain them for future reference. The CREATE WIND CLEAR Ceiling Fan is a quiet ceiling fan featuring a 40W DC brushless motor and a winter-summer reversal function. Its compact and versatile design includes retractable blades. It is suitable for small to medium-sized rooms and bedrooms, offering a built-in LED light with three adjustable color temperatures. The fan body is constructed from steel, and the blades are made of ABS. It provides 6 speed settings and a programmable timer up to 8 hours, all controllable via the included remote control and WiFi connectivity.

2. SAFETY INSTRUCTIONS

- Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Ensure the mounting structure can support the weight of the fan (refer to specifications for weight).
- Do not insert objects into the path of the fan blades.
- Ensure all connections are secure and properly insulated.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. INCLUDED COMPONENTS

Verify that all components are present before beginning installation:

- CREATE WIND CLEAR Ceiling Fan Unit
- Remote Control
- Battery for Remote Control
- Mounting Hardware (screws, brackets, etc. - specific items may vary)

- Instruction Manual

For a visual reference of the product and its components, please see the image below:



Image 3.1: CREATE WIND CLEAR Ceiling Fan with included remote control and a smartphone displaying the control app interface.

4. SETUP AND INSTALLATION

Professional installation is highly recommended for this ceiling fan. Ensure the power supply is disconnected before starting any installation work.

4.1 Physical Installation

1. **Mounting Bracket:** Securely attach the mounting bracket to a ceiling joist or a suitable electrical junction box rated for fan support.
2. **Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the full installation guide (not included in this summary). Ensure proper grounding.

3. **Fan Assembly:** Carefully lift and attach the fan motor assembly to the mounting bracket.
4. **Blade Installation:** The fan features retractable blades that deploy automatically when the fan operates. No manual blade installation is typically required after the main unit is mounted.
5. **Light Kit Installation:** Attach the LED light kit to the fan housing as per the detailed instructions.

Refer to the following images for visual guidance on the fan's appearance and dimensions:



Image 4.1: The CREATE WIND CLEAR Ceiling Fan installed in a room, showcasing its integrated design.



Image 4.2: The CREATE WIND CLEAR Ceiling Fan with its blades retracted, appearing as a modern ceiling light fixture.

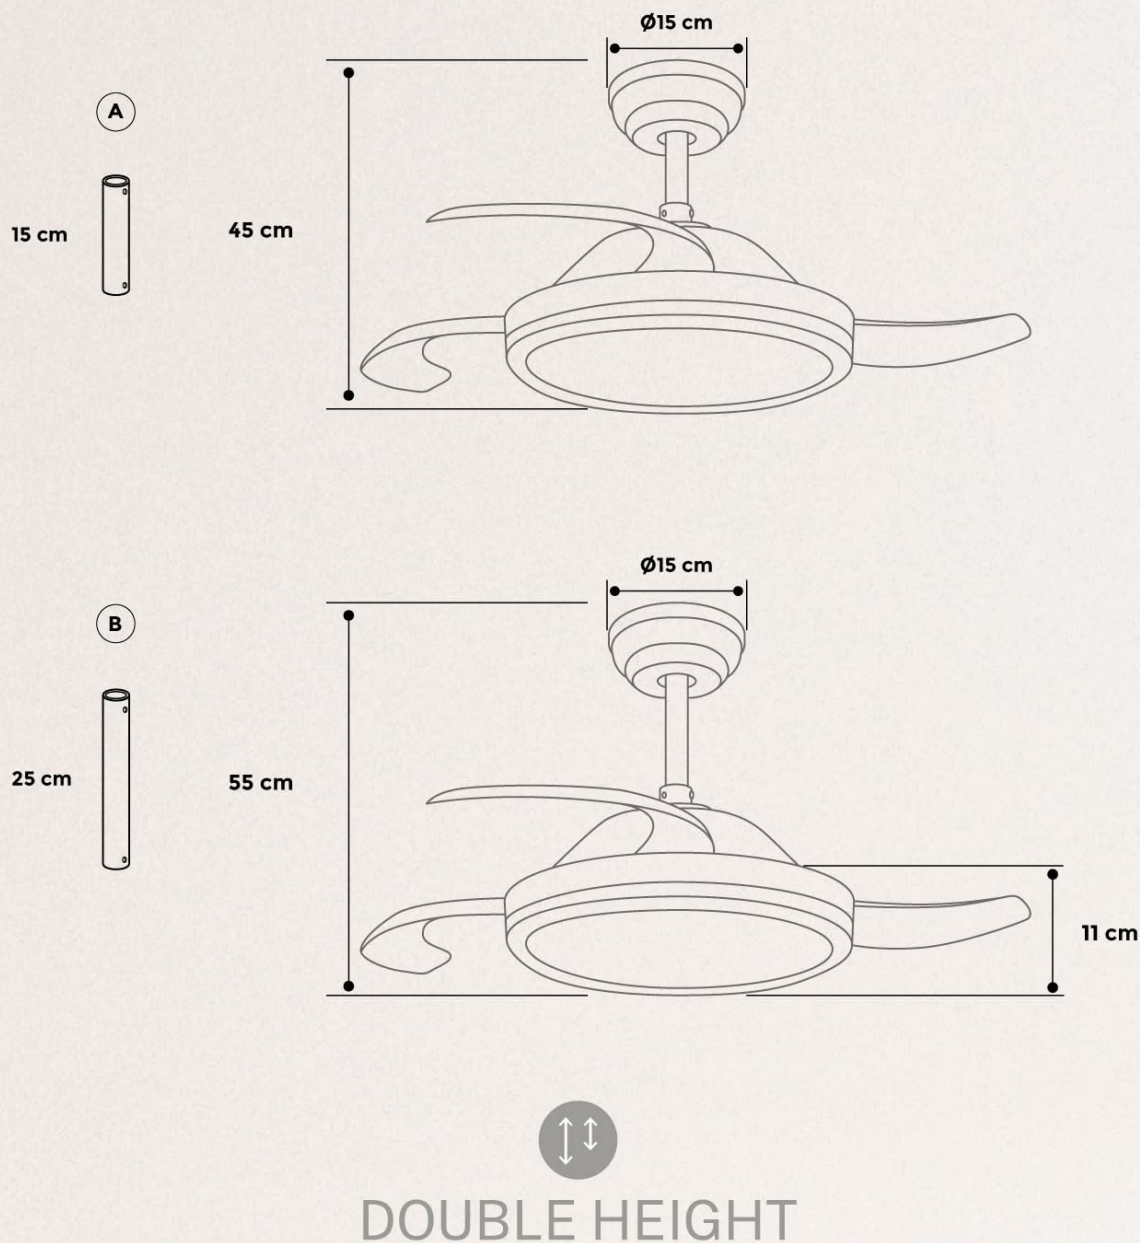


Image 4.3: Diagram illustrating the dimensions of the CREATE WIND CLEAR Ceiling Fan, including options for different downrod lengths (45 cm and 55 cm total height).

4.2 WiFi Setup

The fan supports WiFi connectivity for control via a smartphone application. Refer to the specific instructions provided with the fan for pairing the device with your home WiFi network and the CREATE smart home app.

5. OPERATING INSTRUCTIONS

Your CREATE WIND CLEAR Ceiling Fan can be operated using the included remote control or via the dedicated smartphone application.

5.1 Remote Control Functions

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Adjust between 6 fan speeds using the designated speed buttons.

- **Light Control:** Turn the LED light on/off and cycle through three adjustable color temperatures (warm, neutral, cold).
- **Timer:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Winter/Summer Mode:** Switch between forward (summer) and reverse (winter) rotation modes.



Image 5.1: Illustration of the three adjustable light color temperatures (cool white, neutral white, warm white) available on the CREATE WIND CLEAR Ceiling Fan.

5.2 Winter and Summer Modes

The fan features a reversible motor to optimize air circulation for different seasons:

- **Summer Mode (Counter-clockwise rotation):** The fan blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Clockwise rotation):** The fan blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling, helping to distribute heat more evenly.

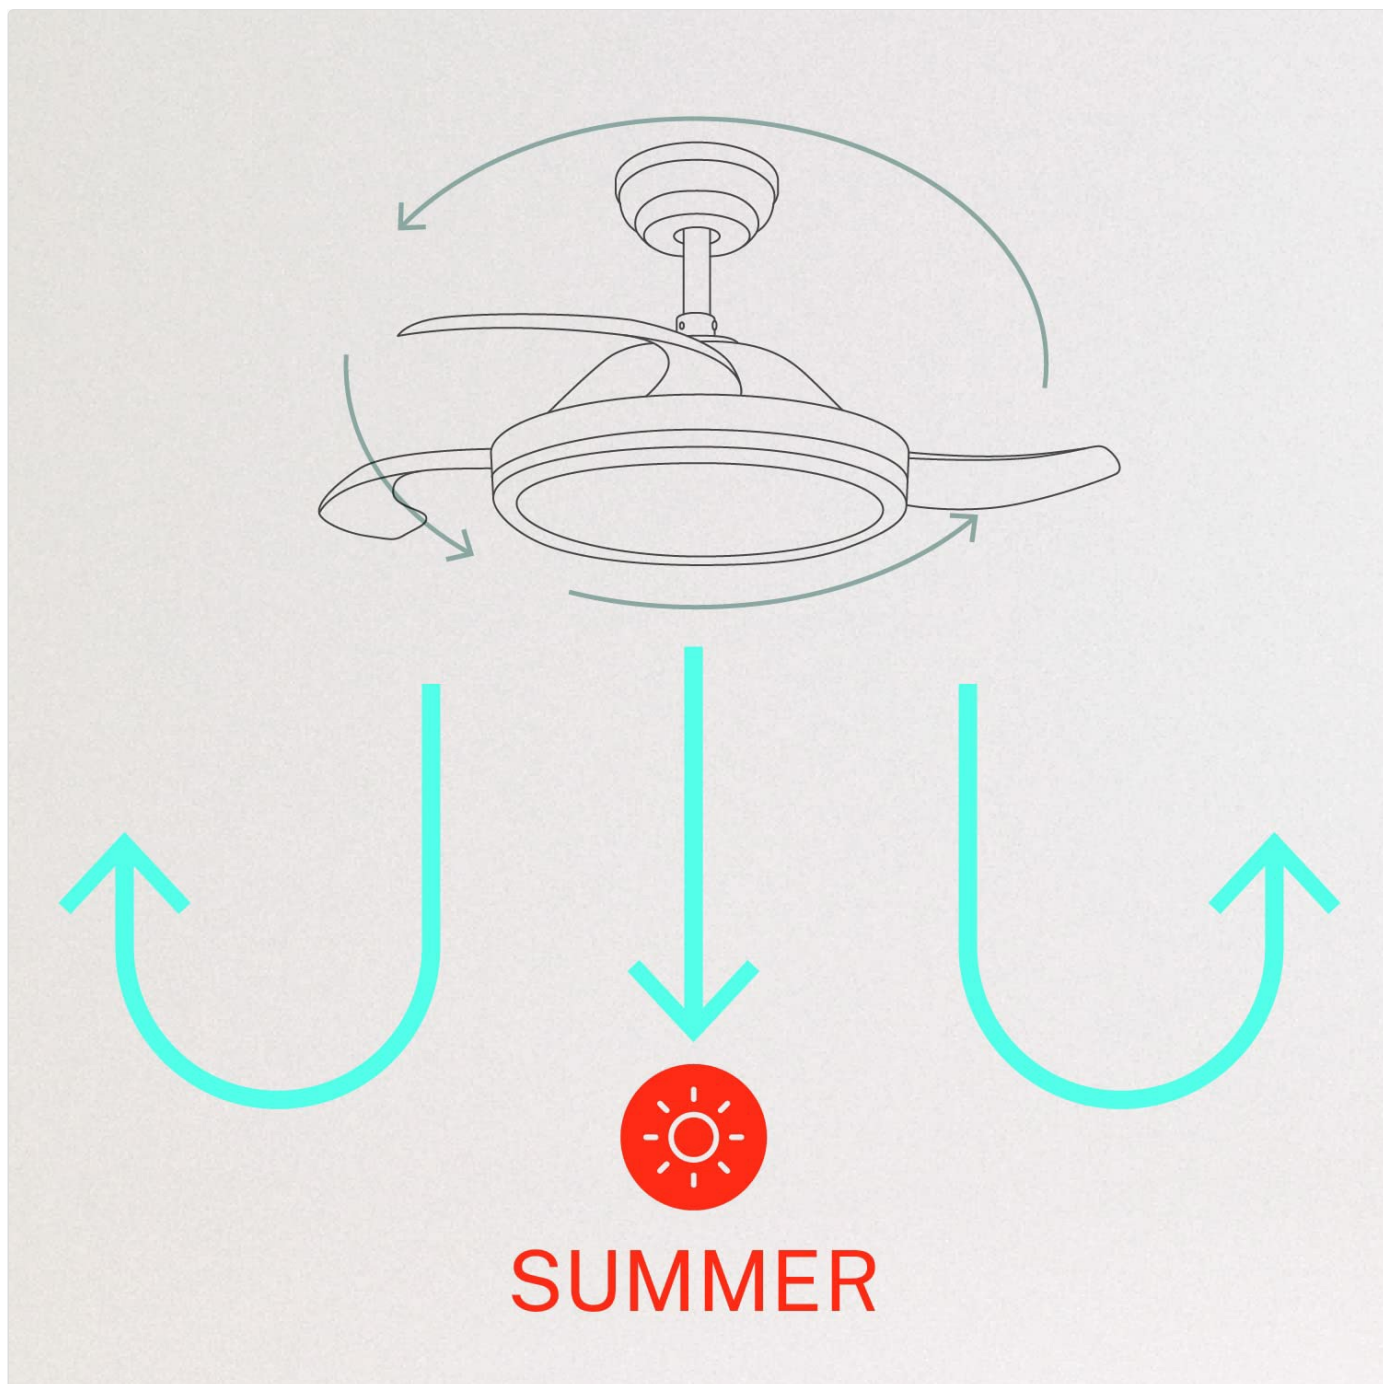


Image 5.2: Diagram illustrating the downward airflow pattern for Summer Mode, creating a cooling effect.

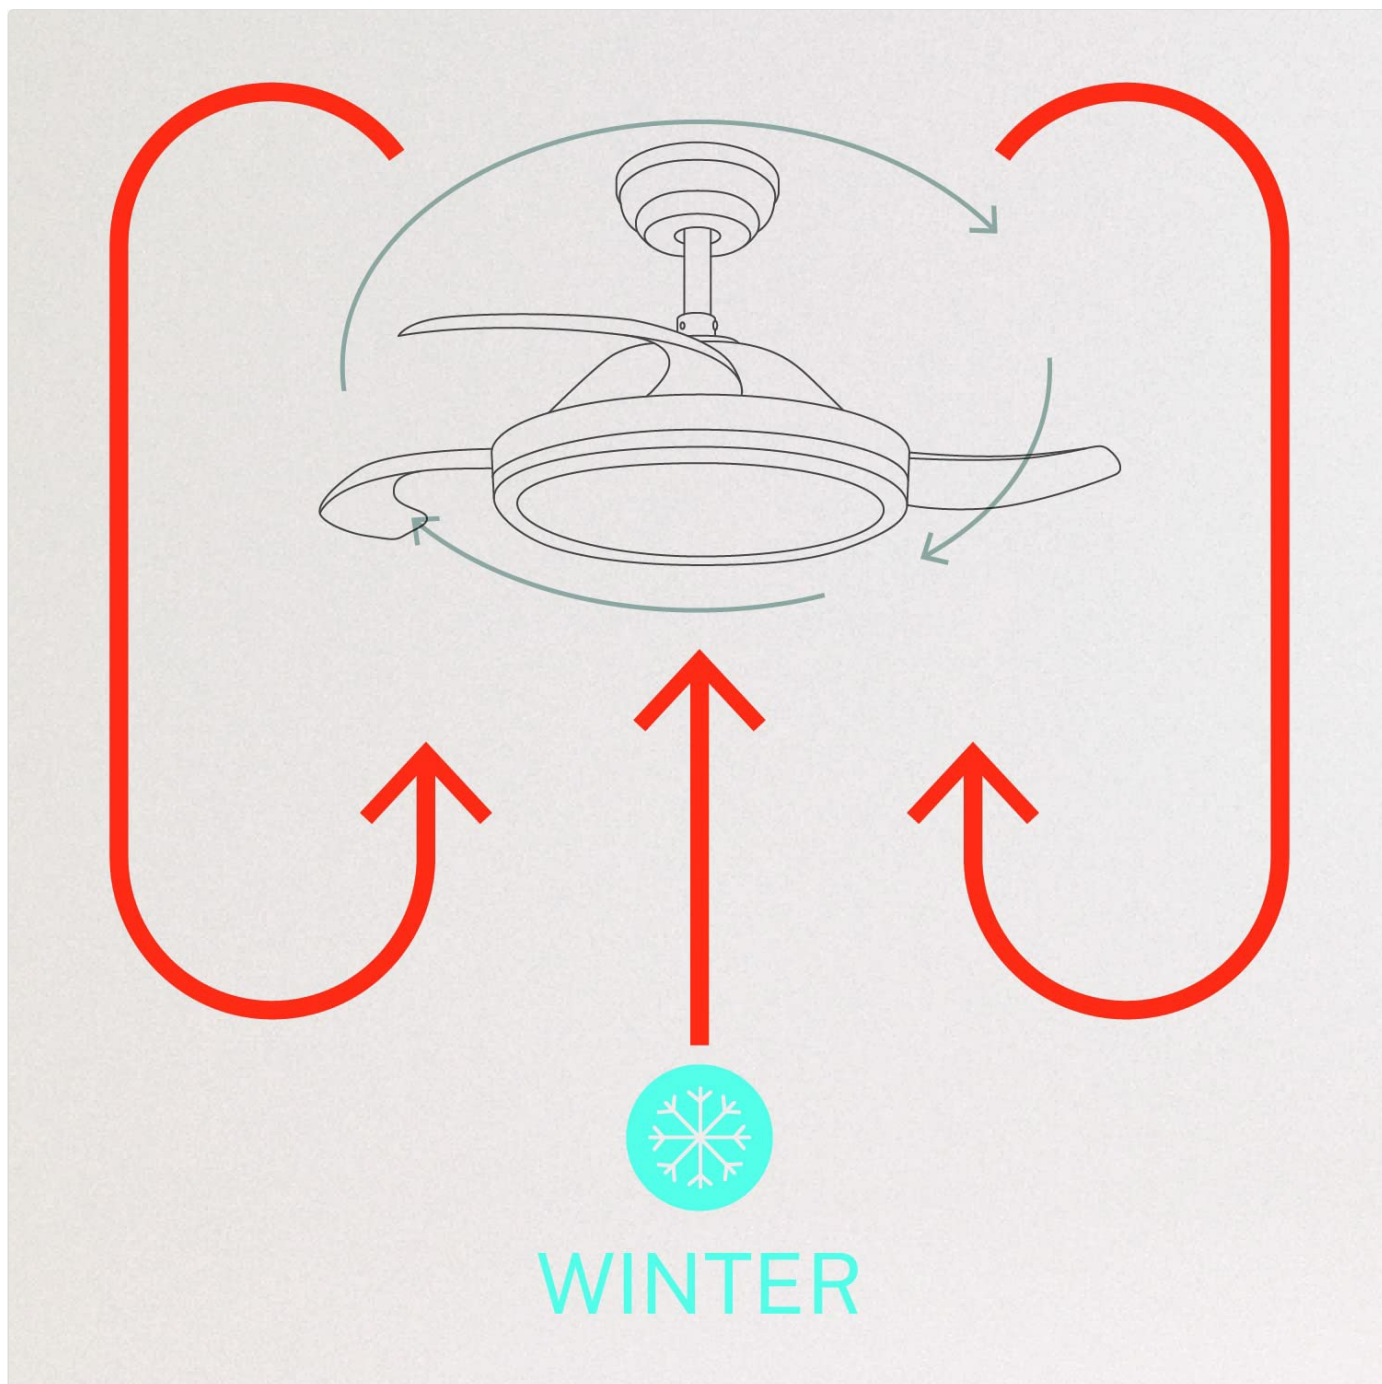


Image 5.3: Diagram illustrating the upward airflow pattern for Winter Mode, circulating warm air.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Tightening Screws:** Check all mounting screws and blade attachment screws annually to ensure they are properly tightened.
- **Light Source:** The LED light source is integrated. If it requires service, contact qualified personnel.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery depleted	Check circuit breaker; Verify all wiring connections; Replace remote control battery.
Fan wobbles	Loose mounting screws; Unbalanced blades	Ensure mounting bracket and fan assembly screws are tight; Check for any obstructions to blade movement.
Light does not work	Loose wiring; LED module fault	Check light kit wiring connections; Contact customer support if LED module is faulty.
Remote control not working	Depleted battery; Remote not paired	Replace remote control battery; Refer to pairing instructions in the full manual.
WiFi control issues	Poor WiFi signal; Incorrect app setup	Ensure strong WiFi signal; Reconfigure WiFi connection in the app.

8. SPECIFICATIONS

Feature	Detail
Brand	CREATE
Model Number	120760_254772
Colour	White
Electric Fan Design	Ceiling Fan
Power Source	Corded Electric
Style	With WiFi
Product Dimensions	107D x 107W x 39H Centimeters
Room Type	Bedroom
Special Feature	Timer
Recommended Uses	Ventilating
Wattage	40 Watts
Included Components	Remote, Battery

For detailed product data and energy efficiency information, please refer to the following documents:

Produktdatenblatt

Delegierte Verordnung (EU) Nr. 1254/2014

Name oder Warenzeichen des Lieferanten	CREATE
Modellkennung	120760 WIND CLEAR DC
Spezifischer Energieverbrauch (kaltes Klima)	70,0 kWh/(m² x a)
Klasse des spezifischen Energieverbrauchs (durchschnittliches Klima)	F
Spezifischer Energieverbrauch (durchschnittliches Klima)	34,7 kWh/(m² x a)
Spezifischer Energieverbrauch (warmes Klima)	12,0 kWh/(m² x a)
Typ	Zwei-Richtung-Lüftungsgerät (ZLG)
Art des Antriebs	Mehrstufenantrieb
Art des Wärmerückgewinnungssystems	Rekuperativ
Temperaturänderungsgrad der Wärmerückgewinnung	76,3 %
Höchster Luftvolumenstrom	9 000 m³/h
Elektrische Eingangsleistung des Ventilatorantriebs	98,0 W
Schallleistungspegel	45 dB
Bezugs-Luftvolumenstrom	3,500 m³/s
Bezugsdruckdifferenz	55 Pa
Spezifische Eingangsleistung	0,33 W/(m³/h)
Steuerungsfaktor	0,85
Steuerungstypologie	Zentrale Bedarfssteuerung – 0,85
Höchste innere Leckluftquoten	0,5 %
Höchste äußere Leckluftquoten	1,1 %
Lage der optischen Filterwarnanzeige	-
Beschreibung der optischen Filterwarnanzeige	-
URL für Anweisungen zur Vormontage/Zerlegung	https://www.create-store.com/es/comprar-ventiladores-de-techo-aspas-retractiles/120760-wind-clear-ventilador-de-techo-40w-silencioso-o107-cm.html
Druckschwankungsempfindlichkeit des Luftstroms bei +20 Pa und -20 Pa	- %
Luftdichtheit zwischen innen und außen	1,0 m³/h
Jahressstromverbrauch	344,0 kWh Elektrizität/a
Jährliche Einsparung an Heizenergie bei kaltem Klima	1 926,0 kWh Primärenergie/a
Jährliche Einsparung an Heizenergie bei durchschnittlichem Klima	4 259,0 kWh Primärenergie/a
Jährliche Einsparung an Heizenergie bei warmem Klima	8 331,0 kWh Primärenergie/a

CREATE

Image 8.1: Product data sheet providing technical specifications and energy consumption details for the CREATE WIND CLEAR Ceiling Fan.

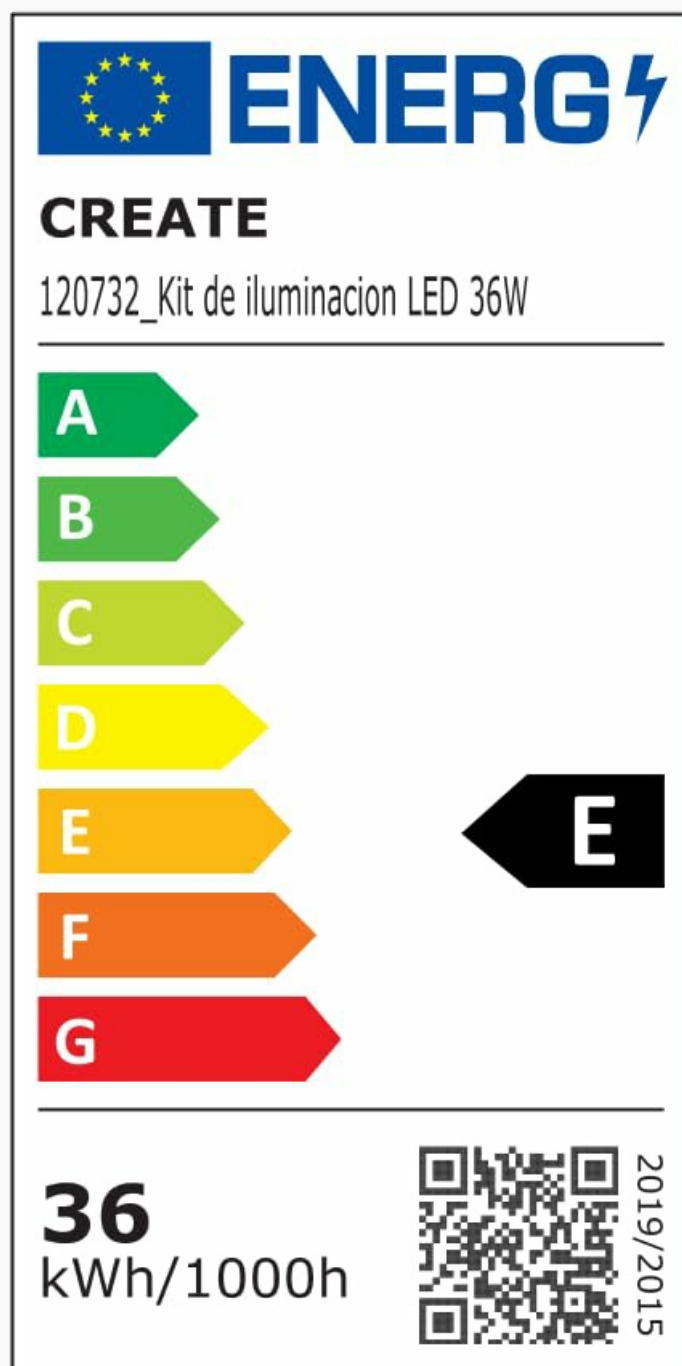


 





Image 8.2: Energy label for the CREATE WIND CLEAR Ceiling Fan (Model 120732_Kit de iluminacion LED 36W), indicating an energy efficiency class of E and consumption of 36 kWh/1000h. More details can be found at <https://eprel.ec.europa.eu/qr/1958139>.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact CREATE customer service or refer to the official CREATE website. Keep your purchase receipt as proof of purchase.

<div><div><div>CREATE</div><div>WIND CLEAR</div></div><div></div><div><div>CEILING FAN WITH RETRACTABLE BLADES VENTILADOR DE TECHO CON ASAS RETRACTILES</div><div>USER MANUAL</div></div></div>	<p>CREATE WIND CLEAR Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND CLEAR ceiling fan with retractable blades. Includes safety instructions, parts list, remote control guide, installation requirements, and troubleshooting tips.</p>
<div><div><div>CREATE</div><div>WIND CLEAR</div></div><div></div><div><div>CEILING FAN WITH RETRACTABLE BLADES VENTILADOR DE TECHO CON ASAS RETRACTILES</div><div>USER MANUAL</div></div></div>	<p>CREATE WIND CLEAR Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND CLEAR ceiling fan with retractable blades, detailing installation, operation, safety, and troubleshooting.</p>
<div><div><div>CREATE</div></div><div></div><div><div>Wind Modern</div><div>User manual Manual de instrucciones</div></div></div>	<p>CREATE Wind Modern Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE Wind Modern ceiling fan, detailing installation, operation, and safety instructions in multiple languages.</p>
<div><div><div>CREATE</div><div>WIND CALM</div></div><div></div><div><div>CEILING FAN WITHOUT LIGHT ASSEMBLY MANUAL</div></div></div>	<p>CREATE WIND CALM Ceiling Fan Assembly Manual</p> <p>Assembly manual for the CREATE WIND CALM ceiling fan without light. This guide provides step-by-step instructions for installation, including mounting the bracket, connecting the driver, anchoring the motor, and assembling the blades. It also includes a blade balancing kit guide.</p>
<div><div><div>CREATE</div></div><div></div><div><div>Wind Calm Line</div><div>Assemblage manuel</div></div></div>	<p>CREATE Wind Calm Line Ceiling Fan Assembly Manual</p> <p>Detailed assembly instructions for the CREATE Wind Calm Line ceiling fan, covering mounting to various ceiling types, wiring connections, remote control setup, and blade balancing. Includes a parts list and important safety precautions.</p>
<div><div><div>CREATE</div><div>WIND LARGE DC</div></div><div></div><div><div>CEILING FAN SUMMER-WINTER FUNCTION VENTILADOR DE TECHO F UNCIÓN VERANO INV ENDO</div><div>USER MANUAL</div></div></div>	<p>CREATE WIND LARGE DC Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND LARGE DC ceiling fan, detailing safety instructions, installation procedures, remote control operation, and blade assembly. Supports multiple languages including English, Spanish, Portuguese, French, Italian, German, Dutch, and Polish.</p>

