

[Manuals.plus](#) /

> [H.Koenig](#) /

> H.Koenig TWT77 Textile Cleaner User Manual

## H.Koenig TWT77

# H.Koenig TWT77 Textile Cleaner User Manual

Model: TWT77

## INTRODUCTION

---

Thank you for choosing the H.Koenig TWT77 Textile Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and keep this manual for future reference.

## SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances:

- Read all instructions thoroughly before operating the appliance.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the appliance in water or other liquids.
- Use only cleaning solutions recommended for textile cleaners.
- Always unplug the appliance from the power outlet before cleaning, maintenance, or when not in use.
- Do not operate the appliance with a damaged cord or plug. If damaged, contact qualified service personnel.
- Do not use the appliance on wet hands or in damp environments.
- Avoid vacuuming flammable or combustible materials, hot ashes, or sharp objects.
- Ensure all tanks are properly secured before operation.

## PRODUCT OVERVIEW

---

The H.Koenig TWT77 is designed for effective cleaning of various textiles such as mattresses, carpets, and sofas. It features separate tanks for clean and dirty water to ensure optimal cleaning results.



Front view of the H.Koenig TWT77 Textile Cleaner, showing the main unit with handle, clean water tank, and attached hose with nozzle.



Side view of the H.Koenig TWT77 Textile Cleaner, highlighting the compact design and hose connection.



Close-up view of the H.Koenig TWT77 water tank, featuring the brand logo and clear visibility of water levels.

## Components:

- Main Unit with Integrated Handle
- Clean Water Tank (1.4 L capacity)
- Dirty Water Tank (1.2 L capacity)

- Flexible Hose
- Cleaning Nozzle/Brush Attachment
- Power Button
- 3-meter Power Cord with Integrated Storage
- Replacement Brush (included)



An exploded view showing all individual components of the H.Koenig TWT77 Textile Cleaner, including the main unit, clean and dirty water tanks, hose, and nozzle.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Position:** Place the main unit on a stable, flat surface.
3. **Attach Hose:** Connect the flexible hose securely to the designated port on the main unit.
4. **Attach Nozzle:** Connect the cleaning nozzle/brush attachment to the end of the flexible hose.
5. **Fill Clean Water Tank:** Remove the clean water tank. Fill it with clean water and, if desired, an appropriate textile cleaning solution. Do not exceed the maximum fill line.
6. **Insert Tanks:** Place the filled clean water tank and the empty dirty water tank back into their respective positions on the main unit, ensuring they are securely seated.



This image illustrates the process of filling the clean water tank and emptying the dirty water tank, showing the separate compartments for each.

## OPERATING INSTRUCTIONS

---

1. **Power On:** Plug the power cord into a suitable electrical outlet. Press the power button on the unit to turn it on.
2. **Test Area:** Before cleaning, always test a small, inconspicuous area of the textile for colorfastness and material compatibility.
3. **Apply Solution:** Hold the cleaning nozzle firmly against the surface to be cleaned. Press the trigger on the nozzle to spray cleaning solution onto the fabric. The water flow is adjustable up to 350 ml/min.
4. **Scrub and Extract:** Move the nozzle slowly over the soiled area, applying gentle pressure. The brush will help agitate the dirt, and the powerful suction will extract the dirty water into the dirty water tank.
5. **Repeat:** Release the trigger to stop spraying and continue suctioning to remove any excess moisture. Repeat steps 3-4 as necessary until the area is clean. For heavily soiled areas, allow the solution to soak for a few minutes before extraction.
6. **Finish:** Once cleaning is complete, turn off the unit by pressing the power button and unplug it from the outlet.



A hand demonstrating the use of the H.Koenig TWT77 Textile Cleaner on upholstery, showing the nozzle in action.



A hand demonstrating the use of the H.Koenig TWT77 Textile Cleaner on a carpeted surface, illustrating the cleaning process.

## MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your textile cleaner.

1. **Empty Dirty Water Tank:** After each use, remove the dirty water tank. Empty its contents and rinse it thoroughly with clean water.
2. **Clean Nozzle/Brush:** Detach the cleaning nozzle/brush attachment and rinse it under running water to remove any debris or residue.
3. **Wipe Unit:** Wipe down the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Dry Components:** Ensure all tanks and attachments are completely dry before reassembling them.
5. **Storage:** Store the appliance in a cool, dry place, away from direct sunlight. Utilize the integrated storage for the power cord to keep it tidy.



This image serves as a reminder for proper tank handling, showing both filling the clean water tank and emptying the dirty water tank, crucial for maintenance.

## TROUBLESHOOTING

If you encounter any issues with your H.Koenig TWT77 Textile Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on	No power supply; Power button not pressed	Check power cord connection and wall outlet; Press the power button firmly.
No spray from nozzle	Clean water tank empty; Nozzle clogged; Trigger not pressed	Refill clean water tank; Clean the nozzle; Ensure trigger is fully pressed.
No suction	Dirty water tank full; Tanks not properly seated; Hose not connected securely	Empty dirty water tank; Ensure both tanks are correctly inserted; Check hose connections.
Poor cleaning results	Incorrect cleaning solution; Too fast movement; Heavily soiled area	Use recommended cleaning solution; Move nozzle slowly; Make multiple passes over the area.

## SPECIFICATIONS

Feature	Specification
Brand	H.Koenig
Model	TWT77
Power	650 W
Clean Water Tank Capacity	1.4 Liters
Dirty Water Tank Capacity	1.2 Liters
Adjustable Water Flow	350 ml/min
Product Dimensions (D x W x H)	36.5 x 24.5 x 31.8 cm
Item Weight	4 Kilograms
Power Source	Electric Cord
Cord Length	3 meters
Included Components	1 x Replacement Brush

## WARRANTY AND SUPPORT

---

Your H.Koenig TWT77 Textile Cleaner comes with a **2-year extended warranty**, ensuring peace of mind and reliable use.

For any service or support needs, an after-sales service workshop is available in Spain and Portugal. Please refer to your purchase documentation for specific contact details.

Spare parts for this product are available for a duration of **10 years** within the EU, ensuring long-term usability and repairability.

