

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LELO](#) /
- › [LELO Lily 3 Mini Bullet Vibrator Instruction Manual](#)

LELO LILY 3

LELO Lily™ 3 Mini Bullet Vibrator Instruction Manual

Model: LILY 3 (85086)

1. PRODUCT OVERVIEW

The LELO Lily™ 3 is a compact and discreet personal massager designed for clitoral stimulation. It features 10 different vibration patterns and is made from body-safe silicone. This manual provides essential information for the safe and effective use of your device.

2. WHAT'S IN THE BOX

LILY™ 3
personal massager



MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



WARRANTY CARD
verifies product authenticity

SATIN POUCH
for storage

Image: LELO Lily 3 packaging contents.

- LELO Lily™ 3 Personal Massager
- Instruction Manual
- Moisturizer Sachet (water-based lubricant, 5 ml / 0.17 fl. oz.)
- USB Charging Cord
- Warranty Registration Card
- Satin Storage Pouch

3. PRODUCT FEATURES



Image: Key features of the LELO Lily 3 massager.

- **Travel Ready:** Compact and discreet design for portability.
- **Versatile Intensities:** Offers 10 different vibration patterns, from gentle to powerful.
- **USB Rechargeable:** Convenient charging for repeated use.
- **Fully Waterproof:** Rated to IPX7 standard, suitable for use in baths or showers.
- **Body-Safe Materials:** Constructed from soft-touch, certified body-safe silicone.
- **Ergonomic Design:** Ergonomically shaped for precise stimulation and comfortable handling.
- **Durable Construction:** Made for long-term satisfaction.

4. SETUP AND CHARGING

Before first use, ensure your LELO Lily™ 3 is fully charged. The device uses a USB rechargeable battery.

1. Connect the provided USB charging cord to the charging port on your Lily 3.
2. Plug the USB end of the cable into a compatible USB power source (e.g., computer, USB wall adapter).
3. Charge the device for approximately 2 hours for a full charge. The LED lights will indicate charging status.

5. OPERATING INSTRUCTIONS

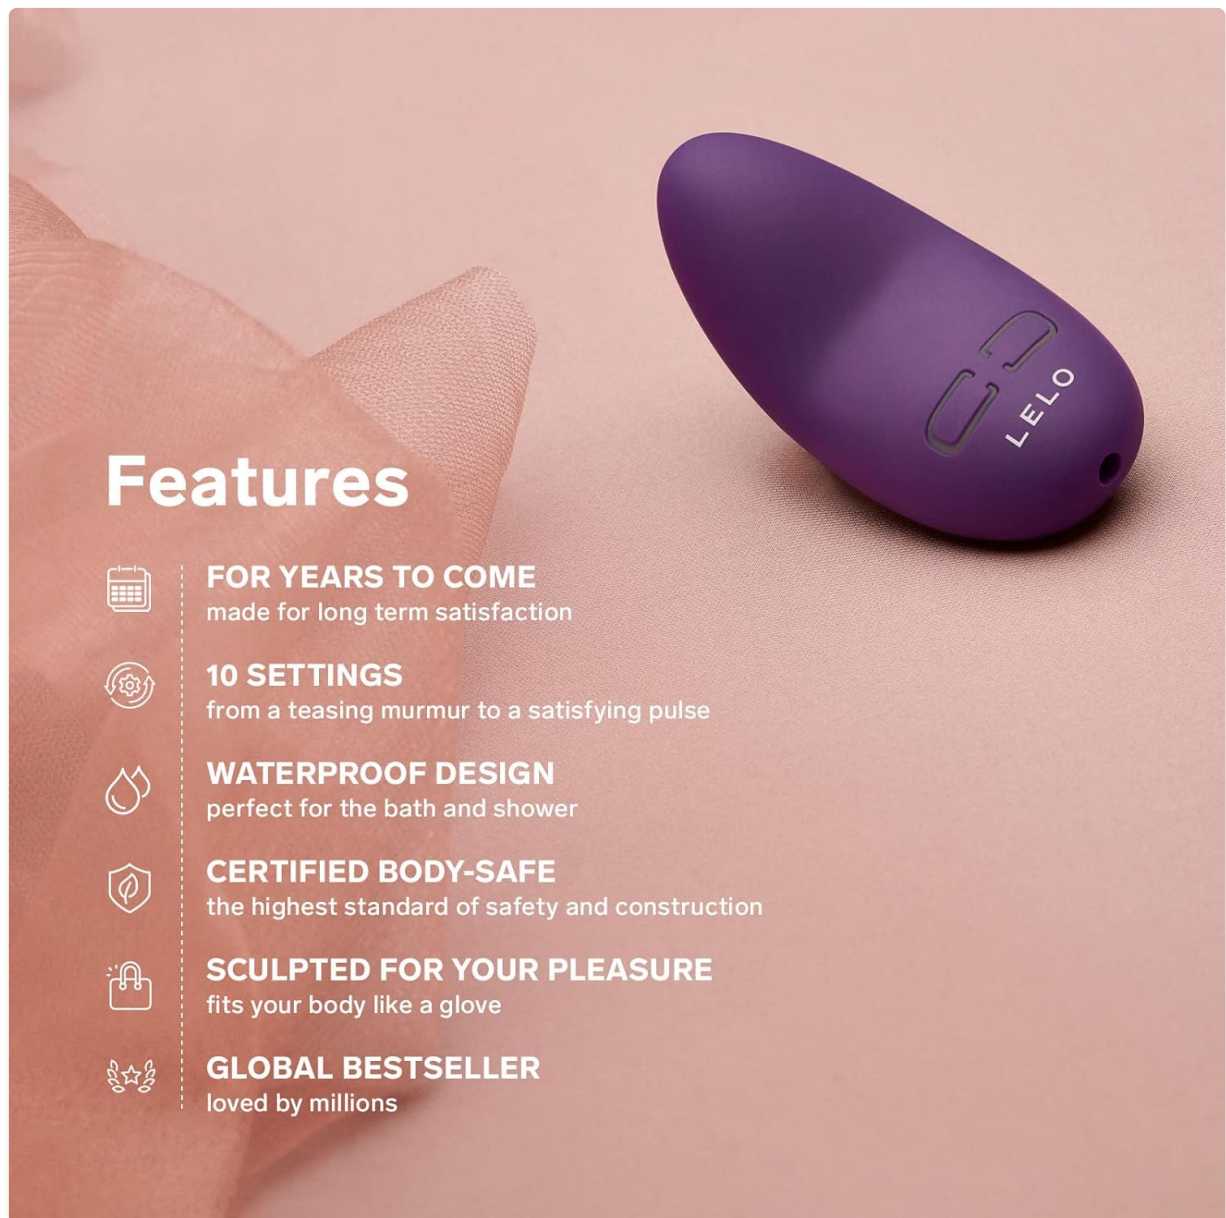


Image: Step-by-step guide for operating the LELO Lily 3.

1. **To Turn On:** Press and hold the right button for 2 seconds. The LED lights will blink to indicate the battery level.
2. **To Switch Between 10 Settings:** Press the right button briefly to cycle through the different vibration patterns.
3. **To Decrease or Increase Intensity:** Use the left button to decrease intensity and the right button to increase intensity within a pattern.
4. **To Turn Off:** Press and hold the left button for 2 seconds.

6. MAINTENANCE AND CARE

- **Cleaning:** Always clean your Lily 3 thoroughly before and after each use. Wash the device with warm water and a mild, antibacterial soap, or use a specialized LELO Toy Cleaner. Rinse thoroughly and pat dry with a lint-free cloth.
- **Lubrication:** For optimal comfort and experience, use a water-based lubricant with your Lily 3. Avoid silicone-based lubricants as they can damage the silicone material.

- **Storage:** Store your Lily 3 in its satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the device is fully charged. Press and hold the power button for 2 seconds.
Device does not charge.	Check that the USB cable is securely connected to both the device and the power source. Try a different USB port or adapter.
Vibrations are weak or inconsistent.	The battery may be low; recharge the device. Ensure the device is clean and free from debris.

8. SPECIFICATIONS

- **Model Name:** LILY 3
- **Item Model Number:** 85086
- **Material:** Body-safe Silicone
- **Color:** Calm Lavender (as per product variant)
- **Dimensions:** 2.91 x 1.34 x 1.54 inches
- **Weight:** 1.59 ounces
- **Battery:** 1 Lithium Metal battery (included)
- **Waterproof Rating:** IPX7 Standard
- **Vibration Settings:** 10

9. WARRANTY AND SUPPORT

Your LELO Lily™ 3 comes with a **1-year warranty** and a **10-year quality guarantee**. For any product-related inquiries, technical support, or warranty claims, please visit the official LELO website or contact their customer service directly. Retain your proof of purchase and warranty registration card for future reference.

10. SAFETY INFORMATION

Statements regarding personal care products have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. Always consult with a healthcare professional if you have any concerns about using personal massagers or any health conditions. Ensure the device is clean before and after each use. Do not use if the silicone appears damaged. Keep out of reach of children.