

Elite Gourmet EC922

Elite Gourmet EC922 12-Cup Electric Coffee Percolator Instruction Manual

Model: EC922 | Brand: Elite Gourmet

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Elite Gourmet EC922 12-Cup Electric Coffee Percolator. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the percolator base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

COMPONENTS

Familiarize yourself with the parts of your percolator:

- Percolator Body (Stainless Steel)
- Lid with Glass Brew Progress Knob
- Percolating Tube (Stem)
- Filter Basket
- Filter Basket Cover
- Power Base with Removable Cord
- Cool-Touch Handle



Image: Labeled diagram of the Elite Gourmet EC922 Percolator highlighting its key components.

SETUP

Before First Use:

1. Wash the percolator body, lid, percolating tube, filter basket, and filter basket cover in warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the power base with a damp cloth. Do not immerse the power base in water.
3. Perform a trial run by filling the percolator with water to the maximum level and running a brew cycle without coffee grounds. Discard the water.

Assembly:

1. Place the percolating tube into the center well of the percolator body. Ensure it is seated correctly.
2. Place the filter basket onto the percolating tube.
3. Add coffee grounds to the filter basket.
4. Place the filter basket cover on top of the filter basket.
5. Secure the lid onto the percolator body.

12-CUP CAPACITY

Coffee & Tea Percolator with Cord Free Serving

**BPA
FREE**



Image: Disassembled view of the percolator, showing the internal components for assembly.

OPERATING INSTRUCTIONS

1. **Fill with Water:** Remove the lid, filter basket, and percolating tube. Fill the percolator body with cold water to the desired level, using the internal measurement markings (4-12 cups). Do not exceed the MAX fill line.
2. **Add Coffee Grounds:** Place the percolating tube back into the percolator. Add the filter basket and then the desired amount of coarse ground coffee into the filter basket. For best results, use coarse grounds to prevent sediment.
3. **Assemble:** Place the filter basket cover on top of the filter basket, then securely place the lid with the glass knob onto the percolator body.
4. **Connect Power:** Place the percolator onto its power base. Plug the removable power cord into the percolator's base, then into a standard 120V AC electrical outlet.
5. **Start Brewing:** Press the illuminated On/Off switch on the side of the base. The indicator light will turn green, signifying the brewing process has started.
6. **Monitor Progress:** Observe the brewing cycle through the clear glass brew progress knob on the lid. Coffee will bubble up through the knob.
7. **Keep Warm:** Once brewing is complete, the percolator will automatically switch to the "Keep Warm" function, and the indicator light will turn red. The coffee will remain warm for up to 6 hours.
8. **Serve:** For cord-free serving, simply unplug the cord from the base. The cool-touch handle ensures safe pouring. After serving, plug the cord back into the base to resume the "Keep Warm" function if desired.

Versatility

Not just for coffee



Image: The percolator in use, pouring freshly brewed coffee into a cup.

Your browser does not support the video tag.

Video: An official product video demonstrating the Elite Gourmet EC922 Electric Coffee Percolator's features, including brewing and cord-free serving.

MAINTENANCE AND CLEANING

Daily Cleaning:

1. Always unplug the percolator and allow it to cool completely before cleaning.
2. Remove the lid, filter basket cover, filter basket, and percolating tube.
3. These stainless steel parts are dishwasher safe for convenient cleaning.
4. The percolator body is **Hand Wash Only**. Wash the interior and exterior of the body with warm, soapy water and a soft cloth or sponge. Rinse thoroughly and dry immediately to prevent water spots.
5. Wipe the power base with a damp cloth. Never immerse the power base in water.

Descaling:

Over time, mineral deposits from water can build up inside the percolator. To descale:

- Fill the percolator with a mixture of equal parts water and white vinegar.
- Run a brew cycle without coffee grounds.
- Discard the solution and rinse the percolator thoroughly with clean water several times.
- Repeat if necessary.

CONVENIENT SIZE

Brew up to 12-cups of rich, delicious coffee



Image: Stainless steel components of the percolator shown in a dishwasher, indicating they are dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Percolator does not turn on.	Not plugged in correctly; power switch off.	Ensure power cord is securely plugged into both the percolator base and the wall outlet. Press the On/Off switch.

Problem	Possible Cause	Solution
Coffee is weak or too strong.	Incorrect coffee-to-water ratio; grind size.	Adjust the amount of coffee grounds or water. Use coarse ground coffee for best results in a percolator.
Coffee grounds in brewed coffee.	Fine coffee grounds; improperly seated filter basket.	Use coarse ground coffee. Ensure the filter basket is properly seated on the percolating tube and the cover is in place.
Percolator leaks.	Lid not properly secured; overfilling.	Ensure the lid is firmly in place. Do not fill water above the MAX line.
Glass Brew Progress Knob breaks.	Accidental impact; material fatigue.	Handle with care. Replacement parts may be available through customer support.

SPECIFICATIONS

- **Model:** EC922
- **Capacity:** 12 Cups
- **Material:** Stainless Steel, Glass
- **Color:** Stainless Steel
- **Product Dimensions:** 6"D x 8"W x 11.75"H
- **Item Weight:** 1.47 Kilograms
- **Wattage:** 1000W
- **Voltage:** 120V
- **Operation Mode:** Fully Automatic
- **Special Features:** Keep Warm, Glass Clear Brew Progress Knob, Cool-Touch Handle, Cordless Serve
- **Filter Type:** Reusable
- **Dishwasher Safe Parts:** Lid, coffee filter basket, coffee basket lid, brewing stem (Percolator body is Hand Wash Only)

WARRANTY AND SUPPORT

Elite Gourmet products are designed for quality and user satisfaction. This product typically comes with a 1-year limited warranty from the date of purchase, covering defects in material or workmanship under normal household use. For warranty claims, technical assistance, or to inquire about replacement parts (such as the Glass Brew Progress Knob), please contact our US-based support team:

- **Phone:** Refer to your product packaging or the official Elite Gourmet website for the most current contact number.
- **Email:** Refer to your product packaging or the official Elite Gourmet website for the most current email address.
- **Live Chat:** Available through the official Elite Gourmet website.

Please have your model number (EC922) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question