

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WORX](#) /

› [WORX NITRO 20V Pruning Shear/Lopper WG330.9 User Manual](#)

WORX WG330.9

WORX NITRO 20V Pruning Shear/Lopper

MODEL: WG330.9

User Manual

IMPORTANT SAFETY INSTRUCTIONS

Always read and understand all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres**, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away** while operating a power tool. Distractions can cause you to lose control.
- **Wear appropriate personal protective equipment** including safety glasses, gloves, and sturdy footwear.
- **Avoid accidental starting.** Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.
- **Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- **Always be aware of blade position.** The blades are sharp and powerful. Keep hands and fingers clear of the cutting area to prevent severe injury.
- **Use the correct tool for the application.** Do not force the tool; it will do the job better and safer at the rate for which it was designed.
- **Disconnect the battery pack** from the tool before making any adjustments, changing accessories, or storing power tools.

PRODUCT OVERVIEW

The WORX NITRO 20V Pruning Shear/Lopper (Model WG330.9) is designed for efficient cutting of branches, twigs, and shrubs up to 1 inch in diameter. This tool offers a powerful, one-handed operation alternative to manual loppers, reducing user fatigue during extended use. It is part of the WORX Power Share platform, allowing battery compatibility with other 20V WORX tools.

Key Features:

- **Power to Outperform:** Engineered for greater power, performance, and runtime.

- **Titanium Plated Blade:** Decreases friction, provides easier cutting, and offers long-lasting protection against rust and corrosion.
- **Brushless Motor:** More efficient, offering longer runtimes, increased power, and extended tool life compared to brushed motors.
- **Soft Grip Handle:** Designed for ultimate comfort and reduced user fatigue during prolonged operation.
- **Powerful Cutting Capacity:** Capable of cutting branches, twigs, and shrubs up to 1 inch in diameter.
- **One-Handed Operation:** Provides the power of a manual lopper with the convenience of single-hand use.



Image: The WORX NITRO 20V Pruning Shear/Lopper, showing its compact design and ergonomic handle.

WORX




OFFICIAL GLOBAL PARTNER



Greatness is earned, not claimed

The world's most decorated football club joins forces
with the world's best-selling robot mower.

Image: Front view of the pruning shear/lopper, highlighting the blade mechanism and overall tool shape.

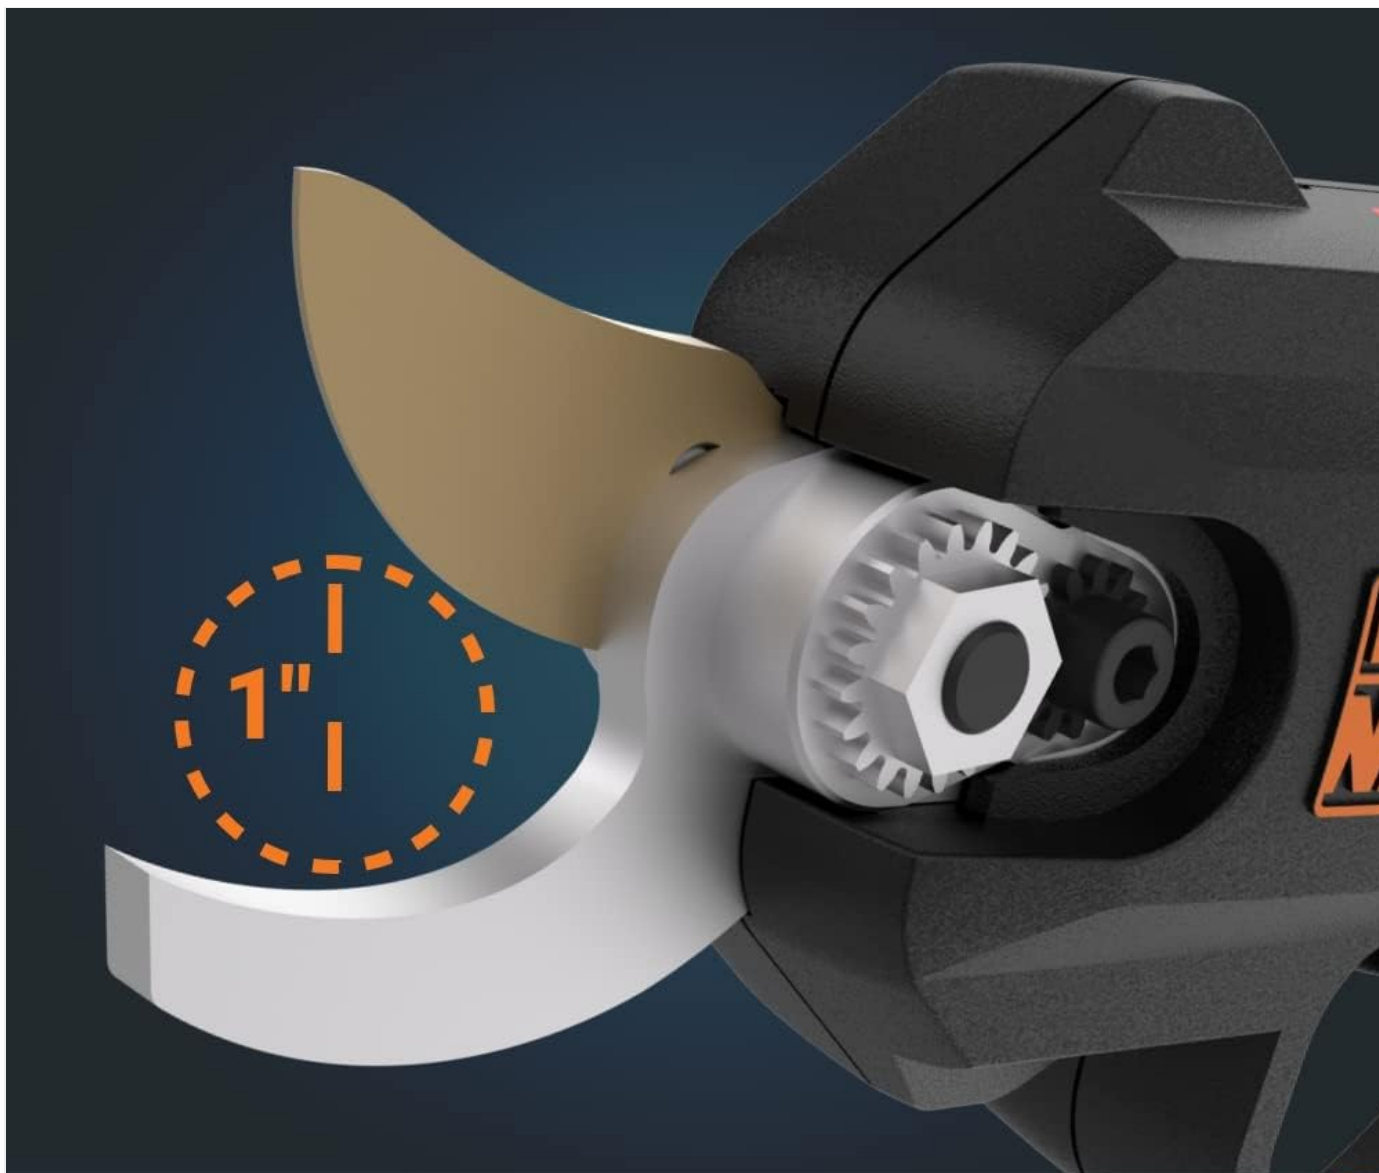

TITANIUM BLADES

Image: A close-up view of the titanium-plated blades, indicating a 1-inch cutting capacity.



HIGH-EFFICIENCY BRUSHLESS MOTOR

Image: An internal diagram illustrating the high-efficiency brushless motor, which provides enhanced power and longevity.



SOFT GRIP HANDLE

Image: Detail of the soft grip handle, designed for user comfort and reduced hand fatigue.



WG330.9 20V WORX NITRO PRUNING SHEAR/LOPPER – TOOL ONLY

WHAT'S INCLUDED

Image: This image clarifies that the package includes the WG330.9 20V WORX NITRO Pruning Shear/Lopper as a tool-only item, meaning the battery and charger are sold separately.

SETUP

1. Battery Installation (Battery and Charger Sold Separately)

1. Ensure the pruning shear is turned off.
2. Align the 20V WORX Power Share battery pack (not included) with the battery port on the tool's handle.
3. Slide the battery pack into the port until it clicks securely into place. Ensure it is fully seated to prevent accidental disconnection during operation.

2. Initial Inspection

- Before each use, inspect the blades for any damage, dullness, or debris.
- Check that all fasteners are tight and that the tool is in good working condition.



*BATTERY & CHARGER NOT INCLUDED

COMPACT & LIGHTWEIGHT

Image: The pruning shear shown with a battery attached, demonstrating its compact and lightweight design for ease of handling. Note: Battery and charger are sold separately.

OPERATING INSTRUCTIONS

1. Powering On and Off

1. **To Power On:** Hold the Safety Lock Trigger and then depress the On/Off trigger. A green LED will illuminate, and the blades will open to their maximum position, indicating the tool is ready for use.
2. **To Power Off:** Depress and hold the On/Off trigger until you hear two beeps. The blades will close, and the pruner will turn off.

2. Cutting Operation

- The pruning shear is designed to cut branches up to 1 inch in diameter with ease.
- For branches slightly larger than 1 inch (e.g., up to 1.5 inches), multiple cuts may be required. If the pruner

encounters resistance, it may beep once and the blades will open. Release and depress the On/Off trigger to reset and continue cutting.

- Position the branch deep into the blades for a clean, efficient cut.

3. Blade Settings

- The blades have two settings for opening width. For smaller branches, depress the On/Off trigger and hold until you hear one beep. The blades will then open to a smaller cutting size, which can be more efficient for lighter pruning tasks.

4. One-Handed Operation

The compact and lightweight design allows for comfortable one-handed operation, making it easier to reach and prune in various positions.



ONE-HANDED OPERATION

Image: A user operating the pruning shear with one hand, highlighting its ease of use and maneuverability for pruning branches.

5. Automatic Shut-Off

If the pruner remains inactive for approximately one minute while in the open position, it will automatically shut off to conserve battery power. To reactivate, depress the Safety Lock Trigger and On/Off trigger.

MAINTENANCE

1. Blade Cleaning and Lubrication

- After each use, disconnect the battery and clean the blades to remove sap, debris, and plant residue. Use a damp cloth and mild detergent if necessary.
- Periodically lubricate the blades and the small ball bearing mechanism (visible on one side of the blades) with one or two drops of oil. This helps maintain smooth operation and protects against rust, especially with the titanium coating.

2. Blade Replacement

While the titanium-plated blades are designed for durability, they may eventually require replacement. Please note that replacement blades for the WORX WG330.9 model may not be readily available. Contact WORX customer support for assistance with blade maintenance or replacement options.

3. Storage

- Store the pruning shear in a dry, secure location, out of reach of children.
- Ensure the blades are closed and the battery is removed before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pruner stops working and beeps once on a branch.	Branch diameter exceeds 1 inch, or tool is encountering excessive resistance.	Release the On/Off trigger, then depress it again to reset the tool. Attempt to cut the branch with multiple passes or use a different tool for larger diameters.
Tool does not power on.	Battery not properly installed or discharged.	Ensure battery is fully charged and securely inserted. Check battery contacts for cleanliness.
Blades are sluggish or not cutting cleanly.	Blades are dirty, dull, or require lubrication.	Clean blades thoroughly and apply lubricant. If dull, contact customer support for blade maintenance options.
Tool automatically shuts off during use.	Inactivity for approximately one minute.	Depress the Safety Lock Trigger and On/Off trigger to reactivate the tool.

SPECIFICATIONS

Feature	Detail
Brand	WORX
Model Number	WG330.9

Feature	Detail
Style	20V Pruning Shear/Lopper (Tool Only)
Product Dimensions	11.2"L x 4.2"W
Item Weight	2.16 pounds
Power Source	Battery Powered (20V)
Voltage	20 Volts
Wattage	1000 watts
Blade Material	Titanium Coated Steel
Blade Type	Bypass
Cutting Width	1 Inch
Handle Material	Rubber
Motor Type	Brushless
Included Components	20V Pruning Shears (Battery & Charger Sold Separately)
UPC	822465340503

WARRANTY INFORMATION

WORX offers a limited warranty for its products:

- **3 Years Limited Warranty for the Tool**
- **2 Years Limited Warranty for the Battery** (if purchased separately or as part of a kit)

Please retain your proof of purchase for warranty claims. For full terms and conditions, refer to the official WORX warranty documentation or contact customer support.



Image: Visual representation of the WORX limited warranty, indicating 3 years for the tool and 2 years for the battery.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding parts and service, please visit the official WORX website or contact their customer service department. It is often recommended to check the website's FAQ section for common issues before contacting support directly.

You can find more information and products at the [Official WORX Store on Amazon](#).

