

Move2Play KSK105

Move2Play Kids Karaoke Microphone Instruction Manual

Model: KSK105

Brand: Move2Play

1. INTRODUCTION

Welcome to your new Move2Play Kids Karaoke Microphone! This manual provides essential information for setup, operation, and maintenance to ensure a fun and safe experience. Please read through these instructions carefully before first use.

2. WHAT'S IN THE BOX

- Move2Play Kids Karaoke Microphone
- Micro-USB Charging Cable
- Rechargeable Battery (pre-installed)

3. PRODUCT FEATURES

- **15 Pre-loaded Nursery Rhymes:** Enjoy a selection of popular children's songs directly from the microphone.
- **Bluetooth Connectivity:** Easily connect to your smartphone or tablet to play any song from streaming services like Spotify, YouTube, or Apple Music.
- **High-Quality Sound:** Integrated speakers deliver clear audio for both music and vocals.
- **4 Voice Effects:** Transform your voice with fun effects, including high-pitched, low-pitched, monster voice, and echo.
- **Rechargeable Battery:** Provides over 6 hours of continuous playtime on a single charge.

Voice Effects



High
Pitched



Low
Pitched



Monster
Voice



Echo
Effect



Image: The microphone features four distinct voice effects for enhanced fun.

PRE-LOADED WITH

15 Kids Songs!

Wheels On The Bus
Row Your Boat
Old MacDonald
ABCs
Comin' Round The Mountain
Twinkle Little Star
Take Me Out To The Ball Game
Wish You A Merry Christmas
Jingle Bells
Happy Birthday Song
And More!



Image: A selection of 15 pre-loaded songs is available for immediate play.

4. CONTROLS AND FUNCTIONS

Familiarize yourself with the buttons and sliders on your microphone:

Control	Function
Power Button (center top)	Press and hold to turn the microphone On/Off. Single press to switch between Music Mode (pre-loaded songs) and Bluetooth Mode.
Play/Pause Button (center)	Plays or pauses the current song.
Previous/Next Track Buttons (left/right of Play/Pause)	Skips to the previous or next song.
Voice FX Button (below Play/Pause)	Cycles through the available voice effects.
Vol+ / Vol- Buttons (right side)	Adjusts the volume of the background music.

Control	Function
Mic Slider (bottom left)	Adjusts the volume of your voice through the microphone.
Echo Slider (bottom right)	Adjusts the echo effect on your voice.



Image: Overview of the microphone's control panel, highlighting buttons for playback, volume, voice effects, and echo.

Video: This video provides a detailed unboxing and instruction guide for the Kids Karaoke Mics, demonstrating how to use its various features and controls.

5. SETUP

5.1 Charging the Microphone

Before first use, fully charge the microphone. Connect the included Micro-USB charging cable to the charging port on the microphone and plug the other end into a USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes 2-3 hours.

5.2 Powering On/Off

To turn the microphone ON, press and hold the Power Button (center top) for a few seconds until you hear a

power-on sound. To turn it OFF, press and hold the Power Button again until you hear a power-off sound.

5.3 Bluetooth Connection

1. Turn on the microphone. It will automatically enter Music Mode (playing pre-loaded songs).
2. Press the Power Button once to switch to Bluetooth Mode. You will hear an audible prompt indicating it's ready to pair.
3. On your smartphone or tablet, go to Bluetooth settings and enable Bluetooth.
4. Look for 'Kids Star' or 'Move2Play' in the list of available devices and select it to pair.
5. Once connected, you will hear a confirmation sound. You can now play music from your device through the microphone's speaker.



Image: The microphone can be easily connected to a smartphone via Bluetooth to play music from various apps.

6. OPERATING INSTRUCTIONS

6.1 Playing Pre-loaded Songs

When the microphone is turned on, it defaults to Music Mode, cycling through the 15 pre-loaded songs. Use the Previous/Next Track buttons to skip songs and the Play/Pause button to control playback.

6.2 Adjusting Volume

- **Background Music Volume:** Use the Vol+ and Vol- buttons on the right side of the control panel to adjust the volume of the music playing through the speaker.
- **Microphone Volume:** Use the 'Mic' slider on the bottom left to increase or decrease the volume of your voice.

6.3 Using Voice Effects

Press the 'Voice FX' button to cycle through the four different voice modulation effects. Experiment to find your favorite!

6.4 Adjusting Echo

Use the 'Echo' slider on the bottom right to add or reduce the reverb effect on your voice, creating a more dynamic singing experience.

Video: This demonstration video showcases the various functions and features of the Kids Karaoke Microphone, including voice effects and song playback.

Video: A short video highlighting the Kids Star Karaoke microphone's features and how children can enjoy using it.

7. TROUBLESHOOTING

- **Microphone not turning on:** Ensure the microphone is fully charged. Press and hold the power button for at least 3-5 seconds. If it still doesn't turn on, try charging it again with a different USB port or adapter.
- **No sound from microphone:** Check the 'Mic' slider and ensure it is not set to the lowest volume. Also, ensure the microphone is not muted.
- **Poor sound quality or feedback:** Ensure the microphone is not too close to the speaker. Adjust the 'Mic' and 'Echo' sliders to find optimal sound. If connected via Bluetooth, check the volume on your connected device.
- **Bluetooth not connecting:** Make sure the microphone is in Bluetooth pairing mode (single press the power button after turning on). Ensure Bluetooth is enabled on your device and 'Kids Star' or 'Move2Play' is selected. Try restarting both the microphone and your device.
- **Pre-loaded songs not playing:** Ensure the microphone is in Music Mode (single press the power button to switch from Bluetooth Mode if necessary).

8. SPECIFICATIONS

Feature	Detail
Microphone Form Factor	Handheld
Item Dimensions (L x W x H)	6 x 6 x 6 inches
Item Weight	11.3 ounces
Power Source	Battery Powered (1 Lithium Ion battery included)
Material	Plastic
Hardware Platform	Karaoke Machine, Tablet
Connectivity Technology	Bluetooth
Connector Type	3.5 mm Jack (for headphones/aux out)

Feature	Detail
Special Feature	Rechargeable
Compatible Devices	Smartphone
Color	Blue/Green
Polar Pattern	Unidirectional

9. CARE AND MAINTENANCE

- Clean the microphone with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the microphone or subjecting it to strong impacts.

10. SAFETY INFORMATION

- This product is intended for children aged 3 and up. Adult supervision is recommended.
- Do not attempt to disassemble or modify the microphone. This could result in damage or injury.
- Keep the charging cable away from young children to prevent choking hazards.
- Do not expose the microphone to water or excessive moisture.
- Dispose of batteries responsibly according to local regulations.

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Move2Play website. Keep your proof of purchase for any warranty claims.