

[manuals.plus](#) /

› [Retro Fighters](#) /
› [Retro Fighters Defender Bluetooth Controller Instruction Manual](#)

Retro Fighters Defender Bluetooth Controller

Retro Fighters Defender Bluetooth Controller Instruction Manual

Model: Defender Bluetooth Controller

1. INTRODUCTION

The Retro Fighters Defender Bluetooth Controller is designed to enhance your gaming experience across multiple platforms. This wireless controller offers native Bluetooth connectivity for PlayStation 3 (PS3), PlayStation 4 (PS4), and PC, providing freedom of movement and responsive control. With its ergonomic design, long battery life, and advanced features, the Defender controller is built for extended gaming sessions.

2. PACKAGE CONTENTS

- Retro Fighters Defender Bluetooth Controller
- USB-C Charging Cable

3. CONTROLLER OVERVIEW

Familiarize yourself with the layout and functions of your Defender Bluetooth Controller.



A black Retro Fighters Defender Bluetooth Controller shown from the front, highlighting its ergonomic design and button layout. The controller features a D-pad on the left, two analog sticks, four face buttons (Triangle, Circle, Cross, Square), and various function buttons including Turbo, Select, Start, and a central PS button.

Key Features:

- **Wireless Bluetooth Technology:** Provides seamless connectivity to compatible devices.
- **Sixaxis Capability:** Supports motion sensing for games that utilize this feature.
- **Pressure-Sensitive Buttons:** Offers nuanced control in games that support varying button press intensity.
- **Turbo Functionality:** Allows for rapid, repeated input of a button press.
- **Comfortable and Responsive Analog Sticks:** Designed for precise movement and aiming.
- **Vibration Feedback:** Enhances immersion with tactile responses to in-game events.
- **LED Indicator:** Displays connection status and battery level.

4. SETUP AND PAIRING

4.1. Initial Pairing with PlayStation 3 (PS3) / PlayStation 4 (PS4)

1. Ensure your console is powered on.
2. Connect the Defender controller to your PS3 or PS4 console using the provided USB-C charging cable.
3. Press the central PS button on the controller. The controller will automatically pair with the console.
4. Once paired, you can disconnect the USB-C cable for wireless play. The controller's LED indicator will show its assigned player number.
5. The PS button can also be used to wake the PS3 console from standby.

4.2. Pairing with PC

1. Ensure your PC has Bluetooth enabled.
2. On the controller, press and hold the PS button and the SHARE button (or a similar pairing button if specified in the controller's quick start guide) simultaneously until the LED indicator begins to flash rapidly, indicating pairing mode.
3. On your PC, navigate to Bluetooth settings and search for new devices.
4. Select "Retro Fighters Defender" (or similar name) from the list of available devices and follow any on-screen prompts to complete the pairing process.
5. Once paired, the LED indicator on the controller will stop flashing and remain solid.

5. OPERATING INSTRUCTIONS

5.1. Wireless Connectivity

The Defender controller maintains a stable wireless connection with a range of over 30 feet, allowing for flexible gaming positions.

5.2. Battery Life

The built-in Lithium Ion battery provides over 10 hours of gameplay on a single charge. The LED indicator will signal low battery status.

5.3. Turbo Function

To activate the Turbo function for a specific button:

1. Press and hold the **Turbo** button.
2. While holding **Turbo**, press the desired action button (e.g., X, Square, Triangle, Circle, L1, R1, L2, R2).
3. Release both buttons. The selected action button will now rapidly repeat its input when held down.

To deactivate Turbo for a button, repeat the process.

6. MAINTENANCE

6.1. Charging the Controller

Connect the provided USB-C charging cable to the controller and plug the other end into a USB power source (e.g., console, PC, USB wall adapter). The LED indicator will show charging status and turn off or change color when fully charged.

6.2. Care and Storage

- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble or attempt to repair the controller yourself.
- Clean the controller with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a safe place when not in use to prevent damage.

7. TROUBLESHOOTING

7.1. Controller Not Connecting/Pairing

- Ensure the controller is fully charged.
- For initial pairing with PS3/PS4, ensure the USB-C cable is securely connected.
- For PC, verify that Bluetooth is enabled on your computer and the controller is in pairing mode.
- Try resetting the controller by pressing a small reset button (if available, usually a pinhole on the back) or by holding down the PS button for 10 seconds.
- Remove any previous Bluetooth pairings for the controller on your device and attempt to pair again.

7.2. Input Lag or Disconnections

- Ensure there are no obstructions between the controller and the console/PC.
- Move closer to the console/PC to reduce potential interference.
- Check for other wireless devices that might be causing interference.
- Ensure the controller is fully charged.

7.3. Buttons Not Responding Correctly

- Test the controller on another game or device to determine if the issue is with the controller or the game/system settings.
- Ensure the controller's firmware is up to date (check the Retro Fighters official website for updates).
- Perform a controller reset as described above.

8. SPECIFICATIONS

Product Dimensions	6.3 x 4.72 x 2.76 inches
Item Weight	11.3 ounces
Connectivity	Wireless Bluetooth
Compatibility	PlayStation 3, PlayStation 4, PC
Battery	1 Lithium Ion battery (included)
Battery Life	10+ hours per charge
Wireless Range	Over 30 feet
Charging Port	USB-C

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Retro Fighters website. For technical support or further assistance, please contact Retro Fighters customer service through their official channels.



