

[Manuals.plus](#) /

› [Retro Fighters](#) /

› Retro Fighters BladeGC Wireless Controller Next-Gen User Manual

Retro Fighters BladeGC

Retro Fighters BladeGC Wireless Controller User Manual

Model: BladeGC | Brand: Retro Fighters

1. PRODUCT OVERVIEW

The Retro Fighters BladeGC is a wireless controller designed for an enhanced gaming experience across multiple platforms. It features an ergonomic design and advanced components for precise control and broad compatibility.



This image displays the black Retro Fighters BladeGC Wireless Controller, highlighting its ergonomic shape and button layout.

Key Features

- Wireless connectivity via RF technology.
- Multi-platform compatibility: GameCube, Nintendo Switch, PC, and Gameboy Player.
- Gamepad design with dual analog sticks, directional pad, and face buttons.
- Rechargeable battery for extended play.
- Compact and comfortable design.

2. SETUP INSTRUCTIONS

2.1 Charging the Controller

Connect the controller to a USB power source using the provided charging cable. The LED indicator will show the charging status and turn off when fully charged.

2.2 Connecting to GameCube / Wii

Insert the GameCube receiver dongle into an available controller port on your GameCube or Wii console. Power on the console. Press and hold the SYNC button on the controller until the LED indicator flashes rapidly, then press the SYNC button on the receiver dongle. The LED on both devices will become solid when connected.

2.3 Connecting to Nintendo Switch

On your Nintendo Switch, navigate to "Controllers" > "Change Grip/Order". Press and hold the SYNC button on the BladeGC controller until the LED indicator flashes rapidly. The Switch will detect the controller, and the LED will become solid upon successful connection.

2.4 Connecting to PC

Insert the USB receiver dongle into an available USB port on your PC. The PC should automatically install the necessary drivers. Press and hold the SYNC button on the controller until the LED indicator flashes rapidly, then press the SYNC button on the USB receiver. The LED on both devices will become solid when connected.

3. OPERATING THE CONTROLLER

3.1 Button Layout

The BladeGC controller features a standard gamepad layout with:

- **Left Analog Stick:** For movement and navigation.
- **Right Analog Stick:** For camera control or specific in-game actions.
- **D-Pad:** Directional input.
- **A, B, X, Y Buttons:** Primary action buttons.
- **L, R, Z Buttons:** Shoulder and trigger buttons.
- **Start/Pause Button:** Game menu or pause.
- **Home Button:** System menu access (Switch/PC).
- **+/- Buttons:** Select/Start functions.

3.2 Power On/Off

To power on, press the Home button. To power off, press and hold the Home button for 3-5 seconds until the controller vibrates and the LED indicators turn off.

3.3 LED Indicators

The LED indicators on the controller provide information on connection status, charging, and low battery. Refer to the "Setup" section for connection LED behavior.

4. MAINTENANCE

4.1 Cleaning

Use a soft, dry cloth to clean the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

4.2 Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.

4.3 Battery Care

To prolong battery life, avoid fully discharging the controller frequently. Charge the controller regularly, even if not in use for extended periods.

5. TROUBLESHOOTING

5.1 Controller Not Connecting

- Ensure the receiver dongle is securely plugged into the console/PC.
- Verify the controller is charged.
- Repeat the pairing process as described in the "Setup" section.
- Ensure no other wireless devices are causing interference.

5.2 Input Lag or Disconnections (PC Specific)

Some users may experience intermittent disconnections or input lag when using the USB dongle on PC.

- Try plugging the USB dongle into a different USB port.
- Ensure the controller is within range of the dongle.
- Consider updating the controller's firmware if available from the Retro Fighters official website.

5.3 Stick Drift or Unresponsive Buttons

- Power cycle the controller by turning it off and then on again.
- Check for firmware updates on the manufacturer's website.
- Clean around the buttons and analog sticks to remove any debris.

6. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Retro Fighters
Model Name	BladeGC
Connectivity Technology	RF Wireless
Compatible Devices	GameCube, Nintendo Switch, PC, Gameboy Player
Controller Type	Gamepad
Button Quantity	12
Power Source	Rechargeable Battery
Item Weight	0.31 kg
UPC	850046080005

7. WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the official Retro Fighters website or contact their customer support. Keep your proof of purchase for warranty validation.

8. SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official Retro Fighters website: www.retro-fighters.com.

You may also find frequently asked questions and firmware updates on their support page.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question