

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Woods](#) /

› [Woods 59850 Holiday Decor Timer Yard Stake with Wireless Remote Instruction Manual](#)

Woods 59850

Woods 59850 Holiday Decor Timer Yard Stake with Wireless Remote Instruction Manual

Model: 59850

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Outdoor use only.
- Unplug the unit during inclement weather conditions.
- Do not allow children to play on or near the display where this product is installed.
- Keep the unit away from flammable materials.
- Always use with a grounded power source.
- Do not use if the power cord or any part of the unit is damaged.
- This product is not a toy and is not intended for use by children.

2. PRODUCT OVERVIEW

The Woods 59850 Holiday Decor Timer Yard Stake is designed to automate your outdoor lighting and decorations with convenience and safety.

2.1. Key Features

- **Extra Long 10-Foot Cord:** Provides flexibility for placement.
- **Wireless Remote Control:** Operates up to 100 feet away for convenient manual override.
- **6-Outlet Yard Stake with Safety Covers:** Six grounded outlets with protective covers to prevent dust, dirt, and moisture ingress.
- **Convenient Yard Stake Timer:** Features a photocell sensor for automatic dusk-to-dawn operation or timed intervals (2, 4, 6, or 8 hours).
- **LED Setting Indicator:** Displays the current operational setting.
- **Heavy-Duty Construction with Overload Protection:** Durable plastic materials and built-in overload

protection for safety and longevity.

2.2. Components

The product package includes the following main components:

- Woods 59850 Yard Stake Unit with 6 Grounded Outlets and 10ft Cord
- Wireless Remote Control
- Ground Stake Assembly



Figure 1: Woods 59850 Holiday Decor Timer Yard Stake - Front of Packaging. Shows the main unit, remote, and key features like 6 timer settings, 10ft cord, and 6 grounded outlets.



Figure 2: Detailed view of the Woods 59850 Yard Stake and Wireless Remote. Labels indicate the top view pushdown window, 6 grounded outlets with weather-tight covers, integrated light sensor, LED setting indicator, lighted switch with overload protection, heavy-duty yard stake, 10-foot cord, and the 100-foot range remote control.

3. SETUP

3.1. Assembly

1. Carefully unpack all components from the packaging.
2. Attach the ground stake to the bottom of the yard stake unit by screwing it clockwise until secure.





Figure 3: Assembly diagram showing the yard stake unit, remote, and the two parts of the ground stake ready for assembly.

3.2. Placement

1. Select a suitable outdoor location for the yard stake. Ensure the location is on stable ground and allows the stake to be fully inserted.

2. For optimal performance of the photoelectric eye, ensure the light sensor (located on the top of the unit) is not obstructed by foliage, buildings, or other objects that could block natural light.
3. Plug the 10-foot power cord into a grounded outdoor electrical outlet.
4. Connect your outdoor lights or decorations to the 6 grounded outlets on the yard stake. Ensure all connections are secure and outlet covers are properly closed when not in use.

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

The main power switch is located on the side of the yard stake unit. Press it to turn the unit ON or OFF. The switch will illuminate when the unit is powered ON.

4.2. Timer Settings

The timer function is controlled by the button on the top of the yard stake unit. Press the button repeatedly to cycle through the available settings. The LED indicator will show the selected mode.

- **ON:** The outlets will remain continuously ON.
- **OFF:** The outlets will remain continuously OFF.
- **2HR:** Lights turn ON at dusk and turn OFF after 2 hours.
- **4HR:** Lights turn ON at dusk and turn OFF after 4 hours.
- **6HR:** Lights turn ON at dusk and turn OFF after 6 hours.
- **8HR:** Lights turn ON at dusk and turn OFF after 8 hours.
- **Dusk-to-Dawn:** Lights turn ON at dusk and turn OFF at dawn.

The photoelectric eye senses the absence of daylight to activate the timer functions. Ensure the sensor is unobstructed for accurate operation.

4.3. Wireless Remote Control

The wireless remote allows you to manually override the timer settings from a distance of up to 100 feet. It is useful for turning lights ON or OFF instantly without needing to access the stake unit.

- **ON Button:** Press to turn all connected devices ON immediately.
- **OFF Button:** Press to turn all connected devices OFF immediately.
- **Timer Button:** Cycles through the 2HR, 4HR, 6HR, 8HR, and Dusk-to-Dawn timer settings.





Figure 4: A hand holding the Woods 59850 Wireless Remote Control, demonstrating its compact size and button layout for ON, OFF, and Timer functions.

5. MAINTENANCE

5.1. Cleaning

To clean the unit, first ensure it is unplugged from the power source. Wipe the exterior with a damp cloth. Do not immerse the unit in water or use harsh chemicals.

5.2. Storage

When not in use, store the yard stake timer and remote in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the unit is clean and dry before storing.

6. TROUBLESHOOTING

- **Lights not turning on:**

- Check if the unit is plugged into a live grounded outlet.
- Ensure the main power switch on the stake unit is ON.
- Verify the timer setting is correctly selected (e.g., not set to OFF).
- Check the photoelectric eye for obstructions (dirt, leaves, etc.) that might prevent it from sensing darkness.
- Ensure connected lights are functioning correctly.

- **Remote control not working:**

- Check the battery in the remote control and replace if necessary.
- Ensure you are within the 100-foot operating range.
- Ensure there are no major obstructions between the remote and the yard stake unit.

- **Unit repeatedly shuts off:**

- The unit has built-in overload protection. If too many devices are connected or the total wattage exceeds the unit's capacity, it may trip. Unplug some devices and reset the unit. Refer to specifications for maximum load.

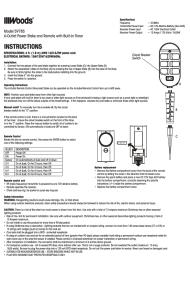
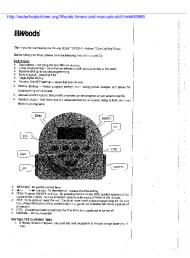
7. SPECIFICATIONS

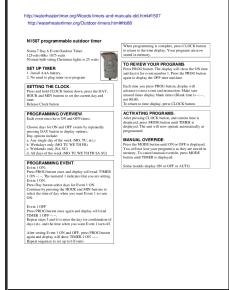
Specification	Detail
Brand	Woods
Model Number	59850 (Internal: 980338873)
Material	Plastic
Cord Length	10 feet
Outlets	6 Grounded Outlets
Remote Range	Up to 100 feet
Voltage/Amperage	15A, 125VAC, 60Hz
Wattage	1875W Max
Item Weight	1.03 Kilograms

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Woods customer service directly. Keep your purchase receipt for warranty claims.

Related Documents - 59850

	<p><u>Woods 59785 6-Outlet Power Stake and Remote with Built-in Timer Instructions</u></p> <p>Detailed instructions for the Woods 59785 6-Outlet Power Stake and Remote with Built-in Timer, covering installation, operation, safety, and troubleshooting. Features include a 6 ft. cord, 13A/1625W rating, and remote control functionality.</p>
	<p><u>Woods 50014 Outdoor 7-Day Digital Timer 3-C with 2-Outlets User Manual</u></p> <p>User manual for the Woods 50014 Outdoor 7-Day Digital Timer. Provides instructions on battery charging, setting current time, programming ON/OFF schedules, overriding timer functions, using random security, countdown, and daylight saving time features.</p>
	<p><u>Woods TD1300-2 Indoor 7-Day Lighting Timer: User Manual & Instructions</u></p> <p>Detailed instructions and specifications for the Woods TD1300-2 Indoor 7-Day Lighting Timer. Learn how to program ON/OFF times, countdown settings, manual override, and random switching features.</p>
	<p><u>Woods 50009 Digital Timer: Instruction Manual and Operation Guide</u></p> <p>Comprehensive guide for the Woods 50009 Indoor 7-Day Heavy Duty Digital Outlet Timer, covering setup, programming, and operation for efficient energy management.</p>

	<p>Woods Wireless Remote Control Outlet 50125/50125-R User Manual</p> <p>User manual for the Woods 50125/50125-R Wireless Remote Control Outlet. Provides instructions on installation, pairing, troubleshooting, specifications, safety warnings, and warranty information.</p>
	<p>N1507 Programmable Outdoor Timer: Setup and Programming Guide</p> <p>Comprehensive guide to setting up and programming the Noma N1507 7-Day programmable outdoor timer for controlling lights and appliances, including step-by-step instructions and features.</p>