

[Manuals.plus](#) /

› [RETROSUN](#) /

› RETROSUN AA59-00600A Replacement Remote Control User Manual for Samsung TVs

RETROSUN AA59-00600A

RETROSUN AA59-00600A Replacement Remote Control User Manual

For Samsung TV Models: UN22F5000AF, UN26EH4000, UN29F4000, UN32EH4050F, UN32EH5000F, UN32F5000AF, UN40F5000AF, UN46F5000AF, UN50F5000AF, PN43E440A2F, PN43E450A1F, PN51E440A2F

INTRODUCTION

This manual provides instructions for the RETROSUN AA59-00600A replacement remote control, designed for various Samsung TV models. This remote offers a direct replacement solution, requiring no programming or pairing for immediate use.

AA59-00600A Remote Control Replacement for **Samsung** TV

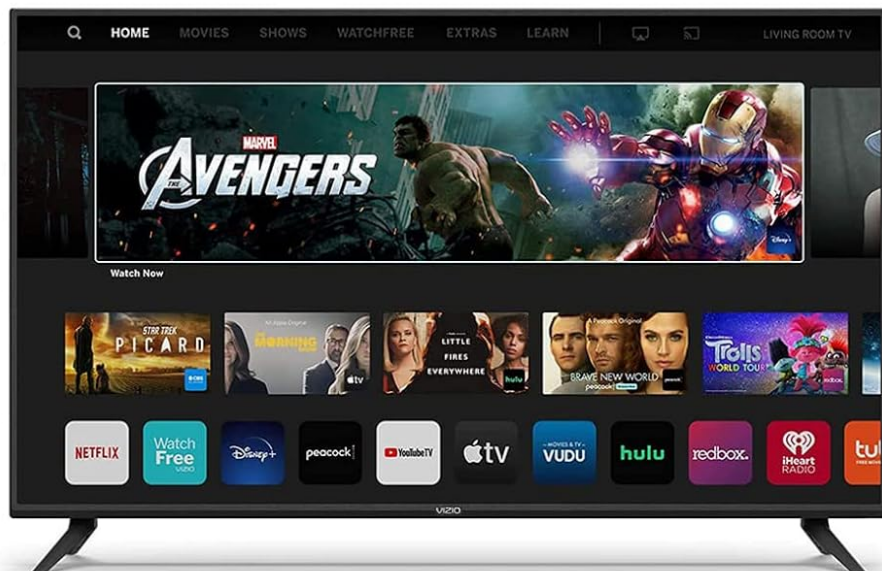 


Image: The AA59-00600A remote control shown alongside a Samsung television, illustrating its intended use as a replacement.

SETUP

Battery Installation

The AA59-00600A remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Requires two 1.5V AAA Batteries

(Batteries are not included)

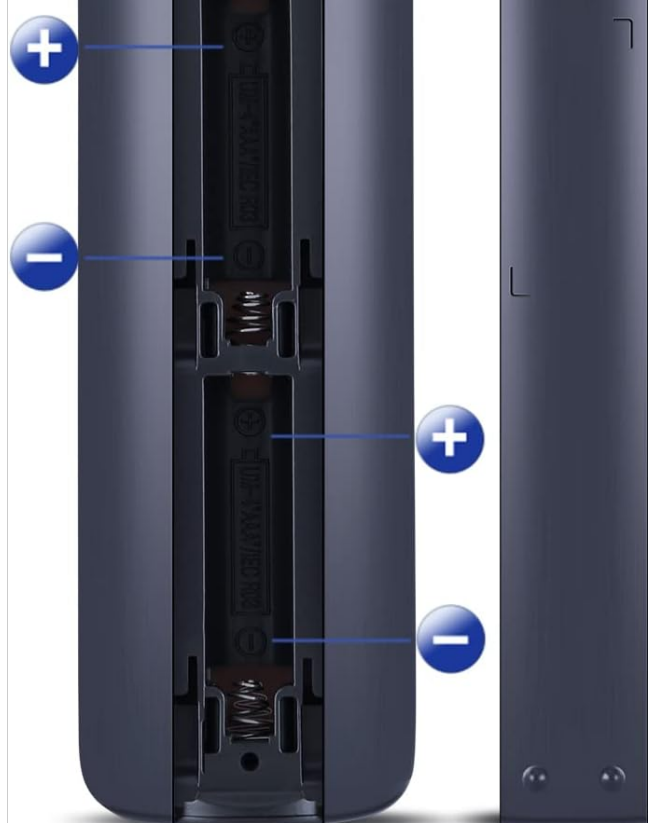 


Image: A diagram showing the correct orientation for inserting two AAA batteries into the remote control's battery compartment.

Initial Use

This remote control is designed to work immediately with compatible Samsung TV models without any programming or pairing. Once batteries are installed, point the remote at your TV and begin using it.

No programming or pairing needed.
work right out of box after putting batteries!

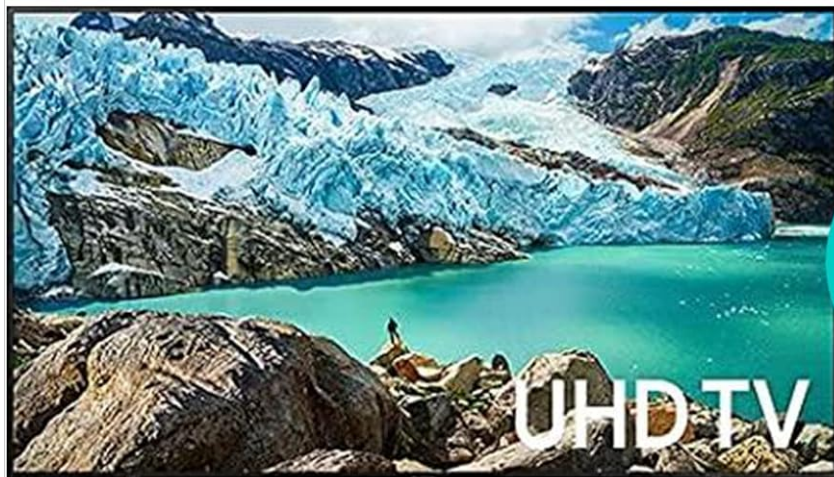 


Image: The remote control shown with a TV screen, indicating that no programming or pairing is required after battery installation.

OPERATING INSTRUCTIONS

The AA59-00600A remote control provides standard functions for your Samsung TV. Ensure a clear line of sight between the remote's infrared emitter and your TV's IR receiver for optimal performance.



Image: A clear view of the AA59-00600A remote control, highlighting its button layout and ergonomic design.

Key Functions:

- **Power ()**: Turns the TV on or off.
- **Source**: Selects input sources (HDMI, AV, etc.).
- **Number Buttons (0-9)**: Direct channel selection.
- **VOL (+/-)**: Adjusts volume up or down.
- **CH (up/down)**: Changes channels.
- **Mute**: Mutes or unmutes TV audio.
- **Menu**: Accesses the TV's main menu.
- **Tools**: Opens a quick menu for common functions.
- **Info**: Displays information about the current program.
- **Sleep**: Sets the TV sleep timer.
- **Directional Pad (Up, Down, Left, Right) & Enter**: Navigates menus and confirms selections.
- **Return**: Goes back to the previous screen or menu.

- **Exit:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV applications or menus.
- **P.SIZE, MTS, CC:** Picture size, Multi-Track Sound, Closed Captioning.
- **Play, Pause, Stop, Fast Forward, Rewind:** Media playback controls.

The remote utilizes infrared technology for long-distance and precise control, effective up to 10 meters (33 feet).

Long distance precise control

Strongest signal by Infrared technology, further transmission for multi-angle induction. Precisely control far from 10 meters / 33 feet.



Image: The remote control being used to operate a TV from a distance, demonstrating its long-range infrared capability.

MAINTENANCE

Cleaning

To maintain the remote control's performance and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.

- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the TV's IR receiver.
 - Verify that the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - This may indicate a faulty button or low battery power. Try replacing batteries.
 - Ensure the remote is clean and there is no debris obstructing the buttons.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the IR signal.
- **Remote does not control TV:**
 - Confirm your Samsung TV model is listed as compatible with the AA59-00600A remote control. While this remote is widely compatible, some specific models may require a different remote.
 - If your TV model is listed as compatible and the remote still does not work after battery replacement, contact customer support.

SPECIFICATIONS

Model Name	AA59-00600A
Brand	RETROSUN
Compatible Devices	Samsung Televisions (Specific models listed in introduction)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Material	ABS Plastic
Special Feature	Ergonomic design, No programming required

Button Quantity	25
-----------------	----



Image: A side-by-side view of the remote control, displaying its approximate length (6.88 inches), width (1.77 inches), and thickness (0.94 inches).

WARRANTY INFORMATION

Specific warranty details for the RETROSUN AA59-00600A remote control are not provided in the product information. Please refer to your purchase documentation or contact the seller directly for warranty terms and conditions.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your RETROSUN AA59-00600A replacement remote control, please contact us through the Amazon messenger tool. Our support team is available to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question