

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VICLLAX](#) /

› [VICLLAX Outdoor Roller Shade Instruction Manual for Model SR0406MOB](#)

VICLLAX SR0406MOB

VICLLAX Outdoor Roller Shade Instruction Manual

Model: SR0406MOB

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your VICLLAX Outdoor Roller Shade. Please read these instructions carefully before beginning installation to ensure proper setup and safe use of the product. Retain this manual for future reference.



Image 1: VICLLAX Outdoor Roller Shade in Mocha color, installed on a patio structure, providing shade next to a swimming pool.

2. SAFETY INFORMATION

- Always ensure the shade is securely mounted according to the instructions to prevent accidental detachment.
- Keep children and pets away from the operating mechanism during use.
- Do not attempt to modify the product. Use only original parts and accessories.
- In strong winds, it is recommended to retract the shade to prevent damage.
- Exercise caution when drilling into walls or ceilings to avoid electrical wires or plumbing.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing, please contact customer support.

PACKING

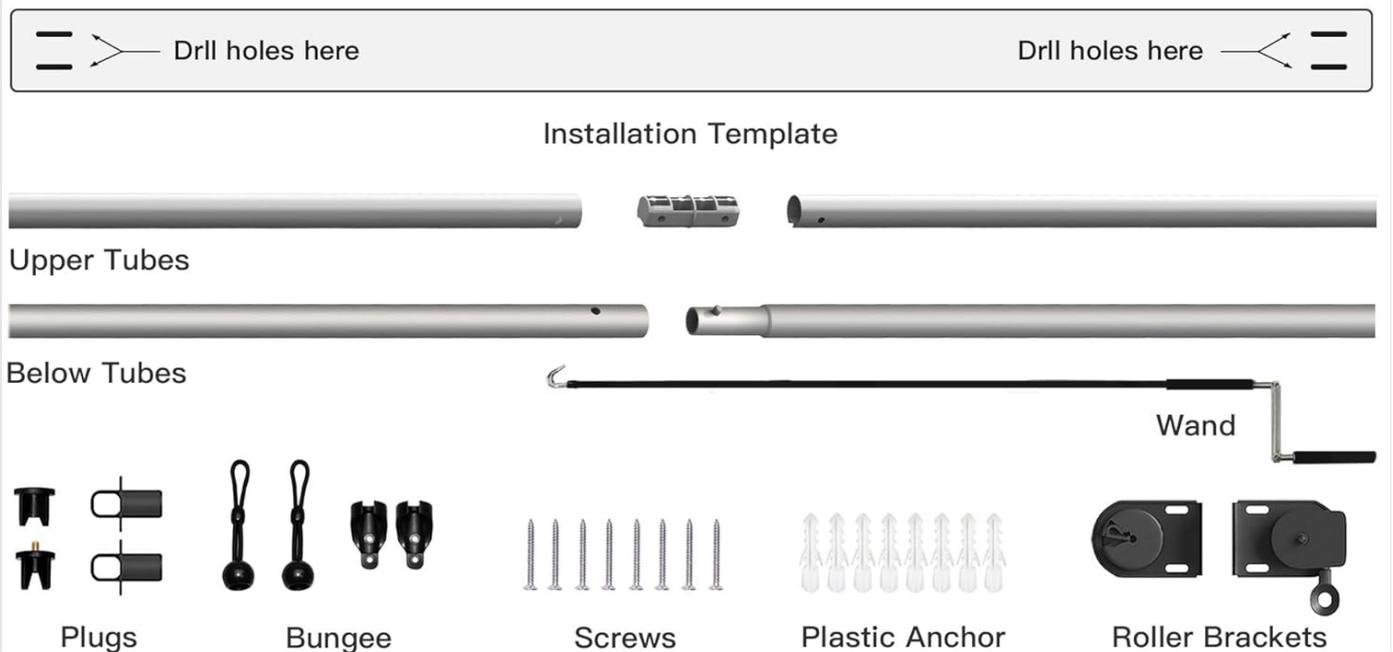
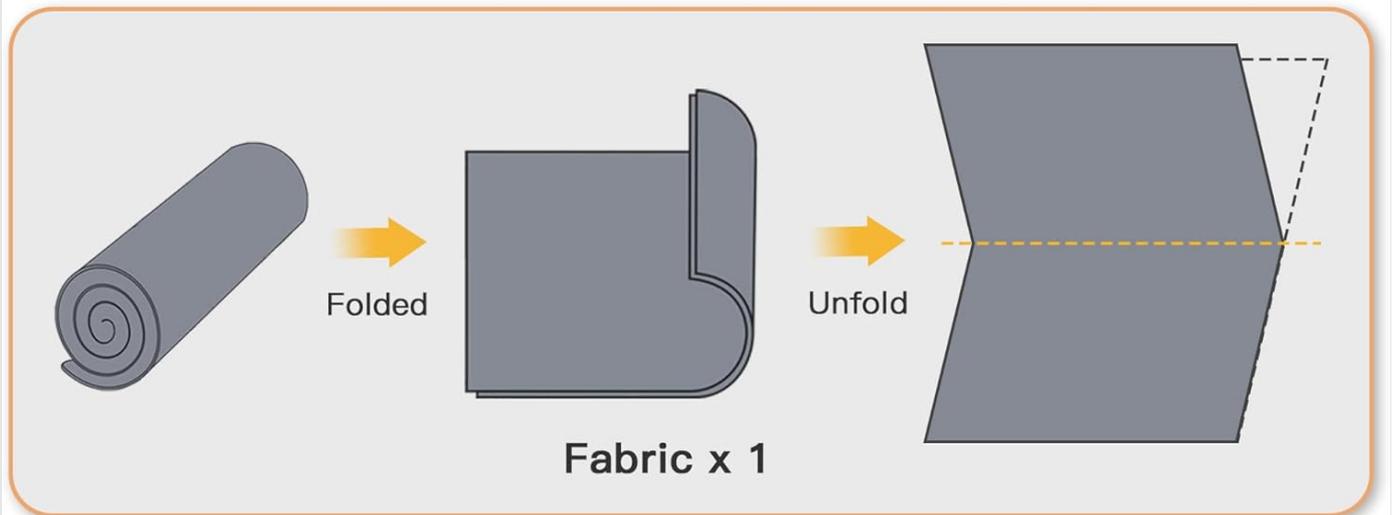


Image 2: Detailed diagram illustrating the contents of the product package, including the fabric, upper and lower tubes, connectors, operating wand, end plugs, bungee tie-downs, mounting screws, plastic anchors, and roller brackets.

- Shade Fabric (x1)
- Upper Tubes (x2 or x3, depending on size)
- Lower Tubes (x2 or x3, depending on size)
- Tube Connectors (quantity varies by size)
- Operating Wand (x1)
- End Plugs (x2)
- Bungee Cords (x2)
- Mounting Screws (quantity as needed)
- Plastic Anchors (quantity as needed)
- Roller Brackets (x2)
- Installation Template (x1)

4. SPECIFICATIONS

Feature	Detail
Product Dimensions	4 x 4 x 50 inches (for 4'W x 6'L model)
Item Weight	5.29 pounds (for 4'W x 6'L model)
Model Number	SR0406MOB
Material	200 GSM HDPE (High-Density Polyethylene)
UV Block	Up to 90%
Mounting Options	Ceiling Mount, Wall Mount

Refer to the size chart below for specific dimensions based on your shade model:



Listing Size (Feet)	Blind Maximum Height (Inch)	Blind Width Size (Inch)	Fabric Width Size (Inch)	Wand Length (Inch)
4'x6'	72"	48"	45.6"	47.2"
5'x6'	72"	60"	57.6"	47.2"
6'x6'	72"	72"	69.6"	47.2"
7'x8'	96"	84"	81.5"	47.2"
8'x8'	96"	96"	93.5"	47.2"
9'x8'	96"	108"	105.6"	47.2"
10'x8'	96"	120"	117.6"	47.2"

Image 3: Size chart detailing the dimensions for different VICLLAX Outdoor Roller Shade models, including blind width, fabric width, and wand length.

5. SETUP AND INSTALLATION

The VICLLAX Outdoor Roller Shade offers two primary installation methods: Wall Mount and Ceiling Mount. Choose the method that best suits your outdoor space.

5.1. Choose Your Mounting Method



Image 4: Comparison of Wall Mount and Ceiling Mount installation methods, highlighting their impact on light penetration and privacy.

- **Wall Mount:** The shade is mounted directly onto a vertical surface, such as a wall or post. This method may allow some light to penetrate from the sides.

- **Ceiling Mount:** The shade is mounted to an overhead horizontal surface, like a ceiling or the underside of a pergola beam. This typically provides better shading and privacy by reducing side light gaps.

5.2. Assembly Steps

Follow these steps for assembling your roller shade components:

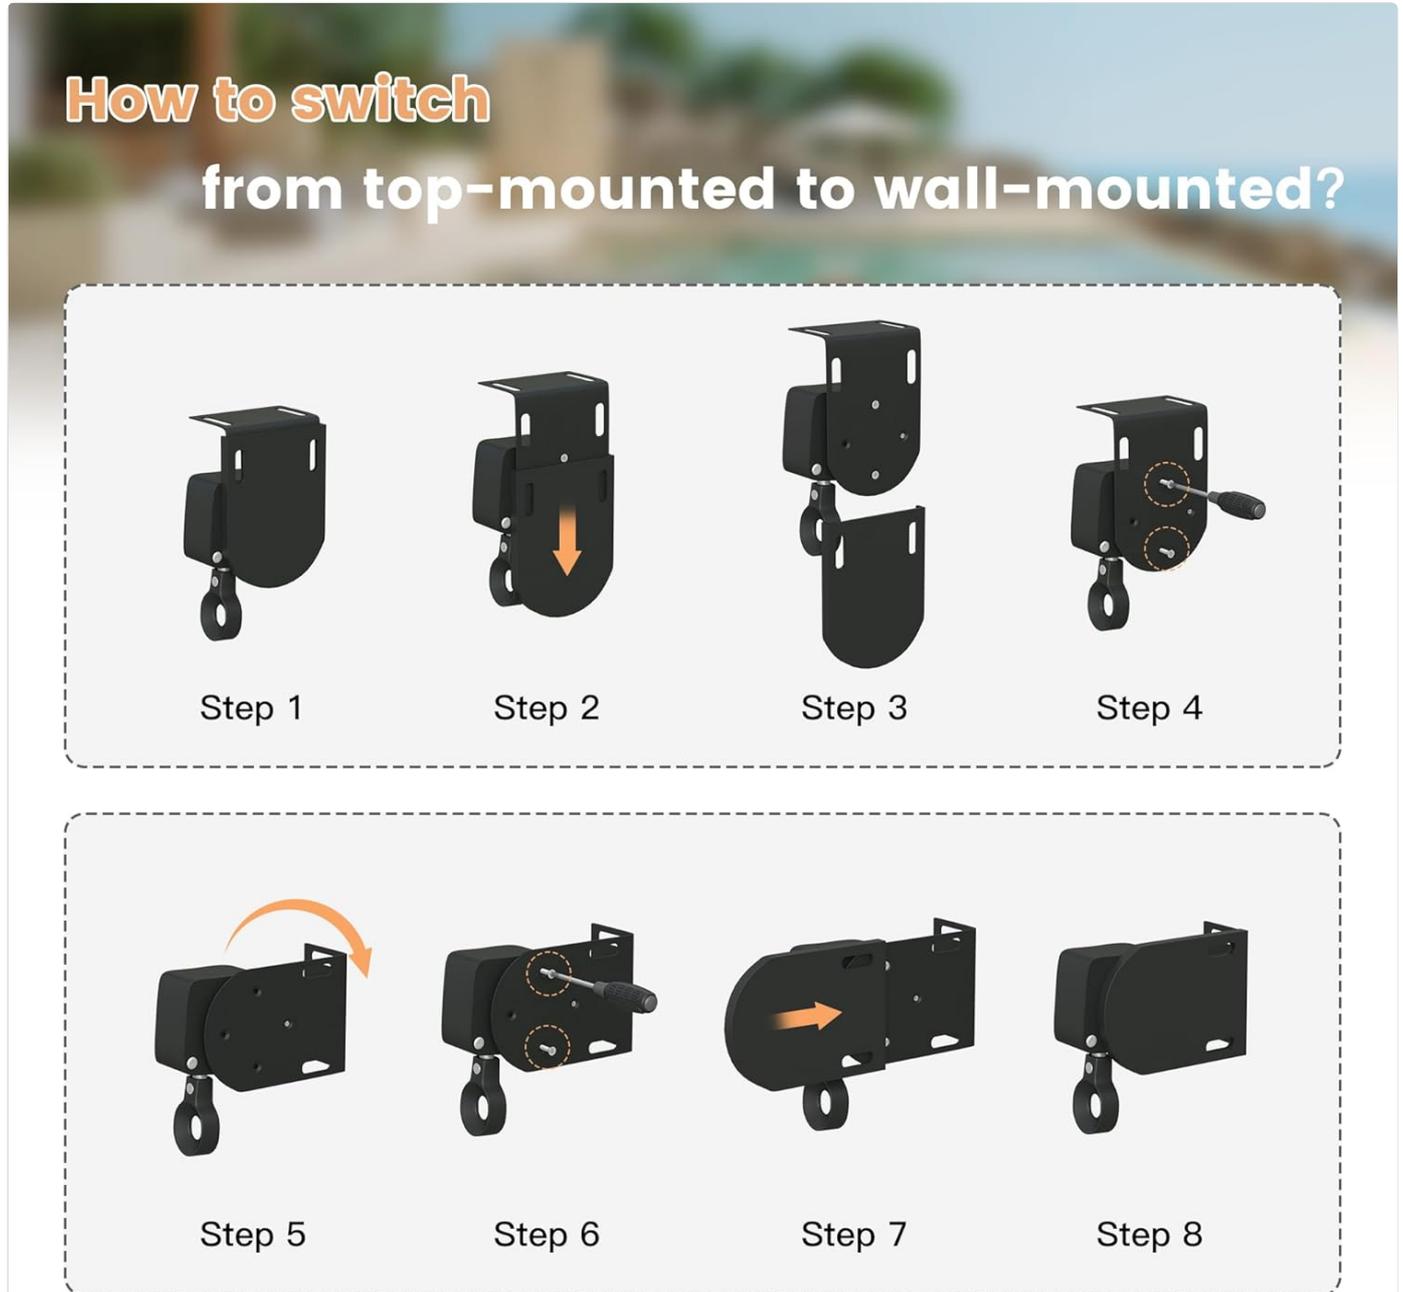


Image 5: Visual guide for the assembly process, showing how to connect the tube sections, attach the fabric to the tube, and secure the end plugs.

1. **Assemble Tubes:** The roller tube comes in multiple sections. Use the provided connectors to securely join the upper and lower tube sections. Ensure they are firmly connected to prevent sagging.
2. **Attach Fabric:** The shade fabric has a groove designed to slide into the assembled roller tube. Carefully insert the edge of the fabric into this groove along the entire width.
3. **Insert End Plugs:** Once the fabric is attached, insert the end plugs into both ends of the roller tube.
4. **Prepare Brackets:** Attach the roller brackets to your chosen mounting surface (wall or ceiling) using the provided screws and plastic anchors. Use the installation template to mark drill holes accurately. Ensure the brackets are level and spaced correctly to support the shade's width.
5. **Mount Shade:** Carefully lift the assembled shade and place it into the installed roller brackets. Ensure it clicks

securely into place.

6. **Attach Wand:** Connect the operating wand to the designated mechanism on one of the roller brackets.

For optimal performance, ensure all connections are tight and the shade is level after mounting.

6. OPERATING INSTRUCTIONS

Your VICLLAX Outdoor Roller Shade is designed for easy, cordless operation using a crank mechanism.



● Easy to Install

Control the shade up and down

● Bungee Tie Down

Keep the shade in the fixed position

Image 6: Close-up view demonstrating the ease of installation and the bungee tie-down system used to secure the shade in a fixed position.

1. **Raising the Shade:** Insert the hook of the operating wand into the loop on the roller mechanism. Turn the wand clockwise to raise the shade.
2. **Lowering the Shade:** Insert the hook of the operating wand into the loop on the roller mechanism. Turn the wand counter-clockwise to lower the shade.
3. **Securing the Shade:** The bottom rings of the shade are designed to be secured using the provided bungee cords.

Attach the bungee cords to the rings and anchor them to a fixed point (e.g., a railing or ground hook) to prevent the shade from flapping in the wind.



Image 7: The VICLLAX Outdoor Roller Shade fully extended, showcasing the operating wand and the bungee tie-down points at the bottom.

7. MAINTENANCE

- **Cleaning:** The HDPE fabric is weather-resistant. To clean, gently wipe with a damp cloth and mild soap. Rinse thoroughly with water and allow to air dry completely before retracting. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the mounting hardware, roller mechanism, and fabric for any signs of wear or damage. Ensure all screws are tight.
- **Weather Protection:** While designed for outdoor use, retract the shade during severe weather conditions (heavy rain, strong winds, snow) to prolong its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shade sags in the middle.	Tube connectors may not be fully secured, or the tube sections are not properly aligned.	Ensure tube sections are fully inserted into connectors and secured. Verify that the mounting brackets are level and provide adequate support across the shade's width.
Operating wand detaches easily.	The hook on the wand may not be fully engaged with the roller mechanism loop.	Ensure the wand's hook is securely inserted into the roller mechanism's loop before turning. Apply gentle, consistent pressure.
Shade does not roll up or down smoothly.	Obstruction in the rolling mechanism, or fabric is not aligned correctly.	Inspect the roller mechanism for any debris. Ensure the fabric is evenly wound on the tube and not catching on the brackets.
Shade flaps excessively in light wind.	Bungee cords are not used or not properly secured.	Utilize the provided bungee cords to secure the bottom of the shade to a fixed point. Ensure they are taut.

9. CUSTOMER SUPPORT

For any questions, missing parts, or assistance with your VICLLAX Outdoor Roller Shade, please contact our customer support team. We are committed to providing prompt resolution to any issues you may encounter.

Please refer to your purchase documentation for specific contact details or visit the official VICLLAX website for support information.