

barbecue BC-CHA-1068

Barbecue Magnus Comfort Charcoal Grill User Manual

Model: BC-CHA-1068

1. INTRODUCTION

Welcome to the Barbecue Magnus Comfort Charcoal Grill user manual. This guide provides essential information for the safe and efficient use, assembly, operation, and maintenance of your new charcoal grill. Please read this manual thoroughly before using the grill for the first time and keep it for future reference.

The Barbecue Magnus Comfort is designed for authentic barbecue experiences, featuring a robust construction and user-friendly design. Its spacious cooking surface is ideal for serving up to 14 people.

2. SAFETY INSTRUCTIONS

Always follow these safety guidelines to prevent injury or damage to the grill:

- Use the grill outdoors only, in a well-ventilated area.
- Keep children and pets away from the hot grill.
- Do not move the grill when it is in use or still hot.
- Use heat-resistant gloves when handling hot components.
- Ensure the grill is placed on a stable, level, non-combustible surface.
- Never use gasoline or kerosene to light charcoal. Use only charcoal starter fluid compliant with local regulations.
- Allow charcoal to cool completely before disposing of ash.

3. ASSEMBLY

The Barbecook Magnus Comfort grill requires assembly. Please follow the steps below carefully. Assembly typically takes about one hour.

3.1 Tools Required

- Phillips head screwdriver (PH2)
- Wrench (7mm and 10mm) or adjustable wrench

3.2 Assembly Steps

1. Unpack all components and verify against the parts list (not provided in this manual, refer to packaging).
2. Assemble the main frame and legs, ensuring all bolts are securely tightened. The grill stands at a perfect cooking height of 90 cm once assembled.
3. Attach the wheels to the designated leg assembly for easy mobility.
4. Mount the fire box and the enamelled steel body onto the frame.
5. Install the hinged lid, ensuring the soft touch handle is correctly positioned.
6. Attach the powder-coated side table and secure the stainless steel tool hooks.
7. Place the flexible XL cast iron grid into the fire box.
8. Insert the enameled charcoal starter and ash catcher.
9. Ensure the integrated thermometer in the lid is properly seated.



Image: The fully assembled Barbecue Magnus Comfort Charcoal Grill, showcasing its robust design and side table.



Image: The Barbecook Magnus Comfort Charcoal Grill positioned in an outdoor garden setting, ready for use.

4. OPERATION

4.1 Lighting the Charcoal

The Magnus Comfort features an enameled charcoal starter for effortless lighting.

1. Place charcoal briquettes or lump charcoal into the charcoal starter.
2. Apply a small amount of charcoal starter fluid (if desired and safe to use) or use natural fire starters.
3. Ignite the charcoal. Allow it to burn until covered with a light gray ash, indicating it's ready for cooking.
4. Carefully transfer the hot charcoal from the starter to the fire box using long-handled tongs.



Image: A person opening the hinged lid of the Barbecue Magnus Comfort grill, revealing the cooking surface.



Charcoal starter included

Image: A close-up view of the integrated charcoal starter, showing a hand operating its handle.

4.2 Grilling

The grill offers a versatile cooking space with a multi-level grill configuration.

- Place food directly on the cast iron grid.
- Utilize the multi-level design for different heat zones, allowing for simultaneous cooking of various items.
- Monitor internal grill temperature using the integrated thermometer located in the lid.
- Adjust airflow vents (if present, not explicitly mentioned but common for charcoal grills) to control temperature.

Cooking on 2 different levels



Image: Two steaks grilling on the multi-level cooking surface, demonstrating the grill's capacity.

Perfect ergonomic
cooking height of 90cm



Image: A person grilling food, highlighting the comfortable 90cm ergonomic cooking height.

Integrated thermometer



Image: A close-up of the integrated thermometer on the grill lid, showing temperature readings in Celsius and Fahrenheit.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Barbecook Magnus Comfort grill.

5.1 Cleaning the Grill Grate

- After each use, while the grill is still warm, use a wire brush to scrape off any food residue from the cast iron grid.
- For deeper cleaning, remove the grate once cooled and wash with warm, soapy water. Rinse thoroughly and dry immediately to prevent rust.
- Periodically season the cast iron grate with cooking oil to maintain its non-stick properties and prevent rust.

5.2 Ash Disposal

- Ensure all charcoal and ash are completely cooled before attempting to remove the ash catcher.
- Carefully slide out the ash catcher and dispose of the ash in a non-combustible container.
- Clean the ash catcher regularly to prevent buildup.

5.3 Exterior Cleaning

- Wipe down the enamelled steel fire box and powder-coated surfaces with a damp cloth and mild detergent.
- Avoid abrasive cleaners that could damage the finish.
- Store the grill in a dry, covered area when not in use to protect it from the elements.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Charcoal not lighting easily	Insufficient airflow; damp charcoal; improper starter fluid use.	Ensure vents are open; use dry charcoal; follow starter fluid instructions carefully.
Grill not reaching desired temperature	Not enough charcoal; vents closed; lid not properly sealed.	Add more charcoal; open vents fully; ensure lid is closed tightly.
Excessive smoke	Too much fat dripping onto coals; insufficient airflow.	Trim excess fat from meat; ensure proper airflow; use indirect heat if necessary.
Rust on cast iron grate	Improper drying or seasoning after cleaning; exposure to moisture.	Clean off rust with a wire brush, wash, dry thoroughly, and re-season with cooking oil. Store in a dry place.

7. SPECIFICATIONS

Feature	Detail
Model Number	BC-CHA-1068
Brand	Barbecook
Dimensions (L x W x H)	33.46 x 25.2 x 43.31 inches (85 x 64 x 110 cm)
Cooking Height	90 cm (35.4 inches)

Feature	Detail
Cooking Surface Area	2861 sq cm
Capacity	Serves up to 14 people
Material	Cast Iron (grid), Enamelled Steel (fire box), Powder Coated Steel (sidetable)
Weight	28 Kilograms (61.6 pounds)
Voltage (if applicable)	230 Volts
Assembly Required	Yes

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Barbecue website or contact their customer service department. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the [product page on Amazon](#) or contact Barbecue directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question