

[Manuals.plus](#) /

› [Dilwe](#) /

› Dilwe 4G LTE Portable WiFi Hotspot Router User Manual - Model Dilwepxbu3gz0oq

Dilwe Dilwepxbu3gz0oq

Dilwe 4G LTE Portable WiFi Hotspot Router User Manual

Model: Dilwepxbu3gz0oq

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Dilwe 4G LTE Portable WiFi Hotspot Router. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.





Figure 1: Dilwe 4G LTE Portable WiFi Hotspot Router. This image shows the compact white router from the front, highlighting its 1.44-inch LED display which indicates signal strength, battery level, Wi-Fi status, SSID, and password.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Dilwe 4G Router
- 1 x Rechargeable Lithium Battery (2100mAh)
- 1 x Charging Cable
- 1 x User Manual (this document)



Figure 2: Router and Charging Cable. This image displays the white portable router alongside its white USB charging cable, illustrating the complete set of essential components.

PRODUCT FEATURES

- **4G LTE Connectivity:** Supports B1/B3/B5/B40 bands for reliable mobile internet.
- **Portable Design:** Compact and lightweight, ideal for travel, camping, and outdoor use.
- **1.44-inch LED Display:** Provides real-time information on network status, battery, and Wi-Fi details.
- **SIM Card Slot:** Standard SIM card slot for easy installation.
- **2100mAh Battery:** Ensures extended usage and standby time.
- **Multi-User Support:** Allows up to 10 users to connect simultaneously.
- **Wide Compatibility:** Works with phones, laptops, desktops, and tablets.

SETUP GUIDE

1. **Remove the Back Cover:** Gently slide or pry off the back cover of the router.



Figure 3: Router with Back Cover Removed. This image shows the white router with its back cover detached, exposing the internal battery compartment and the standard SIM card slot.

2. **Insert the SIM Card:** Locate the standard SIM card slot. Carefully insert your activated SIM card into the slot until it clicks into place. Ensure the SIM card is oriented correctly as indicated by the diagram near the slot.



Figure 4: SIM Card Slot Detail. A close-up view of the router's internal SIM card slot, ready for a standard SIM card insertion.

3. **Insert the Battery:** Place the provided 2100mAh lithium battery into the battery compartment.
Important: Before inserting the battery, check for and remove any insulation sticker on the battery connectors. Failure to do so will prevent the router from powering on.
4. **Replace the Back Cover:** Align the back cover and gently press it back into place until it secures.
5. **Power On:** Press and hold the power button (usually located on the side) for a few seconds until the LED display illuminates.

OPERATING INSTRUCTIONS

Connecting to the Hotspot

1. Ensure the router is powered on and has established a 4G LTE connection (indicated by the signal strength icon on the LED display).
2. On your device (phone, laptop, tablet), open your Wi-Fi settings.
3. Look for the Wi-Fi network name (SSID) displayed on the router's LED screen. It typically starts with "4G-MiFi-

XXXX".

4. Select this network and enter the password (KEY) also shown on the router's LED screen.
5. Once connected, your device will have internet access through the router.

LED Display Information

The 1.44-inch LED display provides crucial information at a glance:

- **Signal Strength:** Bars indicating the strength of the 4G LTE signal.
- **Battery Level:** Icon showing the remaining battery charge.
- **Wi-Fi Status:** Indicates if Wi-Fi is active and if devices are connected.
- **SSID:** The name of your Wi-Fi network.
- **KEY:** The password for your Wi-Fi network.
- **ICCID:** SIM card identification number (may not always be displayed).



Figure 5: Router Side Buttons. This image provides a close-up of the side of the router, highlighting the physical buttons, likely for power

and WPS functions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the router. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device using the provided charging cable.
- **Avoid Water:** Keep the router away from water and high humidity.

TROUBLESHOOTING

Router does not power on:

- Ensure the battery is correctly inserted and fully charged.
- Check if the insulation sticker on the battery connectors has been removed.
- Try charging the device for at least 30 minutes before attempting to power it on again.

No internet connection:

- Verify that your SIM card is active and has a data plan.
- Check the signal strength icon on the LED display. If there is no signal, move to an area with better network coverage.
- Restart the router and your connected device.
- Ensure the correct APN settings are configured (if required by your mobile carrier). This may require accessing the router's web interface (refer to your carrier's instructions or the router's full manual for details).

Cannot connect to Wi-Fi:

- Double-check the SSID and password displayed on the router's LED screen. Passwords are case-sensitive.
- Ensure your device is within the Wi-Fi range of the router.
- Restart both the router and your connecting device.

SPECIFICATIONS

Feature	Detail
Model Number	Dilwepxbu3gz0oq
Material	ABS
Color	White
Screen	1.44 Inch LED Color Display
SIM Card Slot	Standard SIM Card
Battery Type	2100mAh Lithium Battery
4G LTE Band	B1/B3/B5/B40
3G UMTS Band	B1/B8

Wi-Fi Standard	802.11 b/g/n
Max Users	Up to 10
Item Weight	3.84 ounces
Package Dimensions	4.33 x 2.87 x 1.34 inches

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Dilwe customer service through their official channels. Keep your purchase receipt for warranty claims.

© 2023 Dilwe. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question