

Shark CS100J

Shark EVOPOWER SYSTEM STD Cordless Stick Vacuum Cleaner CS100JGR User Manual

Model: CS100J

1. INTRODUCTION

Thank you for purchasing the Shark EVOPOWER SYSTEM STD Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Shark EVOPOWER SYSTEM STD is a versatile cordless stick vacuum cleaner designed for efficient and comfortable cleaning. It features a multi-floor compatible head that prevents hair tangles and offers smooth maneuverability. The vacuum charges automatically when returned to its dock and converts to a handheld cleaner with a single touch for versatile use. Its one-touch dust disposal system ensures hygienic cleaning, and the dust cup and filter are washable for easy maintenance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to SharkNinja Operating LLC for examination, repair, or adjustment.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Use only Shark charger to recharge.
- Store the appliance indoors. Put away after use to prevent accidents.

3. PACKAGE CONTENTS

Your Shark EVOPOWER SYSTEM STD CS100JGR package includes the following components:

- Main Vacuum Unit
- Lithium-ion Battery
- Charging Dock / Accessory Stand (Note: This stand does not have an additional battery charging function.)
- Crevice Tool with Brush
- Soft Brush (Additional accessory)
- Scrubbing Brush (Additional accessory)



Shark（シャーク）は
アメリカ発の世界的な
掃除機ブランド

Image: Included brush accessories: soft brush and scrubbing brush, designed for specialized cleaning tasks.

4. SETUP

4.1 Assembly

1. **Attach the Main Unit to the Wand:** Align the main vacuum unit with the extension wand and push until it clicks securely into place.
2. **Attach the Floor Nozzle:** Connect the floor nozzle to the bottom of the extension wand, ensuring it clicks firmly.
3. **Place on Charging Dock:** Position the assembled vacuum cleaner onto the charging dock. Ensure the charging contacts align.

4.2 Charging the Battery

Before first use, fully charge the battery. The vacuum cleaner charges automatically when placed on its charging dock.

- Connect the charger to a power outlet.
- Place the vacuum cleaner onto the charging dock. The indicator lights on the main unit will illuminate to show charging status.
- A full charge typically takes approximately 3.5 hours.



掃除機を戻すだけで充電

Image: The Shark EVOPOWER SYSTEM STD vacuum cleaner docked on its charging stand, illustrating the automatic charging feature.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button located on the main unit to turn the vacuum cleaner on or off.

5.2 Using as a Stick Vacuum

For floor cleaning, use the vacuum in its stick configuration. The multi-floor compatible head is designed to effectively clean various surfaces, including hard floors and carpets, while preventing hair tangles.



しっかり心地よくお掃除できる
スタンダードモデル

Image: A person using the Shark EVOPOWER SYSTEM STD cordless stick vacuum cleaner on a wooden floor, demonstrating its ease of use.

この商品は「SharkNinja (シャークニンジャ)」公式ストア限定販売の追加アクセサリセットです。



ソフトブラシ

柔らかなブラシで、棚やテーブル、窓のフレームなどのゴミやほこりをやさしく取り除きます。



スクラビングブラシ

先端のスクラビングブラシで、カーペットやフロアマットからゴミをかき取ります。車内の掃除にも便利です。

Image: A split image showing the vacuum cleaning debris on a hard floor (top) and a person using the vacuum on a carpeted area (bottom), highlighting its powerful suction and multi-surface capability.

5.3 Smooth Maneuverability

The vacuum's head is designed to move smoothly in all directions, allowing for stress-free and flexible cleaning around furniture and obstacles.



Image: A person maneuvering the Shark EVOPOWER SYSTEM STD vacuum cleaner around a corner, demonstrating its flexible head and smooth operation.

5.4 Converting to Handheld

To convert the stick vacuum into a handheld cleaner, simply press the release button with one hand. This allows for quick cleaning of furniture, shelves, and other elevated surfaces.



Image: A sequence of images showing the Shark EVOPOWER SYSTEM STD converting from a stick vacuum to a handheld unit, highlighting its versatility for cleaning various surfaces like furniture and shelves.

5.5 Using Attachments

Attach the appropriate tool directly to the handheld unit or the end of the wand for specialized cleaning tasks:

- **Crevice Tool with Brush:** Ideal for cleaning tight spaces, corners, and delicate surfaces.
- **Soft Brush:** Use for gently removing dust and debris from shelves, tables, and window frames.
- **Scrubbing Brush:** Designed to dislodge and pick up debris from carpets and floor mats.

6. MAINTENANCE

6.1 Emptying the Dust Cup

The vacuum features a one-touch dust disposal system for hygienic emptying. Simply hold the handheld unit over a trash can and press the release button to open the dust cup and empty its contents without touching the debris.



Image: A hand holding the handheld vacuum unit over a trash can, demonstrating the one-touch dust disposal mechanism for hygienic emptying.

6.2 Cleaning the Dust Cup and Filter

Both the dust cup and the filter are washable. Regular cleaning helps maintain optimal suction power.

1. Remove the dust cup and filter from the main unit.
2. Rinse both components under cold running water until the water runs clear.
3. Allow them to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.



Image: A person rinsing the dust cup and filter under running water, illustrating the washable components for easy maintenance.

6.3 Cleaning the Brush Roll

The EVOPOWER SYSTEM STD features a brushless power fin designed to prevent hair tangles. While it significantly reduces tangles, occasional inspection and cleaning may still be necessary.

- Turn off the vacuum and disconnect it from the charging dock.
- Inspect the brush roll for any debris or hair that may have accumulated.
- Carefully remove any obstructions using scissors or your fingers.



強力な掃除力であらゆる床の
ゴミをキャッチ。

Image: A comparison image showing a traditional brush roller with tangled hair (top) versus the Shark's brushless power fin

(bottom) designed to prevent hair tangles and ensure thorough cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your Shark EVOPOWER SYSTEM STD, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Battery is not properly inserted	Charge the battery fully Ensure battery is securely clicked into place
Poor suction	Dust cup is full Filter is dirty Blockage in nozzle or wand	Empty the dust cup Clean the filter (refer to Maintenance) Check for and remove any blockages
Brush roll not spinning	Obstruction in brush roll Nozzle not properly attached	Remove any tangled hair or debris Ensure the floor nozzle is securely attached
Vacuum makes unusual noise	Blockage in airflow path Damaged component	Check for and remove any blockages in the nozzle, wand, or dust cup If noise persists, contact customer support

If the problem persists after trying these solutions, please contact Shark customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Manufacturer	Shark
Model Number	CS100J
Package Size	70 x 30 x 30 cm
Color	Steel Gray (Vacuum Cleaner + Brush Set)
Package Weight	1.9 kg
Filter Type	Cartridge
Recommended Use	Interior
Cordless	Yes
First Available Date	2023/1/15

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Shark website. Keep your purchase receipt as proof of purchase for any warranty claims.