

manuals.plus /

› [Fisher-Price](#) /

› [Fisher-Price Little People Light-Up Learning Garage Instruction Manual \(Model HLV87\)](#)

Fisher-Price HLV87

Fisher-Price Little People Light-Up Learning Garage Instruction Manual

Model: HLV87

1. PRODUCT OVERVIEW

The Fisher-Price Little People Light-Up Learning Garage playset offers an interactive experience for toddlers and preschool children aged 1 to 5 years. This electronic playset combines imaginative play with educational content, featuring multi-color lights, songs, sounds, and phrases across three Smart Stages learning levels.

The playset encourages children to engage in activities such as filling up, tuning up, and washing their toy cars, fostering storytelling and fine motor skills. It includes two character figures, two mechanic's tool play pieces, and a push-along toy car with an opening and closing hood.



Image: Child interacting with the Light-Up Learning Garage playset.

2. WHAT'S INCLUDED

Your Fisher-Price Little People Light-Up Learning Garage package contains the following items:

- 1 Playset (assembly required)
- 2 Character Figures
- 2 Play Pieces (mechanic's tools)
- 1 Push-along Toy Car with opening hood



Image: All included figures, car, and tools.

3. SETUP

Follow these steps to set up your Light-Up Learning Garage playset:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assembly:** Assemble the playset according to the visual instructions provided in the product packaging. Ensure all connections are secure.
3. **Battery Installation:** The playset requires 3 AA batteries (included). Locate the battery compartment, typically on the base or main electronic unit. Use a screwdriver to open the compartment, insert the batteries with correct polarity (+/-), and secure the cover.
4. **Placement:** Place the assembled playset on a flat, stable surface.

4. OPERATING INSTRUCTIONS

The Light-Up Learning Garage offers multiple interactive features:

4.1 Smart Stages Learning Levels

The playset features 3 Smart Stages learning levels that adapt to your child's development. These levels offer over 60 songs, sounds, and phrases that teach colors, the alphabet, shapes, and daily routines. Adjust the Smart Stages level using the selector switch on the playset's control panel.

4.2 Car Wash Activation

Send the toy car through the car wash section to activate fun multi-color lights and sounds. The lights change as the car moves through different stages of the wash.



Image: Car in the light-up car wash section.

4.3 Working Elevator

Use the working elevator to move figures and cars between different levels of the garage. Place a figure or car on the elevator platform and manually raise or lower it.

4.4 Racing Ramp

After a wash or tune-up, send cars racing down the integrated ramp for an exciting exit. The ramp provides a fun, dynamic element to playtime.



Image: Child sending car down the racing ramp.

4.5 Fueling and Tuning Station

The playset includes a fueling/charging station where children can pretend to fill up or charge their car. The toy car also features a hood that opens, allowing children to use the included mechanic's tools for pretend repairs and tune-ups.

4.6 Video Demonstrations

Video: An overview of the Fisher-Price Light-Up Learning Garage playset, demonstrating its various interactive features and learning content.

Video: A close-up demonstration of the key features of the car wash playset, highlighting interactive elements and play possibilities.

5. MAINTENANCE

To ensure the longevity and hygiene of your playset:

- **Cleaning:** Wipe down the playset and accessories with a damp cloth and mild soap. Do not immerse electronic parts in water.
- **Storage:** Store the playset in a dry, cool place away from direct sunlight when not in use.

- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

If you encounter any issues with your playset, consider the following:

- **No Sound/Lights:** Check if the batteries are correctly installed and not depleted. Replace with fresh AA batteries if necessary. Ensure the Smart Stages switch is in an active position.
- **Moving Parts Stuck:** Ensure no small objects are obstructing the elevator mechanism or car wash rollers.
- **General Malfunction:** Try turning the playset off and on again. If issues persist, refer to the Warranty & Support section.

7. SPECIFICATIONS

| | |
|-------------------------------------|---------------------------|
| Product Dimensions | 10 x 32.48 x 15.75 inches |
| Item Weight | 2.87 pounds |
| Item Model Number | HLV87 |
| Manufacturer Recommended Age | 12 months - 5 years |
| Batteries Required | 3 AA batteries (included) |
| Release Date | June 15, 2023 |
| Manufacturer | Fisher-Price |

8. WARRANTY & SUPPORT

For warranty information, product support, or to purchase additional accessories, please visit the official Fisher-Price website or contact their customer service department. You can also visit the [Fisher-Price Store on Amazon](#) for more products and information.