

COSTWAY 1

COSTWAY 4-in-1 Baby Walker Instruction Manual

Model: 1

1. IMPORTANT SAFETY INFORMATION

Please read this entire manual before assembly and use of the COSTWAY 4-in-1 Baby Walker. Keep this manual for future reference.

- Always supervise your child when using the walker. Never leave a child unattended.
- Ensure all parts are securely assembled before each use.
- Do not use the walker near stairs, steps, or uneven surfaces.
- Keep the child away from hot liquids, electrical cords, and other hazards.
- The walker is designed for children aged 6 to 18 months, with a maximum weight capacity of 11 kg.
- Requires 2 AA batteries (not included) for interactive features.

2. PRODUCT FEATURES

The COSTWAY 4-in-1 Baby Walker is designed to support your child's development through various stages.

- **4-in-1 Multifunctional Design:** This walker features a 4-in-1 design, including a traditional seated walker mode, a push-behind mode for early steps, a slide-on toy mode, and a ride-on baby car mode, meeting various needs of your child.
- **Safety and Comfort:** Equipped with a headrest for protection, five anti-slip pads on the bottom, and four anti-slip wheels for enhanced safety. The seat cover is washable, and the backrest is ergonomically designed.
- **Adjustable Height and Speed:** Features 3 height settings to adapt to your child's growth. The two front wheels are silent, universal wheels that allow 360-degree rotation, and the speed can

be adjusted via the two rear wheels.

- **Interactive Design:** Includes a steering wheel, gears, 2 light buttons, and 2 rearview mirrors, resembling a small baby car. Music can also be played.
- **Space-Saving Design:** Thanks to its foldable design, the walker can be easily stored compactly when not in use.

Gut gemachte Details



This image illustrates the four versatile modes of the COSTWAY baby walker: a traditional seated walker, a push-behind walker for early steps, a slide-on toy, and a ride-on baby car.



Laufwagen-
-Modus



Push-behind
Modus

4-in-1- Design



Schiebewagen-Modus



Rollender Spielzeugauto-Modus

Detailed view highlighting the ergonomic backrest for comfort, the interactive music box with lights, and the smooth, child-friendly surfaces of the walker.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your COSTWAY 4-in-1 Baby Walker.

1. Unpack all components and ensure all parts are present.
2. Attach the base frame to the main body, ensuring a secure click.
3. Insert the seat unit into the designated slots until it is firmly in place.
4. Install the interactive play tray by aligning it with the front of the walker and pressing down until it locks.
5. Insert 2 AA batteries (not included) into the battery compartment of the play tray.
6. Adjust the height to the desired level using the adjustment buttons.

Faltbares Design



The image shows the step-by-step process of folding the walker, emphasizing its compact design for convenient transport and space-saving storage. Reverse these steps for initial setup.

4. OPERATING INSTRUCTIONS


4.1. Adjusting Height

The walker offers 3 height settings to accommodate your child's growth.

1. Locate the height adjustment buttons on the side of the walker frame.
2. Press the buttons and simultaneously raise or lower the walker to the desired height.
3. Ensure both sides are locked into place at the same height before use.

3 einstellbare Höhen

Wächst mit Ihrem Kind

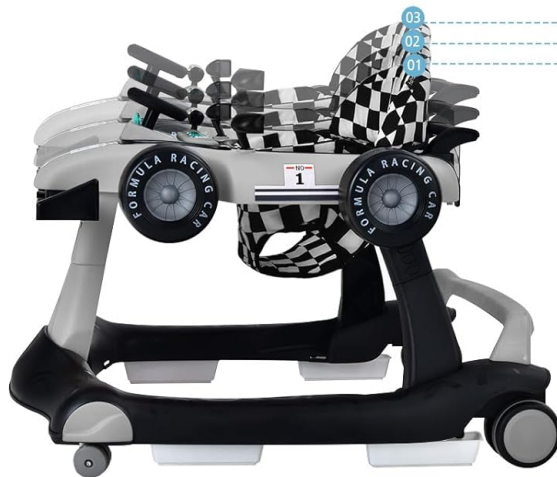

		Stufe 3 55,5cm
	Stufe 2 53,5cm	
Stufe 1 50,5cm		



Bequemes & waschbares
Sitzkissen mit weichem
Schwamm gepolstert



Knopf für verstellbare

This image demonstrates the three adjustable height levels (50.5cm, 53.5cm, 55.5cm) of the walker, designed to grow with your child. It also shows the comfortable, washable seat cushion with soft sponge padding and the adjustment button.

4.2. Adjusting Wheel Speed

The two rear wheels can be adjusted to control the walker's speed.

- To increase speed, turn the rear wheels counter-clockwise.
- To slow down or lock the wheels, turn them clockwise.



This image highlights the silent, universal front wheels that allow 360-degree rotation and the two adjustable rear wheels. It explains that turning the rear wheels counter-clockwise increases speed and clockwise slows down or locks the wheels.

4.3. Using Interactive Features

The play tray includes a steering wheel, gears, and light buttons for interactive play. Ensure 2 AA batteries are installed for these features to function.

- Press the light buttons to activate lights and sounds.
- Turn the steering wheel and move the gear lever for engaging play.

4.4. Converting Modes

The walker can be converted between its four modes:

- **Seated Walker Mode:** For babies learning to take their first steps while seated.
- **Push-Behind Mode:** For toddlers who are more confident in walking and can push the walker.
- **Slide Mode:** Allows the child to sit and slide along the floor.
- **Baby Car Mode:** Transforms into a ride-on car for independent play.

Refer to the assembly instructions for specific steps on converting between modes.



Two children are shown interacting with the walker, one using it as a push-behind aid for walking practice, and another sitting on it in the ride-on car mode.

5. MAINTENANCE

5.1. Cleaning

- The seat cover is washable. Remove it from the frame and wash according to fabric care instructions.
- Wipe plastic parts with a damp cloth and mild soap. Do not use abrasive cleaners.
- Ensure all parts are dry before reassembly or storage.

5.2. Storage

When not in use, the walker can be folded for compact storage.

- Fold the walker as shown in the assembly section.
- Store in a dry, cool place away from direct sunlight.

6. TROUBLESHOOTING

- **Walker not moving smoothly:** Check wheels for debris. Ensure rear wheels are not locked.
- **Interactive features not working:** Verify batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Difficulty adjusting height:** Ensure adjustment buttons are fully pressed and no obstructions are present.

7. SPECIFICATIONS

Feature	Detail
Model Number	1
Product Dimensions	73 x 64 x 55.5 cm
Weight	4.3 kg
Color	Grey
Recommended Maximum Weight	11 Kilograms
Material Type	Polypropylene (PP), Polyester sponge
Material Composition	PP, polyester, foam
Style	Car
Manufacturer	COSTWAY
Age Range (description)	Child (6-18 months)
Maximum Height	55.5 Centimeters
Country/Region of Origin	China

Empfohlenes Alter: 6-18 Monate



An overview of the walker's dimensions (73cm length, 64cm width, 55.5cm height) and its folded size (73cm length, 64cm width, 29cm height), along with the recommended age range of 6-18 months.



This image displays the walker in various colors (red, blue, yellow) and includes a specifications table detailing color, material, dimensions, weight, load capacity, recommended age, and battery type.

8. WARRANTY INFORMATION

COSTWAY products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or contact customer support.

9. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your COSTWAY 4-in-1 Baby Walker, please contact COSTWAY customer support through the retailer where the product was purchased or visit the official COSTWAY website for contact information.