

Philips Domestic Appliances HR3770/10

Philips Flip&Juice High-Speed Mixer 7000 Series User Manual

Model: HR3770/10 | Brand: Philips Domestic Appliances

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Philips Flip&Juice High-Speed Mixer 7000 Series (Model HR3770/10). Please read this manual thoroughly before first use and retain it for future reference.

The Philips Flip&Juice High-Speed Mixer is designed to combine both blending and juicing functionalities into a single appliance, offering versatility for preparing a wide range of beverages and food items, from smoothies and juices to nut butter and soups.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Always operate the appliance on a flat, stable surface.
- Be careful when handling the sharp blades, emptying the jug, and during cleaning.
- Do not process hot liquids in the blender without proper ventilation, as pressure buildup can cause the lid to eject and result in burns.

3. PRODUCT OVERVIEW AND COMPONENTS

Your Philips Flip&Juice High-Speed Mixer comes with several components designed for versatile food preparation. Familiarize yourself with these parts before use.



Image 3.1: The Philips Flip&Juice High-Speed Mixer shown with its main unit, blender jug, juicer attachment, two portable cups, and a tamper tool.

Key Components:

- **Motor Unit:** The base of the appliance containing the 1500W motor and control panel.
- **Blender Jug:** A 2-liter capacity jug with ProBlend Ultra technology, featuring sharp and serrated knives and a ribbed design for optimal blending.
- **Juicer Attachment:** Converts the blender into a centrifugal juicer for extracting fresh juice.
- **Lid:** For covering the blender jug during operation.
- **Tamper:** Used to push ingredients down towards the blades during blending (ensure lid is on and tamper is inserted through the opening).
- **Portable Cups:** For blending and taking drinks on the go.

4. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (blender jug, lid, juicer attachment, portable cups, blades) in warm soapy water, then rinse and dry thoroughly.

4.1 Assembling for Blending:

1. Place the motor unit on a stable, flat surface.
2. Ensure the blade unit is securely attached to the bottom of the blender jug.
3. Place the blender jug onto the motor unit. Turn it clockwise until it locks into place.
4. Add your ingredients to the jug. Do not exceed the maximum fill line.
5. Place the lid securely on the blender jug. Ensure the measuring cup is inserted into the lid opening.

4.2 Assembling for Juicing (Flip&Juice Technology):

The unique Flip&Juice technology allows you to switch between blending and juicing modes.



Flip&Juice-teknik

Kombinerar mixning och juicering
i en och samma lösning

Image 4.1: The blender jug is shown in a rotating motion, illustrating the Flip&Juice technology which allows the appliance to switch between blending and juicing functions by reorienting the jug.

1. Place the motor unit on a stable, flat surface.
2. Attach the juicer attachment to the motor unit, ensuring it is securely locked.
3. Place the blender jug (with blade unit attached) onto the juicer attachment. The jug will be inverted for juicing.
4. Add fruits or vegetables to the juicer's feeding tube.
5. Ensure a glass or container is placed under the juice spout to collect the juice.





Image 4.2: The Philips Flip&Juice High-Speed Mixer is shown in operation, with the blender jug inverted and attached to the juicer component, actively dispensing fresh orange juice into a glass.

5. OPERATING INSTRUCTIONS

Once assembled, plug the appliance into a power outlet. The control panel will illuminate.



Image 5.1: A close-up of the Philips Flip&Juice mixer's control panel, displaying various quick selection program icons around a central digital timer, indicating ease of use for different preparations.

5.1 Using Quick Selection Programs:

The mixer features a quick selection menu with pre-set programs for various preparations. These programs optimize speed and duration for consistent results.

- Select the desired program icon on the control panel (e.g., for smoothies, soups, nut butter, or crushed ice).
- Press the start button. The appliance will run through the pre-set cycle and stop automatically.

5.2 Manual Operation and Speed Control:

For manual control, turn the central dial to adjust the speed. The appliance offers 8 speeds for precise control over blending and juicing.

- Turn the dial clockwise to increase speed, counter-clockwise to decrease.
- Use the pulse function (P) for short bursts of power, ideal for chopping or quick mixing.

5.3 ProBlend Ultra Technology:

The ProBlend Ultra technology ensures maximum variety in taste and consistency. It combines a powerful 1500W motor, specially designed sharp and serrated knives, and a ribbed jug design to optimize ingredient flow and blending performance.



ProBlend Ultra-teknik

Tre specialdesignade funktioner arbetar tillsammans för att skapa den maximala variationen av smak och konsistens

Image 5.2: An internal view of the Philips Flip&Juice blender jug, highlighting the ProBlend Ultra technology with its powerful motor and uniquely designed sharp and serrated blades, effectively processing ingredients into a smooth pink mixture.

5.4 HomeID App Integration:

Enhance your experience with the HomeID app, which offers a variety of healthy recipes and options for your favorite dishes. The app can guide you through preparing nutritious meals and desserts.

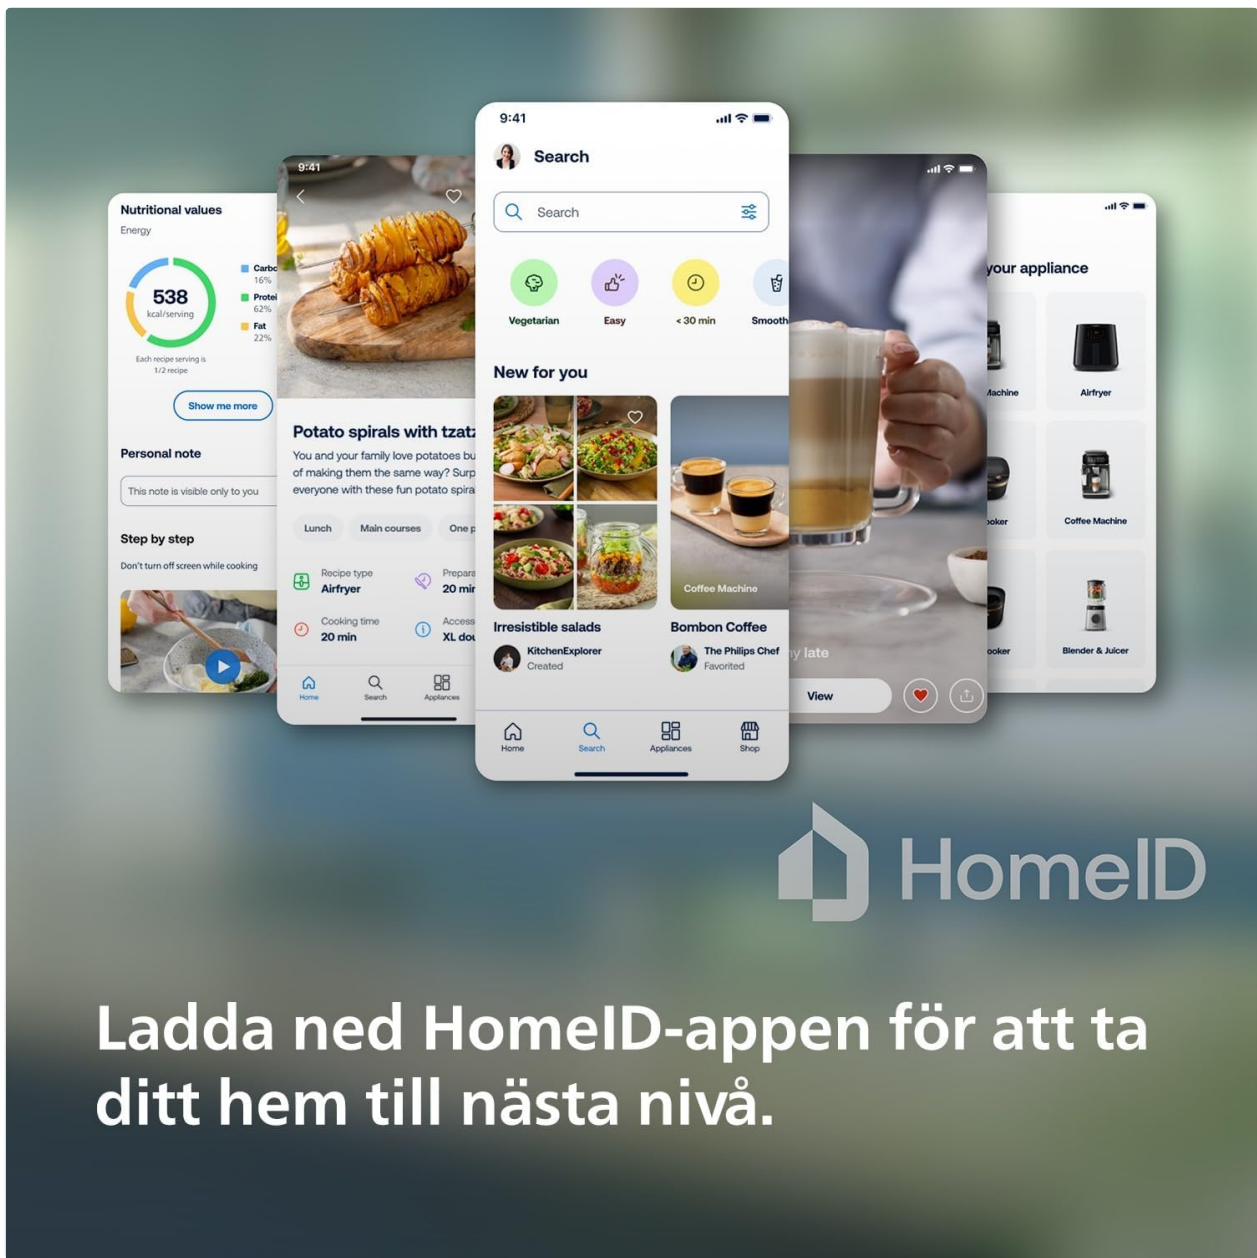


Image 5.3: Multiple mobile phone screens displaying the HomeID app interface, showcasing various recipe suggestions, nutritional information, and appliance control options, emphasizing smart home integration.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance. Always unplug the mixer before cleaning.

6.1 Quick Cleaning Function:

The mixer features a dedicated quick cleaning function for convenience.



Snabbrengöringsfunktion

Automatisk rengöring på 2 minuter

Image 6.1: The Philips Flip&Juice blender jug is shown with foamy water inside, indicating the quick cleaning function is in progress, designed for automatic cleaning in 2 minutes.

1. After use, rinse the jug.
2. Fill the jug with warm water and a drop of dish soap.
3. Select the quick cleaning program on the control panel. The appliance will run a short cycle to clean itself.
4. Rinse the jug thoroughly afterwards.

6.2 Manual Cleaning and Dishwasher Safety:

For a more thorough cleaning, or for parts not suitable for the quick clean function:



Diskmaskinssäker

Skölj enkelt av eller sätt i diskmaskinen för en mer grundlig rengöring.

Image 6.2: Detached components of the Philips Flip&Juice mixer, including the juicer filter and blade unit, are being rinsed under running water in a sink, illustrating their easy-to-clean and dishwasher-safe design.

- **Motor Unit:** Wipe with a damp cloth. Never immerse in water.
- **Blender Jug, Lid, Juicer Attachment, Portable Cups, Blades:** These parts are dishwasher safe. Alternatively, wash them by hand in warm soapy water using a brush for hard-to-reach areas. Be extremely careful when handling the sharp blades.
- Dry all parts thoroughly before storing.

7. TROUBLESHOOTING

If you encounter issues with your Philips Flip&Juice High-Speed Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; jug/attachment not assembled correctly; overheating.	Ensure power cord is securely plugged in. Check that the blender jug or juicer attachment is correctly locked onto the motor unit. If overheated, unplug and let cool for 30 minutes.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use the tamper to push ingredients towards the blades.
Leakage from the jug.	Lid not properly secured; blade unit not tightened; jug overfilled.	Ensure the lid is securely placed. Check that the blade unit is tightly screwed onto the jug. Do not exceed the maximum fill line.
Unusual noise or odor.	Foreign object in jug; motor strain; internal issue.	Immediately turn off and unplug. Check for any foreign objects. If the issue persists after removing objects, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Philips Customer Support.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	HR3770/10
Brand	Philips Domestic Appliances
Power / Wattage	1500 watts
Voltage	220 Volts
Capacity	2 litres
Number of Speeds	8
Special Features	Adjustable Speed Control, Automatic Cleaning, Flip&Juice Technology, ProBlend Ultra Technology, HomeID App compatibility
Material	Plastic
Colour	Blackone
Product Dimensions (L x W x H)	20 x 18 x 42 cm
Weight	6 kg

9. WARRANTY AND SUPPORT

Philips Domestic Appliances products are manufactured to the highest standards and come with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period applicable in your region.

For product support, spare parts, or service, please visit the official Philips Domestic Appliances website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Online Support: www.philips.com/support

Philips Domestic Appliances Store: [Visit the Philips Domestic Appliances Store on Amazon](#)