

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LG](#) /
- › [LG AKB76040302 Remote Control User Manual](#)

## LG AKB76040302

# LG AKB76040302 Remote Control User Manual

## INTRODUCTION

---

This manual provides instructions for the LG AKB76040302 OEM remote control, designed for use with select LG televisions. This remote offers a comfortable grip and intuitive button layout for easy control of your TV functions.



An image of the LG AKB76040302 remote control, featuring its black finish and the layout of its 25 buttons, including power, channel, volume, and navigation controls.

## PRODUCT FEATURES

- **Ergonomic Design:** Comfortably control your LG TV with this ergonomically designed remote.
- **Infrared Technology:** Enjoy seamless connectivity with your LG TV using infrared technology.
- **Black Finish:** Blends perfectly with your LG TV's sleek design.
- **25 Buttons:** Easy navigation with a wide range of buttons for various functions.
- **Battery Operated:** Requires 2 AAA batteries (not included) for operation.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Close the battery cover by sliding it back into place until it clicks securely.

*Note: Batteries are not included.*

## OPERATING

---

### 1. Basic Operation

- Point the remote control directly at your LG television.
- Press the Power button to turn the TV on or off.
- Use the Channel Up/Down buttons to change channels.
- Adjust the volume using the Volume Up/Down buttons.
- Navigate menus and select options using the directional arrow buttons and the OK/Enter button.
- Access specific functions like Home, Settings, or Input by pressing the corresponding dedicated buttons.

## MAINTENANCE

---

### 1. Battery Replacement

- Replace batteries when the remote control's response becomes inconsistent or stops working.
- Follow the battery installation steps outlined in the "Setup" section.
- *Important: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.*

### 2. Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials, as these can damage the remote.

## TROUBLESHOOTING

---

### 1. Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Remote Sensor:** Confirm the TV's remote sensor is not blocked.
- **TV Compatibility:** Verify that the remote control model AKB76040302 is compatible with your specific LG TV model.

### 2. Poor Remote Range

- **Battery Level:** Low batteries can reduce the remote's effective range. Replace them if necessary.
- **Interference:** Strong light sources (e.g., direct sunlight, fluorescent lights) or other infrared devices can interfere with the remote's signal. Try operating the remote in a different environment.

## SPECIFICATIONS

<b>Brand</b>	LG
<b>Model Name</b>	AKB76040302
<b>Model Number</b>	AKB76040302
<b>Connectivity Technology</b>	Infrared
<b>Compatible Devices</b>	Television
<b>Color</b>	Black
<b>Button Quantity</b>	25
<b>Controller Type</b>	Button Control
<b>Battery Type</b>	AAA (2 required, not included)
<b>Special Feature</b>	Ergonomic

## WARRANTY

---

This product is covered by a 90-day limited warranty. Please refer to the warranty documentation provided with your purchase for full details.

## SUPPORT

---

For further assistance or specific inquiries regarding your LG television's compatibility, please refer to your television's user manual or visit the official LG support website.