

[Manuals.plus](#) /

› [Razor](#) /

› Razor MX125 Dirt Rocket Electric-Powered Bike User Manual

Razor MX125

Razor MX125 Dirt Rocket Electric-Powered Bike User Manual

Model: MX125

Brand: Razor

1. SETUP AND INITIAL PREPARATION

Your Razor MX125 Dirt Rocket comes mostly pre-assembled for your convenience. Follow these steps to prepare your bike for its first ride.

1.1 Assembly

Assembly is straightforward and typically takes about 5 minutes. The necessary tools are included. Attach the handlebar and ensure all bolts are securely tightened. Verify that the tires are properly inflated to the recommended pressure.



Figure 1: Fully assembled Razor MX125 Dirt Rocket.

1.2 Initial Charging

Before the first use, it is crucial to charge the battery for at least 12 hours. Locate the charging port near the power button on the bike's body. Use the provided charger and ensure it is securely connected. Do not store the bike in temperatures below freezing (32°F/0°C) as this can permanently damage the battery.



Figure 2: Side view of the MX125, highlighting the battery compartment and foot pegs.

1.3 Foot Pegs and Kickstand

The MX125 features foldable foot pegs for safety and convenience. Ensure they are properly extended before riding and folded up for storage to prevent tripping hazards. The metal kickstand provides stable parking for the bike.

2. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and safety guidelines before operating the Razor MX125 Dirt Rocket.

2.1 Powering On and Off

To power on the bike, simply press the red power button located on the top frame near the seat. The button will illuminate when the bike is active. To turn off, press the button again.

2.2 Controls

The MX125 features a twist-grip throttle on the right handlebar for acceleration. Twist it gently to engage the motor. The hand-operated rear brake is located on the left handlebar. Squeeze the lever to apply the brake. The brake system is designed for immediate stopping, even at maximum speed.



Figure 3: Front view of the MX125, showing the handlebar and controls.

2.3 Riding Performance

The MX125 can reach speeds of up to 8 mph (13 km/h) and provides up to 40 minutes of continuous use on a full charge. Its authentic motocross geometry and knobby tires are designed for off-road adventures, offering better balance control and traction.



Figure 4: A child enjoying a ride on the Razor MX125.

2.4 Official Product Video

Video 1: Official Razor MX125 Ride Video. This video demonstrates the bike's features and performance in action.

3. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Razor MX125 Dirt Rocket.

3.1 Battery Care and Charging

Always charge the battery after each use to maintain its health. Avoid completely draining the battery before recharging. Store the bike in a dry environment at moderate temperatures to prevent battery damage.

3.2 Chain Lubrication

The MX125 features a real chain drive. Periodically inspect the chain for any debris or rust and apply a suitable chain lubricant to ensure smooth operation and prevent wear.

3.3 Tire Pressure

Check the tire pressure regularly. The 12-inch pneumatic, knobby tires require proper inflation for optimal performance, traction, and rider safety.

4. TROUBLESHOOTING

If you encounter any issues with your Razor MX125, please refer to the following common troubleshooting tips.

- **Bike not turning on:** Ensure the power button is fully pressed and illuminated. Check if the battery is charged.
- **Loss of power/speed:** This may indicate a low battery. Recharge the bike fully. Ensure the rider's weight does not exceed the maximum limit.
- **Brake issues:** Check the brake lever and cable for any obstructions or damage. Ensure the brake is properly adjusted.

For more detailed troubleshooting or persistent issues, please contact Razor customer support.

5. SPECIFICATIONS

Feature	Detail
Item Package Dimensions L x W x H	30 x 21.6 x 11.2 inches
Package Weight	16.6 Kilograms
Item Dimensions LxWxH	36.42 x 21.46 x 25.16 inches
Item Weight	29.7 Pounds
Brand Name	Razor
Model Name	MX125
Color	Blue
Material	Aluminum
Suggested Users	unisex-teen
Number of Items	1
Manufacturer	Razor
Part Number	15118244
Included Components	Bike
Size	Large
ASIN	B0BSP2864L
Date First Available	January 19, 2023

6. WARRANTY AND SUPPORT

For comprehensive information regarding your product's warranty, safety guidelines, and detailed operational instructions, please refer to the official User Manual PDF.

Download Official User Manual (PDF)

For additional support or to explore more Razor products, visit the official Razor Store:

[Visit the Razor Store](#)

© 2023 Razor. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question