

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher-Price](#) /
- › [Fisher-Price Laugh & Learn Smart Stages Tablet User Manual](#)

Fisher-Price HVY74

Fisher-Price Laugh & Learn Smart Stages Tablet User Manual

Model: HVY74

1. INTRODUCTION

The Fisher-Price Laugh & Learn Smart Stages Tablet is an interactive electronic learning toy designed for toddlers. It features a pretend tablet computer with various interactive elements to engage young children in learning through play. This manual provides essential information for the safe and effective use of your Smart Stages Tablet, including setup, operation, maintenance, and troubleshooting.



Image 1.1: The Fisher-Price Laugh & Learn Smart Stages Tablet, displaying an alphabet grid with colorful icons.

2. PRODUCT FEATURES

The Smart Stages Tablet offers a range of features designed to support early childhood development:

- **Interactive Learning:** A pretend tablet electronic learning toy with lights and over 100 songs, sounds, and phrases.
- **Smart Stages Technology:** Features 3 Smart Stages levels that adapt to your child's growth, introducing the alphabet, familiar objects, and colors.
- **Engaging Buttons:** Includes 28 easy-to-press "app" buttons that activate music and lights.
- **Light-Up Display:** Multi-color lights glow and synchronize with the audio.
- **Developmental Benefits:** Designed to strengthen fine motor skills, introduce cause and effect, and encourage early role-play for infants and toddlers aged 1 to 3 years old.



3 Smart Stages[®] levels teach ABCs, first words & more

Image 2.1: A child's hand adjusting the Smart Stages selector on the tablet, highlighting the three learning levels.

3. SETUP

3.1. What's in the Box

Your package should contain the following item:

- Fisher-Price Laugh & Learn Smart Stages Tablet (Model HVY74)
- 3 AAA batteries (pre-installed)



Image 3.1: The Smart Stages Tablet shown in its retail packaging, indicating contents and features.

3.2. Battery Installation/Replacement

The tablet comes with 3 AAA batteries pre-installed. If replacement is needed:

1. Locate the battery compartment on the back of the tablet.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 3 new AAA (LR03) alkaline batteries, ensuring correct polarity (+/-).
5. Replace the cover and tighten the screw. Do not overtighten.

Important Battery Information:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove exhausted batteries promptly.
- Remove batteries if the toy is not used for an extended period.
- Dispose of batteries safely.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

To turn the tablet on, slide the power switch located on the side or back of the device to the "On" position. To turn it off, slide the switch to the "Off" position.

4.2. Smart Stages Levels

The Smart Stages Tablet features three learning levels that adjust content as your child grows:

- **Level 1 - Explore (12M+):** Introduces first words and sounds to spark baby's curiosity.
- **Level 2 - Encourage (18M+):** Prompts baby through questions and simple directions.
- **Level 3 - Pretend (24M+):** Engages older toddlers in imaginative play and early role-play.

To change the Smart Stages level, use the red slider switch located on the front of the tablet, labeled "1 2 3".



Image 4.1: Diagram illustrating the three Smart Stages levels: Explore, Encourage, and Pretend, with age recommendations.

4.3. Using the "App" Buttons

Press any of the 28 "app" buttons on the screen to activate different learning content, including letters, first words, animal sounds, and more. The multi-color lights around the screen will glow and "dance" along with the sounds and music.



28 easy-to-press “app” buttons & multi-color lights

Image 4.2: A close-up of a child's hand pressing an “app” button on the tablet, demonstrating the light-up feature.



Image 4.3: A toddler engaging with the Smart Stages Tablet while lying on their stomach, showing interactive play.

5. MAINTENANCE

5.1. Cleaning

To clean the tablet, wipe it with a damp cloth. Do not immerse the tablet in water or use harsh cleaning agents, as this may damage the electronic components.

5.2. Storage

Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not turn on or respond.	Batteries are low or incorrectly installed.	Check battery polarity. Replace with new AAA alkaline batteries.
Sound is distorted or too low.	Batteries are low.	Replace with new AAA alkaline batteries.
Lights are not working.	Batteries are low or depleted.	Replace with new AAA alkaline batteries.

7. SPECIFICATIONS

Model Number: HVY74

Product Dimensions: 5 x 5 x 0.1 inches

Item Weight: 8.5 ounces

Recommended Age: 12 months - 3 years

Batteries: 3 AAA (LR03) alkaline batteries (included)

Manufacturer: Fisher-Price

Release Date: July 1, 2023

UPC: 0194735210473

8. SAFETY INFORMATION

Please read and follow all safety instructions to ensure safe operation of the toy:

- Always supervise children during play.
- Do not allow children to put the toy in their mouth.
- Inspect the toy regularly for damage. Discontinue use if any parts are broken or detached.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- This toy is not intended for use in water.



Image 8.1: The Fisher-Price Play-Lab Expert Approved logo, signifying product safety and developmental suitability.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please visit the official Fisher-Price website or contact their customer service department. Details can typically be found on the product packaging or on the brand's official online presence. You can find more information about Fisher-Price products and support at their official store [Fisher-Price Store](#).



