

[Manuals.plus](#) /

› [Backyard Discovery](#) /

› Backyard Discovery Aurora Swing Set User Manual

Backyard Discovery 2001060

Backyard Discovery Aurora Swing Set User Manual

Model: 2001060

INTRODUCTION

The Backyard Discovery Aurora Swing Set is designed to provide a safe and engaging outdoor play experience for children. This manual contains important information regarding the assembly, operation, maintenance, and safety of your swing set. Please read it thoroughly before assembly and retain it for future reference.

This playset features a compact design suitable for various yard sizes, offering a 6-foot slide, two belt swings, a combination rock wall ladder, and a lower shaded fort. It also includes an open-air upper clubhouse with mesh panels and a real chalkboard for creative play.

SAFETY INFORMATION

Important: This product is intended for RESIDENTIAL USE ONLY. It is engineered to meet or exceed ASTM standards (code F1148-19).

- **Age Recommendation:** This swing set is ideal for children aged 3-6 years old.
- **Adult Supervision:** Constant adult supervision is required when children are using the swing set.
- **Proper Installation:** Ensure the swing set is installed on level ground and anchored securely to prevent tipping. Maintain a safe perimeter around the playset, free from obstacles.
- **Clothing:** Ensure children are not wearing loose-fitting clothing, scarves, or anything that could get caught on the equipment.
- **Inspection:** Regularly inspect all components for wear, damage, or loose connections. Refer to the Maintenance section for details.
- **Weight Limit:** Adhere to the maximum weight recommendations for individual components and the overall structure.



Image: Children enjoying the various features of the Aurora Swing Set, including swinging, sliding, and climbing.

SETUP AND ASSEMBLY

The Backyard Discovery Aurora Swing Set is designed for easy assembly. It is recommended that two adults are present for assembly.

- **Tools Required:** Gather all necessary tools as indicated in the assembly instructions.
- **Site Preparation:** Choose a level, clear area in your backyard for installation. Ensure adequate clearance around the swing set for safe play.
- **Interactive Instructions:** For step-by-step interactive 3D instructions, download the BILT app on your smartphone or tablet. This app provides detailed guidance to facilitate the assembly process.

Scan for easy 3D
instructions



Tap. Zoom. Rotate with official
interactive instructions on the BILT app.
Download now for faster setup.



BILT.[®]

Image: Scan this QR code to access the BILT app for interactive 3D assembly instructions. The app allows you to tap, zoom, and rotate views for clearer guidance.

You can also access the BILT app instructions directly via this link: [BILT App Instructions](#)

OPERATING INSTRUCTIONS

The Aurora Swing Set offers multiple play features. Ensure children understand how to use each component safely.

- **Swings:** The set includes two belt swings with rope chains designed to be gentle on small hands. Teach children to swing one at a time, to sit properly on the swing, and to avoid walking in front of or behind moving swings.
- **Slide:** The 6-foot super speedy slide is designed for quick descent. Instruct children to slide feet first, one at a time, and to clear the landing area immediately after sliding.
- **Rock Wall Ladder:** This combination feature allows for climbing. Encourage children to use both hands and feet, maintaining three points of contact when ascending or descending.
- **Upper Clubhouse:** The open-air clubhouse with mesh panels provides a shaded area for imaginative play. The integrated chalkboard allows for creative expression.
- **Lower Shaded Fort/Sandbox:** This area can be used as a shaded fort or converted into a sandbox. Ensure any sand used is clean and regularly maintained.



Image: A child swinging on one of the belt swings while another child prepares to go down the slide, demonstrating typical use of the playset.



Image: A child utilizing the chalkboard feature within the upper clubhouse, highlighting the creative play aspect of the swing set.

MAINTENANCE

Regular maintenance is crucial to ensure the safety and longevity of your Backyard Discovery Aurora Swing Set.

- **Monthly Checks:**

- Inspect all nuts and bolts for tightness. Tighten as necessary.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Lubricate all metallic moving parts (e.g., swing hangers) as needed.
- Inspect all swings, ropes, cables, and chains for evidence of deterioration. Replace any worn or damaged components.

- **Seasonal Checks (Spring/Fall):**

- Examine wooden members for deterioration, rot, or splinters. Sand down splinters and apply a non-toxic sealant or stain as needed. The swing set is made of 100% Cedar Wood, which is naturally resistant to rot and decay.

- Check for sharp edges or points.
- Rake and check the depth of loose-fill protective surfacing materials (e.g., wood chips, rubber mulch) to prevent compaction and maintain adequate depth.
- **Cleaning:** Clean plastic components with mild soap and water. Avoid harsh chemicals that could damage the material.

TROUBLESHOOTING

This section addresses common issues you might encounter with your swing set.

- **Loose Connections:** If any part feels wobbly or unstable, immediately check all bolts and nuts in that area and tighten them securely. Refer to the assembly instructions for specific hardware locations.
- **Squeaking Swings:** Apply a silicone-based lubricant to the swing hangers where the chains attach to reduce squeaking.
- **Wood Splinters:** If splinters appear on wooden surfaces, carefully sand the affected area until smooth. Apply a child-safe wood sealant to protect the wood and prevent future splinters.
- **Water Accumulation in Sandbox:** Ensure proper drainage for the sandbox area. If water collects, consider adding a drainage layer beneath the sand or covering the sandbox when not in use.

SPECIFICATIONS

Feature	Detail
Brand	Backyard Discovery
Model Number	2001060
Product Dimensions	272 x 313 x 234 cm (L x W x H)
Item Weight	66 kg
Material	100% Cedar Wood
Colour	Cedar (with Blue Awning/Accents)
Maximum Weight Recommendation	145 Pounds
Assembly Required	Yes
Certifications	Meets or exceeds ASTM standards (code F1148-19)
UPC	752113081062, 752113091061

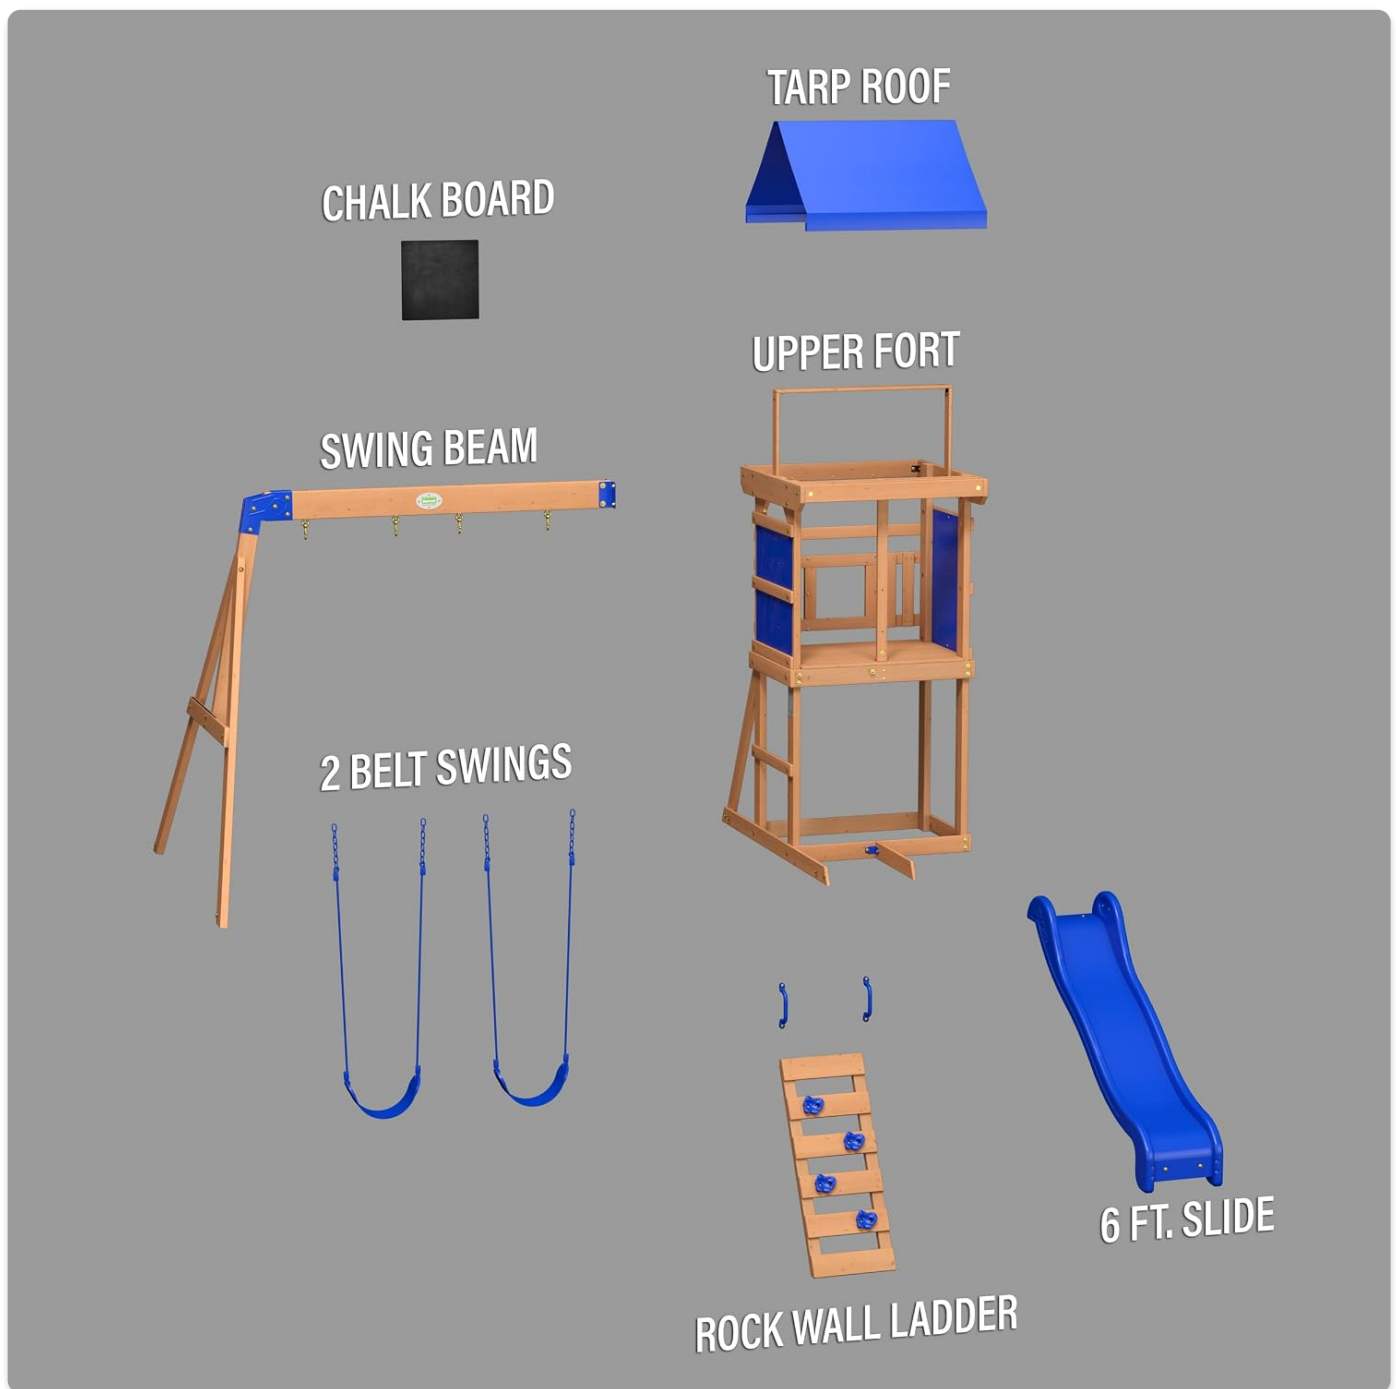


Image: An exploded view diagram illustrating the main components of the Aurora Swing Set, such as the upper fort, swing beam, slide, and rock wall ladder.

WARRANTY AND SUPPORT

Your Backyard Discovery Aurora Swing Set comes with a **5-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use and service.

For warranty claims, missing parts, or technical support, please contact Backyard Discovery customer service directly. Refer to the contact information provided in your product packaging or visit the official Backyard Discovery website for assistance.

© 2025 Backyard Discovery. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question