

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yato](#) /

› [Professional Injector Thread Repair Kit User Manual](#)

## Yato YT-06036

# Yato Professional Injector Thread Repair Kit

Model: YT-06036

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Yato Professional Injector Thread Repair Kit. This 10-piece kit is specifically designed for repairing damaged M6 and M8 injector threads, particularly in CDI motors, without the need for extensive engine disassembly. Following these instructions will ensure optimal performance and longevity of your tools.

## SAFETY INFORMATION

### General Safety Precautions

- Always wear appropriate personal protective equipment (PPE), including safety glasses and gloves, when using this kit.
- Ensure the work area is well-ventilated and free from obstructions.
- Read and understand all instructions before operating the tools.
- Keep tools clean and in good working condition.
- Store the kit out of reach of children and unauthorized personnel.
- Do not use damaged or modified tools.
- Use only for its intended purpose: repairing injector threads.

## PACKAGE CONTENTS

### Kit Components

Your Yato Professional Injector Thread Repair Kit includes the following items:

- 1 x spiral drill bit 6 mm with adjustment ring for drilling depth
- 1 x step drill 7 to 8 mm with adjustment ring for drilling depth
- 1 x guide sleeve for 6 mm spiral drills
- 1 x M8 x 1 tap

- 1 x mounting tool for thread inserts
- 5 x thread repair sleeves (internal thread M6 x 1, external thread M8 x 1)



Yato Professional Injector Thread Repair Kit components laid out in their storage case, showing all tools and thread inserts.



The kit opened, displaying the various drill bits, tap, mounting tool, and thread inserts.



The compact and durable storage case for the Yato Professional Injector Thread Repair Kit.

## SETUP

### Preparation

- Ensure the work area is clean, well-lit, and free from debris.
- Identify the specific injector with the damaged thread that requires repair.
- Gather all necessary personal protective equipment (PPE), such as safety glasses and gloves, before beginning work.
- Ensure the engine is cool and disconnected from power sources if working on an active vehicle.

## OPERATING INSTRUCTIONS

### Step-by-Step Repair Process

This kit is designed to repair damaged M6 injector threads by first enlarging and re-tapping to M8, then inserting a sleeve to restore the M6 thread.

#### 1. Step 1: Initial Drilling (6mm)

Use the 6 mm spiral drill bit. Attach the adjustment ring to control the drilling depth, ensuring you do not drill too deep. Carefully drill out the broken screw or the remnants of the damaged M6 thread. Ensure the drill is perpendicular to the surface to maintain alignment.

#### 2. Step 2: Enlarging the Hole (7-8mm)

After the initial drilling, switch to the 7 to 8 mm step drill. Use its adjustment ring to set the appropriate depth. This step enlarges the hole to the correct diameter for the new M8 thread. Drill slowly and steadily, applying even pressure.

#### 3. Step 3: Tapping the New Thread (M8 x 1)

Insert the guide sleeve (if applicable for precise alignment) into the drilled hole. Then, use the M8 x 1 tap to cut a new, larger thread into the enlarged hole. Apply a suitable cutting lubricant to the tap. Turn the tap slowly, one full turn forward, then half a turn back to break chips, repeating until the new M8 thread is fully formed.

#### 4. Step 4: Inserting the Thread Sleeve

Select one of the provided thread repair sleeves (internal thread M6 x 1, external thread M8 x 1). Place the sleeve onto the mounting tool for thread inserts. Carefully screw the repair sleeve into the newly tapped M8 thread. Ensure the sleeve is fully seated and flush with the surface. The sleeve effectively converts the M8 thread back to the original M6 size, ready for the injector screw.

#### 5. Step 5: Final Assembly

Once the thread sleeve is securely in place, the original M6 injector screw can be reinstalled. Gently tighten the injector screw to the vehicle manufacturer's specified torque. Verify the repair by ensuring the injector is securely fastened and there are no leaks or issues.

## MAINTENANCE

### Tool Care

- Clean all tools thoroughly after each use to remove metal shavings, debris, and lubricants. Use a brush and appropriate cleaning solution if necessary.
- Apply a light coat of rust preventative oil to all metal components, especially drill bits and taps, before storage to prevent corrosion.
- Store the kit in its original protective case in a dry, cool environment to prevent damage and maintain tool integrity.
- Inspect tools regularly for wear, damage, or dullness. Replace worn or damaged components as needed to ensure effective and safe operation.

## TROUBLESHOOTING

### Common Issues and Solutions

- **Issue: Tap breaks during use.**

*Solution:* This often indicates excessive force, improper alignment, or insufficient lubrication. Ensure the tap is lubricated and turned slowly and steadily, backing off periodically to clear chips. If a tap breaks inside the workpiece, specialized tap extractors or professional assistance may be required for removal.

- **Issue: Thread sleeve does not seat properly or cross-threads.**

*Solution:* Ensure the M8 thread was tapped cleanly and to the correct depth. Check for any burrs or obstructions in the newly tapped thread. The mounting tool must be used correctly to guide the sleeve straight into the thread. Do not force the sleeve; if resistance is met, back it out and re-align.

- **Issue: Drill bit becomes dull quickly or struggles to cut.**

*Solution:* Ensure proper drilling speed and pressure for the material being worked on. Use cutting fluid if necessary, especially for harder metals. Replace dull bits promptly, as continued use of dull bits can cause excessive heat, damage to the workpiece, and potential tool breakage.

- **Issue: Repaired thread feels loose or insecure.**

*Solution:* This could indicate an improperly tapped M8 thread or a damaged thread sleeve. Ensure the M8 thread is clean and fully formed. The thread sleeve should be screwed in until it is flush and secure. If the issue persists, the repair may need to be redone with a new sleeve.

## SPECIFICATIONS

### Product Specifications

Attribute	Value
Manufacturer	Yato
Brand	Yato
Model	Injector Thread Repair Kit YT-06036
Item Weight	1.03 pounds
Product Dimensions	1.77 x 8.27 x 5.91 inches
Item Model Number	YT-06036
Manufacturer Part Number	YT-06036
Special Features	High-quality professional design, Easy to use, Extensive box contents

## WARRANTY AND CUSTOMER SUPPORT

This Yato product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions regarding coverage, duration, and claims procedures.

For technical assistance, replacement parts, or warranty claims, please contact Yato customer support through their official website or authorized distributors. You can find more information and contact details at [www.yato.com](http://www.yato.com).

## Related Documents - YT-06036

 <p>YATO YT-822100 YT-822102 YT-822107 YT-822110 YT-822112</p> <p>CE INSTRUKCJA OBSŁUGI</p>	<p><b>Instrukcja Obsługi Szlifierek Stołowych YATO YT-822100-YT-822112</b></p> <p>Instrukcja obsługi dla szlifierek stołowych marki YATO, modele YT-822100, YT-822103, YT-822107, YT-822110, YT-822112. Zawiera informacje o bezpieczeństwie, obsłudze, montażu i konserwacji.</p>
 <p>YATO YT-09201</p> <p>CE INSTRUKCJA OBSŁUGI</p>	<p><b><a href="#">YATO YT-09201 Pneumatic Stitching Machine - Operating Manual</a></b></p> <p>Comprehensive operating manual for the YATO YT-09201 pneumatic stitching machine, covering safety, technical data, operation, maintenance, and troubleshooting.</p>
 <p>YATO YT-828293 YT-828294 YT-828295</p> <p>CE INSTRUKCJA OBSŁUGI</p>	<p><b><a href="#">YATO YT-828293/828294/828295 Instrukcja Obsługi Akumulatorowej Szlifierki Kątowej</a></b></p> <p>Oryginalna instrukcja obsługi dla akumulatorowej szlifierki kątowej YATO YT-828293, YT-828294, YT-828295. Zawiera szczegółowe informacje dotyczące bezpieczeństwa, użytkowania, konserwacji oraz dane techniczne.</p>
 <p>YATO YT-828135 YT-828136</p> <p>CE INSTRUKCJA OBSŁUGI</p>	<p><b><a href="#">YATO Pilarka Łąćuchowa Akumulatorowa YT-828135 / YT-828136 - Instrukcja Obsługi</a></b></p> <p>Instrukcja obsługi dla pilarki łańcuchowej YATO YT-828135 i YT-828136. Zawiera informacje o charakterystyce produktu, danych technicznych, instrukcjach bezpieczeństwa, obsłudze i konserwacji.</p>
 <p>YATO YT-828137 YT-828138</p> <p>CE INSTRUKCJA OBSŁUGI</p>	<p><b><a href="#">YATO Cordless Chainsaw YT-828137/YT-828138 User Manual</a></b></p> <p>Comprehensive user manual for the YATO Cordless Chainsaw models YT-828137 and YT-828138. This guide provides detailed instructions on operation, safety precautions, maintenance, and technical specifications for effective and safe use of the chainsaw.</p>



[YATO YT-82812 / YT-82813 Pilarka Łącuchowa Akumulatorowa – Instrukcja Obsługi](#)

Kompleksowa instrukcja obsługi dla akumulatorowych pił łańcuchowych YATO YT-82812 i YT-82813. Zawiera szczegółowe informacje o specyfikacji, bezpieczeństwie, obsłudze, konserwacji i przechowywaniu produktu.

Documents - Yato – YT-06036



[\[pdf\]](#) Catalog

KATALOG YATO 2024 indb 3717 ĐºÑĐ¿Đ,ÑĐ, Đ ĐĐ; ĐĐ%Đ¹/Đ¿Đ%Đ¹/ĐμĐ¹/ÑĐ, Đ ĐĐĐĐĐĐĐĐ  
catalogue tme eu Document c2141a06bd3d0f0c5ecc954eccddb174 |||

2024 AIR COMPRESSORS - KOMPRESORY Compressors are invaluable support in industry, construction, w ... RU CZ Tlakomer HU Nyomsmr RO Indicator de presiune FR Manomtre IT Manometro ES Manmetor CN 16 **YT-06036** EN Foot pump with gauge PL Pompka nona z manometrem DE Fusspumpe RU CZ Nozn pumpa s ma... lang:en **score:10** filesize: 92.74 M page\_count: 652 document date: 2024-01-30