

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sorandy](#) /

› [Sorandy MP3 Player with 1.8in LCD Screen Instruction Manual](#)

Sorandy Sorandyo526igwpzt-12

Sorandy MP3 Player Instruction Manual

Model: Sorandyo526igwpzt-12

INTRODUCTION

Thank you for purchasing the Sorandy MP3 Player. This device is designed for portable audio playback, voice recording, and FM radio reception. It features a 1.8-inch LCD screen and supports various audio formats. Please read this manual carefully to ensure proper use and maintenance of your device.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided charging cable and earphones.
- Listen at moderate volume levels to prevent hearing damage.

PRODUCT OVERVIEW

The Sorandy MP3 Player features a compact design with an intuitive control layout. Below are images illustrating the device and its main components.



Lossless sound quality

Supports MP3, WMA, FLAC, APE, AAC, OGG and ACELP

Image: Front view of the Sorandy MP3 Player, showing the 1.8-inch LCD screen displaying 'Music' and the circular control pad with 'MENU', 'VOL', and navigation buttons.



Image: Top-down view of the Sorandy MP3 Player, highlighting its slim profile and the arrangement of the screen and control buttons.



Image: Angled view of the Sorandy MP3 Player, showcasing the device's side profile and the location of the Mini USB port and 3.5mm audio jack.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB charging cable to the device's Mini USB port and to a USB power adapter or a computer's USB port. The battery takes approximately 2 hours to fully charge and provides up to 8 hours of use.



Image: The MP3 player displayed alongside a graphic of a full battery, illustrating the device's long-lasting battery capability.

2. Inserting a Memory Card

The MP3 player supports a memory capacity of up to 64GB via a microSD card (not included). To insert a memory card, locate the card slot on the side of the device. Gently push the microSD card into the slot until it clicks into place. Ensure the card is inserted with the correct orientation.

Image: The MP3 player with text highlighting its support for up to 64GB memory capacity, indicating the need for an external memory card.

3. Connecting to a Computer

To transfer music, videos, photos, or other files, connect the MP3 player to your computer using the provided USB cable. The device will appear as a removable disk drive. You can then drag and drop files into the appropriate folders on the player's memory card.

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Power On/Off:** Press and hold the power button (usually located on the side or top) to turn the device on or off.
- **MENU Button:** Press to return to the previous menu or the main menu.
- **Navigation Buttons:** Use the directional buttons (up, down, left, right) on the circular pad to navigate through menus and select options.
- **Center Button:** Press the center button to confirm a selection.
- **VOL Button:** Press to adjust the volume. Use the left/right navigation buttons to increase or decrease volume.



Image: A close-up view of the MP3 player's screen showing the 'Music' icon and the circular control pad with 'MENU' and 'VOL' labels, illustrating the main navigation interface.

2. Music Playback

From the main menu, select 'Music'. Navigate through your folders and files to select a song. The player supports MP3, WMA, FLAC, APE, AAC, OGG, and ACELP formats. You can create playlists, enable random play, and set playback modes.

1.8IN SCREEN MP3 PLAYERS

INTRODUCTION:



Image: The MP3 player displaying the 'Music' interface, accompanied by text indicating support for various lossless sound quality formats like MP3, WMA, FLAC, APE, AAC, OGG, and ACELP.

3. FM Radio

To use the FM Radio, ensure earphones are connected as they act as the antenna. From the main menu, select 'FM Radio'. You can then scan for stations, save presets, and adjust settings.

4. Voice Recorder

From the main menu, select 'Recorder'. Choose to start a new recording, play existing recordings, or access recording settings. Recordings are saved to the device's memory or inserted memory card.

5. System Settings

Access the 'Settings' menu to configure various options such as language, display brightness, backlight timer, date and time, sleep shutdown, and system information.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the device in a cool, dry place when not in use.
- **Software Updates:** Check the manufacturer's website periodically for any available firmware updates.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it can power on.

Problem	Solution
Cannot transfer files to the device.	Check the USB cable connection. Ensure the device is recognized by your computer. Verify that a memory card is properly inserted if you are trying to transfer to external storage.
No sound from earphones.	Check if the earphones are properly plugged into the 3.5mm audio jack. Adjust the volume level. Test with another pair of earphones if possible.
FM Radio not working.	Ensure earphones are connected, as they serve as the antenna. Try rescanning for stations.
Device freezes or becomes unresponsive.	Press and hold the power button for 10-15 seconds to force a restart. If the issue persists, try resetting the device (refer to settings for a reset option, if available).

SPECIFICATIONS

Model: Sorandyo526igwpzt-12

Screen Size: 1.8 Inches LCD

Memory Storage Capacity: Supports up to 64 GB (microSD card not included)

Connectivity Technology: USB

Special Features: FM Radio, Voice Recorder

Supported Audio Formats: MP3, WMA, FLAC, APE, AAC, OGG, ACELP

Included Components: MP3 Player, Charging Cable, Earphone

Item Weight: 2.82 ounces

Package Dimensions: 5.63 x 3.19 x 0.94 inches

Manufacturer: Sorandy

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Sorandy customer service. Keep your proof of purchase for warranty claims.