

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ergobaby](#) /

› [Ergobaby Evolve High Chair Instruction Manual](#)

Ergobaby EVLHCDKWD

Ergobaby Evolve High Chair Instruction Manual

Model: EVLHCDKWD

[Conversion](#)

[Operation](#)

[Introduction](#)

[Maintenance](#)

[Safety Information](#)

[Troubleshooting](#)

[Setup &](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

The Ergobaby Evolve High Chair is designed to adapt to your child's growth, providing a secure and comfortable seating solution from infancy through toddlerhood. This manual provides essential instructions for assembly, operation, maintenance, and safety to ensure proper use of your high chair.

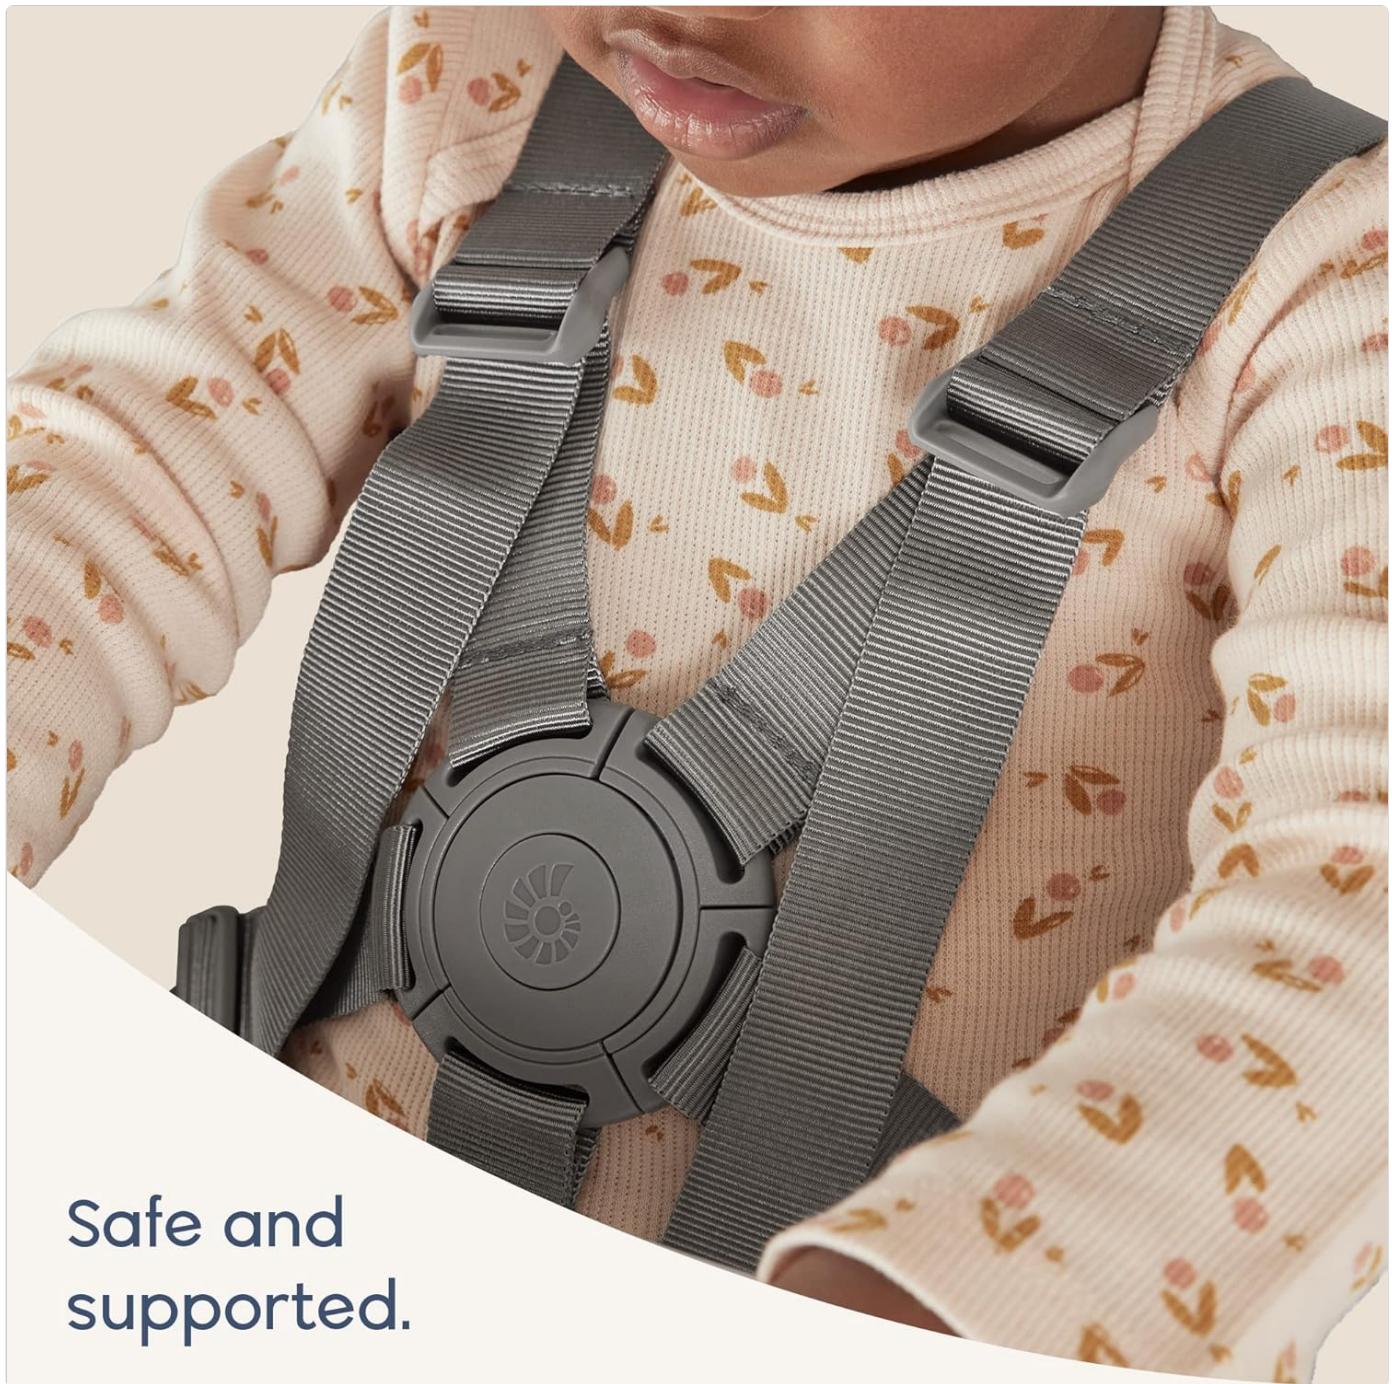


Figure 1: Ergobaby Evolve High Chair, Dark Wood model.

2. SAFETY INFORMATION

Always prioritize your child's safety. Read and understand all warnings and instructions before using the Ergobaby Evolve High Chair.

- Always use the 5-point safety harness to secure your child in the high chair.
- Never leave your child unattended in the high chair.
- Ensure the high chair is placed on a flat, stable surface.
- Keep children away from the high chair during assembly and conversion to prevent injury.
- Do not use the high chair if any parts are damaged or missing.
- The high chair is designed for children who can sit upright unassisted (approximately 6 months) up to 50 pounds.
- The toddler chair mode is suitable for older children within the weight limit.
- The product is GREENGUARD Gold Certified, indicating low chemical emissions for improved indoor air quality.



Safe and supported.

Figure 2: The 5-point safety harness ensures your child is securely fastened.

3. SETUP AND CONVERSION

The Ergobaby Evolve High Chair offers tool-free conversion between its different modes. Follow these steps for setup and conversion.

3.1. High Chair Mode Assembly

1. Unfold the chair frame until it locks into place.
2. Attach the infant seat to the frame by aligning the side buttons and sliding it into position until it clicks securely.
3. Ensure the 5-point harness is properly threaded and adjusted for your child.
4. Attach the dishwasher-safe tray by sliding it onto the designated slots until it locks.



Figure 3: The high chair mode, ready for use with infants.

3.2. Converting to Toddler Chair Mode

1. Remove the tray and unbuckle the 5-point harness.
2. Press the two side buttons on the infant seat and slide it upwards to detach it from the frame.
3. Adjust the wooden seat platform to the desired height for your toddler. The platform can be moved to a lower position to accommodate growing children.
4. The backrest can be adjusted or removed as needed for the toddler chair configuration.

Grows with Baby



1

High Chair

2

Chair

Items Included: High Chair + Chair. Kitchen Helper Add-On sold separately.

Figure 4: The toddler chair mode provides an adjustable seat for growing children.



Converts
in Seconds



Easy to Clean



Simple Fold

Figure 5: The Ergobaby Evolve High Chair offers three modes: High Chair, Chair, and Kitchen Helper (add-on sold separately).

4. OPERATION

4.1. Securing Your Child

In high chair mode, always use the 5-point harness. Adjust the straps to fit snugly around your child's shoulders, waist, and between their legs. Ensure the buckle is securely fastened.

4.2. Using the Tray

The tray provides a convenient surface for meals and activities. To attach, align the tray with the slots on the high chair and push down until it locks. To remove, lift the tray release tabs and pull the tray upwards.

4.3. Folding for Storage

The Evolve High Chair features a simple folding mechanism for compact storage. Press the two white buttons on the side of the chair frame and fold the chair inward. The chair is designed to stand independently when folded.



Figure 6: The high chair folds compactly for easy storage.

5. MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Ergobaby Evolve High Chair.

- **Cleaning the Seat and Tray:** The plastic seat and removable tray are wipeable. For thorough cleaning, the tray is dishwasher-safe.
- **Cleaning the Wooden Frame:** Wipe the Beechwood frame with a damp cloth and mild soap. Dry immediately. Avoid abrasive cleaners.
- **Harness Care:** The harness straps can be hand washed with mild soap and water. Allow to air dry completely.
- **Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight and secure. Inspect for any signs of wear or damage.

6. TROUBLESHOOTING

If you encounter any issues with your Ergobaby Evolve High Chair, refer to the following common solutions:

- **Chair not folding/unfolding smoothly:** Ensure all components are properly aligned and free of obstructions. Check that the side buttons are fully depressed when folding.
- **Tray not attaching securely:** Verify that the tray is aligned correctly with the slots and pushed firmly until it clicks into place. Ensure no food debris is blocking the mechanism.
- **Harness not securing child:** Adjust the harness straps to ensure a snug fit. Refer to the safety section for proper harness usage.
- **Stability issues:** Ensure the chair is on a flat, level surface. Check that all legs are fully extended and locked.

For further assistance, please contact Ergobaby customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	31"D x 23"W x 35.4"H
Item Weight	23 Pounds
Model Number	EVLHCDKWD
Maximum Weight Recommendation	50 Pounds
Material Type	Beech Wood, Plastic, Rubber
Material Composition	50% Beechwood, 50% Rubber
Care Instructions	Hand Wash (for harness), Wipeable (for seat/tray)
Portability	Yes
Certifications	GREENGUARD Gold Certified

8. WARRANTY AND SUPPORT

Ergobaby stands by the quality of its products. The Ergobaby Evolve High Chair is covered by the **ErgoPromise Lifetime Guarantee**, ensuring that any product covered is guaranteed for a lifetime against manufacturing defects.

For warranty claims, product support, or any questions, please visit the official Ergobaby website or contact their customer service department.

Your browser does not support the video tag.

Video 2: Ergobaby's commitment to quality and the ErgoPromise Lifetime Guarantee.

