

YESHOMY YH-TS101GY

YESHOMY TV Stand (Model YH-TS101GY) User Manual

For Televisions up to 65 Inches with Sliding Barn Doors and Storage Cabinets

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in injury or product damage. Keep this manual for future reference.

- **Tip-Over Hazard:** Heavy items placed on the TV stand, especially televisions, can cause the unit to tip over. Always place the TV stand on a flat, stable surface. Consider using anti-tip restraints (not included) to secure the unit to a wall, especially in homes with children.
- **Weight Capacity:** Do not exceed the maximum weight capacity for the top surface or shelves. Refer to the 'Product Specifications' section for detailed weight limits.
- **Small Parts:** This product contains small parts which may be a choking hazard for young children. Keep all components and hardware out of reach of children during assembly.
- **Assembly:** Assemble the unit according to the instructions provided. Do not use power tools unless specifically instructed, as overtightening screws can damage the material.
- **Placement:** Do not place the TV stand in direct sunlight or near heat sources, as this may cause warping or discoloration.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

The package typically includes:

- Wood panels for the TV stand structure
- Sliding barn doors and associated hardware (rails, rollers)
- Adjustable shelves
- Assembly hardware (screws, dowels, cam locks, etc.)
- Instruction manual

Note: A detailed list of specific parts and hardware will be included in the physical assembly guide provided with your product.

ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Please follow the step-by-step instructions provided in the physical assembly guide included with your product. Ensure you have a clear, spacious area for assembly.

General Assembly Tips:

- Identify all parts and hardware before starting.
- Use a soft, clean surface (like a blanket or cardboard) to protect the furniture pieces during assembly.
- Do not fully tighten screws until all components are loosely assembled, then tighten them securely.
- If you encounter any difficulties, refer to the detailed diagrams in your physical manual or contact customer support.



Image: The fully assembled YESHOMY TV Stand in grey, featuring sliding barn doors and open shelving, with a television placed on its top surface.

SETUP

Placement:

Choose a flat, level surface for your TV stand. Ensure there is adequate space around the unit for ventilation and access to power outlets.

TV Placement:

This TV stand is designed to accommodate televisions up to 65 inches. Ensure the base of your television fits securely on the top surface and does not overhang excessively.



Image: A visual guide illustrating the TV stand's dimensions and indicating its compatibility with televisions up to 65 inches in size.

Cable Management:

The back panel of the TV stand features circular drilling designs to facilitate neat organization of power supplies and cables for your electronic equipment. Route cables through these openings to maintain a tidy appearance and prevent tangles.



Adjustable Shelves

Round Cable Hole

Sturdy Wood Board

Image: Detailed view highlighting the adjustable shelves, a convenient round cable management hole, and the robust construction of the wood board material.

OPERATING INSTRUCTIONS

Sliding Barn Doors:

The TV stand features two sliding barn doors that move along metal rails. These doors can be positioned to cover either the central shelf area or the side storage cabinets, allowing you to conceal items as desired.

Sliding Barn Door Design

Two small storage spaces are hidden behind each sliding door.

Allows for more items to be placed to make the home tiny.

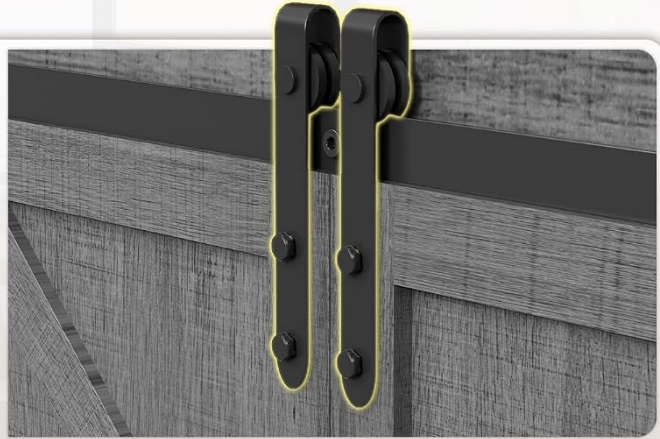


Image: A visual representation of the sliding barn door mechanism, detailing how the doors move on metal rails to reveal or conceal storage compartments.

Adjustable Shelves:

The interior shelves are adjustable, allowing you to customize the storage space to fit various electronic devices or other items. To adjust a shelf, carefully remove it, reposition the shelf pins to the desired height, and then reinsert the shelf.

MAINTENANCE

Cleaning:

To clean the TV stand, wipe surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.

 
General Care:


- Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- Protect the surface from scratches by using coasters or protective pads under items.

- Avoid placing hot items directly on the surface.


P2-complaint Material

P2 

Formaldehyde Emission: P1 

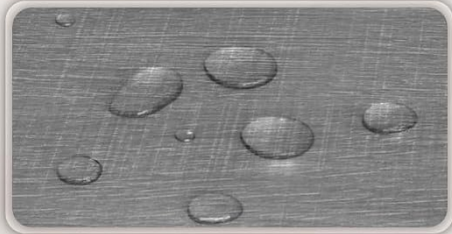

 **Waterproof**

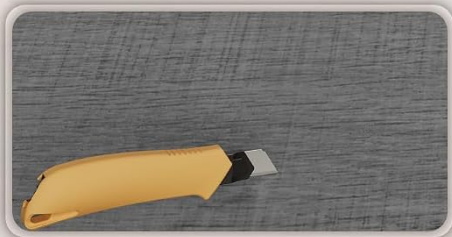

 **Scratch-resistant**



 **Durable**

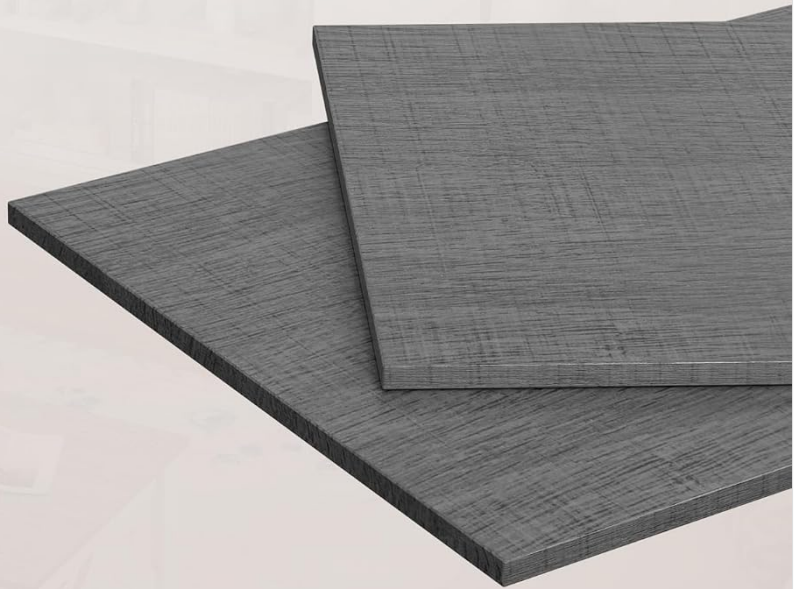 


Image: An illustration highlighting the material properties of the TV stand, including its P2-compliant status, waterproof nature, scratch resistance, and overall durability.

TROUBLESHOOTING

Wobbly Stand:

If the TV stand feels wobbly, ensure all screws and fasteners are securely tightened. Check that the unit is placed on a completely level surface. Adjust the feet if applicable (this model does not specify adjustable feet, so assume level surface is key).

Sliding Doors Not Moving Smoothly:

Check the metal rails for any obstructions or debris. Ensure the rollers on the doors are properly seated in the rails. A small amount of silicone lubricant can be applied to the rails if friction persists.

Missing or Damaged Parts:

If you discover any missing or damaged parts during assembly, do not proceed. Contact YESHOMY customer

support immediately for replacement parts.

PRODUCT SPECIFICATIONS

Brand	YESHOMY
Model Number	YH-TS101GY
Color	Grey
Material	Wood
Product Dimensions (L x W x H)	58 x 15.5 x 27.6 inches
Item Weight	81.3 pounds
TV Size Compatibility	Up to 65 inches
Special Feature	Adjustable Shelf
Product Care Instructions	Wipe with Dry Cloth
UPC	755462487585

Product Dimension



Image: A detailed diagram illustrating the overall dimensions of the TV stand (58" L x 15.5" D x 27.5" H) and indicating weight capacities for the top surface and shelves.

WARRANTY AND SUPPORT

YESHOMY is committed to providing high-quality products. For information regarding product warranty, returns, or customer support, please refer to the documentation included with your purchase or visit the official YESHOMY website.

If you require assistance with assembly, have questions about product features, or need to report a defect, please contact YESHOMY customer service through the retailer where the product was purchased or directly via the contact information provided on the brand's official channels.

Online Support: For additional resources and frequently asked questions, please visit the [YESHOMY Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question