

LEGO 43218

LEGO Disney Frozen Anna and Elsa's Magical Carousel 43218 Instruction Manual

Model: 43218

INTRODUCTION

Welcome to the magical world of Arendelle! This instruction manual provides detailed guidance for assembling and enjoying your new LEGO Disney Frozen Anna and Elsa's Magical Carousel (Model 43218) building set. Designed for fans aged 6 and up, this set allows you to recreate enchanting scenes with beloved characters.

PRODUCT OVERVIEW

The LEGO Disney Frozen Anna and Elsa's Magical Carousel set features a rotating carousel inspired by Elsa's iconic ice castle. It includes four micro-doll figures: Anna, Elsa, Kristoff, and Olaf, along with two mini sleighs for additional play. The set contains 175 pieces, offering an engaging building experience.



The complete LEGO Disney Frozen Anna and Elsa's Magical Carousel set.

SETUP AND ASSEMBLY

Follow these steps to assemble your Magical Carousel. For an interactive building experience, you can also use the LEGO Builder app.

- 1. Unpack Components:** Carefully open the packaging and sort the LEGO bricks by color and size. Identify the instruction booklet.
- 2. Assemble Characters:** Begin by assembling the micro-doll figures of Anna, Elsa, Kristoff, and Olaf. Each character consists of a few small pieces.



The four included Disney Frozen micro-doll figures.

3. **Build the Base:** Construct the sturdy base of the carousel using the larger blue and white ice-themed bricks. Ensure all connections are firm.
4. **Construct the Pillars and Rotating Platform:** Attach the light blue pillars to the base, followed by the rotating platform. This platform will hold the characters.



Features a turning merry-go-round
with 4 spots

Detail of the turning merry-go-round with four designated spots for characters.

5. **Add Decorative Elements:** Place the translucent blue ice crystals and other decorative pieces to complete the ice castle aesthetic of the carousel.
6. **Assemble Mini Sleighs:** Build the two mini sleighs. These are designed for the characters to sit in for additional play scenarios.



The two mini sleighs included for character play.

- 7. Final Touches:** Review the instruction booklet to ensure all pieces are correctly placed and the carousel spins freely.

Your browser does not support the video tag.

Video demonstrating the unboxing and initial assembly of the LEGO Disney Frozen Anna & Elsa's Carousel 43218.

OPERATING INSTRUCTIONS

The Magical Carousel is designed for interactive play:

- **Placing Characters:** Position Anna, Elsa, Kristoff, or Olaf onto the designated studs on the rotating platform of the carousel.
- **Spinning the Carousel:** Gently turn the top section of the carousel to make the platform and characters spin.
- **Using Sleighs:** Place characters into the mini sleighs for imaginative adventures around the carousel or other play areas.

Your browser does not support the video tag.

Video showcasing a 360-degree view of the LEGO Disney Anna and Elsa's Magical Carousel 43218.

MAINTENANCE

- **Cleaning:** To clean your LEGO set, wipe it gently with a damp cloth. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the set in a cool, dry place away from direct sunlight to prevent discoloration or damage to the plastic bricks.
- **Disassembly:** If disassembling, keep small pieces organized to prevent loss.

TROUBLESHOOTING

- **Missing Pieces:** If you find any pieces missing, please refer to the LEGO Customer Service website for replacement parts.
- **Difficulty Assembling:** Double-check the instruction booklet or the LEGO Builder app for step-by-step visual guides. Ensure pieces are pressed firmly together.
- **Carousel Not Spinning Smoothly:** Verify that all connecting pieces on the rotating platform are correctly aligned and free from obstruction.

SPECIFICATIONS

Product Dimensions	7.52 x 8.07 x 2.4 inches
Item Weight	10.6 ounces
Item Model Number	6427577
Manufacturer Recommended Age	6 - 8 years
Number of Pieces	175
Release Date	August 1, 2023

SAFETY INFORMATION

WARNING: Toy contains small parts and a small ball. Not for children under 3 years. Adult supervision is recommended during play.

WARRANTY AND SUPPORT

For product support, missing parts, or warranty information, please visit the official LEGO Customer Service website at www.lego.com/service. You can also find additional building instructions and creative ideas there.

