

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Oster](#) /

> [Oster Blender and Food Processor Combo with Texture Select Settings Pro Blender - Model B0BSTHNBK2 Instruction Manual](#)

## Oster B0BSTHNBK2

# Oster Blender and Food Processor Combo with Texture Select Settings Pro Blender

Model: B0BSTHNBK2 | Brand: Oster

## INTRODUCTION

The Oster Blender and Food Processor Combo is designed to simplify your food preparation with versatile blending and chopping capabilities. This appliance features Texture Select Settings, allowing you to achieve desired consistencies for various recipes. With a powerful motor and durable components, it is engineered for efficient and consistent performance in your kitchen.



*Image: The Oster Blender and Food Processor Combo, showcasing the blender jar filled with fruits and vegetables, and the food processor attachment filled with chopped ingredients.*

## WHAT'S IN THE BOX

Your Oster Blender and Food Processor Combo package includes the following components:

- Blending base
- 8-cup durable Tritan blending jar with lid
- 5-cup food processor bowl attachment with slicing disk



*Image: The retail packaging for the Oster Blender and Food Processor Combo, displaying the product and its key features.*

## SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or shipping.
2. **Wash Components:** Before first use, wash the blending jar, food processor bowl, lids, and blades in warm, soapy water. Rinse thoroughly and dry. All removable parts are dishwasher safe.
3. **Assemble Blender:** Place the blending base on a clean, dry, and stable surface. Ensure the base is unplugged. Securely attach the 8-cup Tritan blending jar onto the base.

4. **Assemble Food Processor (if using):** If using the food processor, ensure the blender jar is removed. Place the food processor bowl onto the base, then insert the desired blade (chopping or slicing disk) onto the central shaft. Secure the food processor lid.
5. **Power Connection:** Plug the appliance into a standard electrical outlet.

## OPERATING INSTRUCTIONS

### Blender Operation

1. **Add Ingredients:** Place desired ingredients into the 8-cup Tritan blending jar. Ensure the lid is securely fastened.
2. **Select Texture:** Use the Texture Select buttons (Thin, Medium, Thick) to achieve your preferred consistency for smoothies, shakes, or other blends.
3. **Choose Program/Speed:** Select from 9 auto programs (e.g., Smoothie, Shake) or use the 4 manual speeds (Low, Medium, High, Pulse) for more control.
4. **Start Blending:** Press the appropriate button to begin blending. The 1200-watt motor and Dual Direction Blade Technology will process ingredients efficiently.
5. **Stop:** Press the 'Stop' button or allow auto-programs to complete.

1200 watts of powerful  
blending performance





Image: The Oster Blender base on a kitchen counter, blending a green smoothie, demonstrating its powerful performance.



## Texture Select settings



Thin



Medium



Thick

Image: A close-up of the Oster Blender's control panel, highlighting the 'Thin', 'Med', and 'Thick' Texture Select buttons, along with examples of food textures.

### Food Processor Operation

1. **Assemble:** Ensure the blender jar is removed. Place the 5-cup food processor bowl onto the base. Insert the chopping blade or slicing disk onto the central shaft.
2. **Add Ingredients:** Place ingredients into the food processor bowl. Secure the lid.
3. **Process:** Use the 'Food Chop' setting or manual speeds (Low, Medium, High, Pulse) to chop, grind, or prep your ingredients.
4. **Stop:** Press the 'Stop' button when processing is complete.



## Includes 5-cup food processor bowl attachment with slicing disk

*Image: The 5-cup food processor bowl attachment with its blade and lid, ready for use.*

### FEATURES & CONTROLS

- **Texture Select Settings:** Choose between thin, medium, and thick consistencies with dedicated buttons.
- **Powerful Motor:** Experience ultra-powerful blending and food chopping performance with the 1200-watt motor.
- **Large Capacity Jar:** Includes an extra-large 8-cup dishwasher-safe and BPA-free Tritan plastic blending jar.
- **Food Processor Attachment:** Comes with a 5-cup food processor bowl attachment and slicing disk for chopping, grinding, and meal prep.
- **Multiple Programs & Speeds:** Features 9 auto programs and 4 manual speeds (low, medium, high, and pulse).
- **Advanced Blade Technology:** Equipped with an extra-large, 3-inch, 6-point stainless steel blade with Dual Direction Blade Technology to power through tough ingredients and prevent jamming.

## Oster Blender and Food Processor Combo Overview

Your browser does not support the video tag.

*Video: A general overview of the Oster Blender and Food Processor Combo, demonstrating its various components and ease of use.*

## Oster Blender and Food Processor Combo Features

Your browser does not support the video tag.

*Video: Another perspective on the Oster Blender and Food Processor Combo, highlighting its design and functional aspects.*

## MAINTENANCE & CLEANING

---

Proper maintenance ensures the longevity and optimal performance of your appliance.

- **Dishwasher Safe Parts:** The 8-cup Tritan blending jar, its lid, and the 5-cup food processor bowl attachment are all dishwasher safe.
- **Hand Washing:** For best results, or if a dishwasher is not available, wash all removable parts in warm, soapy water. Rinse thoroughly and dry immediately.
- **Base Cleaning:** Wipe the blender base with a damp cloth. Do not immerse the base in water or any other liquid.
- **Blade Care:** Handle blades with extreme care as they are sharp.

## TROUBLESHOOTING

---

If you encounter any issues with your Oster Blender and Food Processor Combo, please refer to the following common solutions:

- **Appliance Not Turning On:** Ensure the unit is properly plugged into a working electrical outlet. Check that the blending jar or food processor bowl is correctly assembled and locked onto the base.
- **Ingredients Not Blending/Chopping:** Ensure there is enough liquid in the blender jar for proper circulation. For food processor, ensure ingredients are cut into appropriate sizes. Use the Pulse function to dislodge ingredients.
- **Leaking:** Verify that the blade assembly (for blender) or the food processor lid is securely tightened and that the rubber gasket (if applicable) is correctly seated.
- **Overheating:** If the motor stops during operation, it may be due to overheating. Unplug the unit and let it cool down for at least 15 minutes before resuming use. Reduce the load or amount of ingredients.

## SPECIFICATIONS

---

- **Brand:** Oster

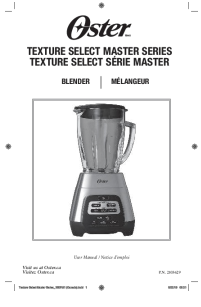

- **Model Name:** Pro Blender
- **Power Source:** Corded Electric
- **Motor Wattage:** 1200 watts
- **Blender Jar Capacity:** 8 cups (Tritan, BPA-free)
- **Food Processor Bowl Capacity:** 5 cups
- **Number of Speeds:** 3 (Low, Medium, High) + Pulse
- **Special Features:** Texture Select Settings, Ice Crushing, Dual Direction Blade Technology
- **Blade Material:** Stainless Steel (6-point, 3-inch)
- **Product Dimensions:** 13"D x 13"W x 13"H
- **Item Weight:** 11.5 pounds
- **Color:** Metallic Gray
- **Product Care Instructions:** Dishwasher Safe (removable parts)





## WARRANTY & SUPPORT

Your Oster Blender and Food Processor Combo is backed by a **3 Year Satisfaction Guarantee!**

For any support needs, troubleshooting assistance, or warranty claims, please refer to the contact information provided in your product's registration materials or visit the official Oster website.

## Related Documents - B0BSTHNBK2

	<p><a href="#">Oster Texture Select Master Series Blender User Manual</a></p> <p>User manual for the Oster Texture Select Master Series Blender, providing instructions on operation, care, cleaning, troubleshooting, and recipes. Learn how to use pre-programmed settings and manual controls for optimal blending.</p>
	<p><a href="#">Oster BLSTDG Series Blender User Manual and Recipes</a></p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>

	<p><a href="#">Oster Pro Series Blender with High Performance Motor User Manual</a></p> <p>User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPH), providing detailed instructions on safety, operation, assembly, cleaning, maintenance, and warranty information.</p>
	<p><a href="#">Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar User Manual</a></p> <p>User manual for the Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar (BLSTBCG Series), covering safety, operation, cleaning, and recipes. Visit <a href="http://www.oster.com">www.oster.com</a> for more information.</p>
	<p><a href="#">Oster Kitchen Center Food Preparation Appliance Manual and Recipes</a></p> <p>Comprehensive user manual and recipe guide for the Oster Kitchen Center, detailing its functions as a blender, mixer/doughmaker, and salad maker, along with operating instructions, safety tips, and a wide variety of recipes.</p>
	<p><a href="#">Oster Kitchen Center Cookbook and Instructions: Versatile Food Preparation</a></p> <p>Explore the capabilities of the Oster Kitchen Center with this comprehensive cookbook and instruction manual. Learn to use its blender, mixer, grinder, and salad maker attachments, and discover hundreds of recipes for appetizers, entrees, baked goods, and more.</p>