

## Bosch SMS4HMB60T

# Bosch Series 4 SMS4HMB60T Freestanding Dishwasher Instruction Manual

Model: SMS4HMB60T

## 1. SAFETY INFORMATION

---

Read these instructions carefully before using the appliance. Keep this instruction manual for future reference. Failure to follow these instructions may result in property damage or personal injury.

### 1.1 General Safety

- This appliance is intended for domestic use only.
- Do not allow children to play with the appliance.
- Keep packaging materials away from children.
- Only use detergents and rinse aids specifically designed for dishwashers.
- The appliance features a child lock on the door to prevent accidental opening during operation.

### 1.2 Electrical Safety

- Ensure the appliance is properly grounded.
- Do not operate the appliance if the power cord is damaged.
- Disconnect the appliance from the power supply before any cleaning or maintenance.

### 1.3 Water Safety

- Ensure water connections are secure to prevent leaks.
- Do not use hot water above the recommended temperature.

## 2. PRODUCT OVERVIEW

---

The Bosch Series 4 SMS4HMB60T is a freestanding dishwasher designed for efficient and flexible dishwashing. It

features a 13 place setting capacity and a heat exchanger drying system.

## 2.1 Dishwasher Components

Familiarize yourself with the main components of your dishwasher:



Image: Interior view of the Bosch Series 4 dishwasher with upper and lower racks extended, showing the spacious design.

- **Upper Basket:** Adjustable height for various dish sizes.
- **Lower Basket:** Designed for larger items like plates and pots.
- **Cutlery Tray:** A dedicated tray for forks, knives, and spoons.
- **Detergent Dispenser:** For dishwasher tablets or powder.
- **Rinse Aid Dispenser:** For improved drying and shine.
- **Control Panel:** Located on the top edge of the door, featuring a touch panel interface.



Image: Close-up of the Bosch Series 4 dishwasher control panel, showing program selection buttons, a digital display, and touch

controls.

### 3. SETUP AND INSTALLATION

---

This dishwasher is a freestanding model, allowing for flexible placement in your kitchen. It can also be integrated into cabinetry.

#### 3.1 Unpacking and Placement

- Carefully remove all packaging materials.
- Place the dishwasher on a firm, level surface.
- Ensure there is adequate space for the door to open fully.



Image: The Bosch Series 4 dishwasher with indicated dimensions of 84cm height, 60cm width, and 60cm depth.

## 3.2 Water Connection

- Connect the water inlet hose to a cold water supply with a 3/4 inch thread.
- Connect the drain hose to a suitable drain pipe or sink trap. Ensure the drain hose is not kinked.

## 3.3 Electrical Connection

- Plug the appliance into a grounded 240 Volt electrical outlet.
- Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

---

Follow these steps for optimal performance of your Bosch dishwasher.

### 4.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller items, glasses, and cups in the upper basket.
- Utilize the dedicated cutlery tray for silverware.

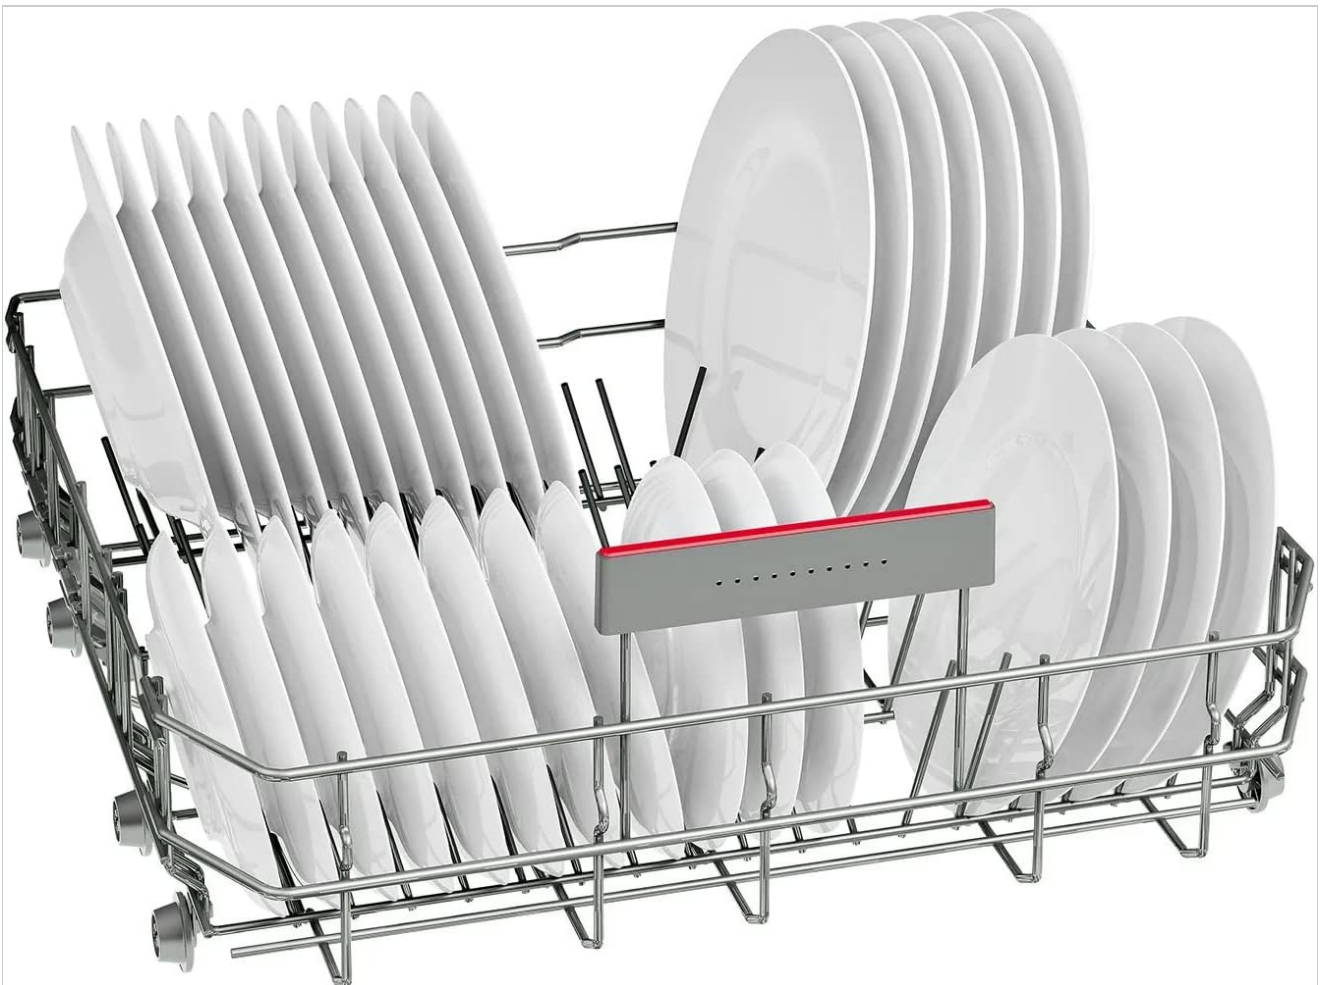 


Image: The lower rack of the dishwasher, neatly loaded with plates, demonstrating efficient space usage.

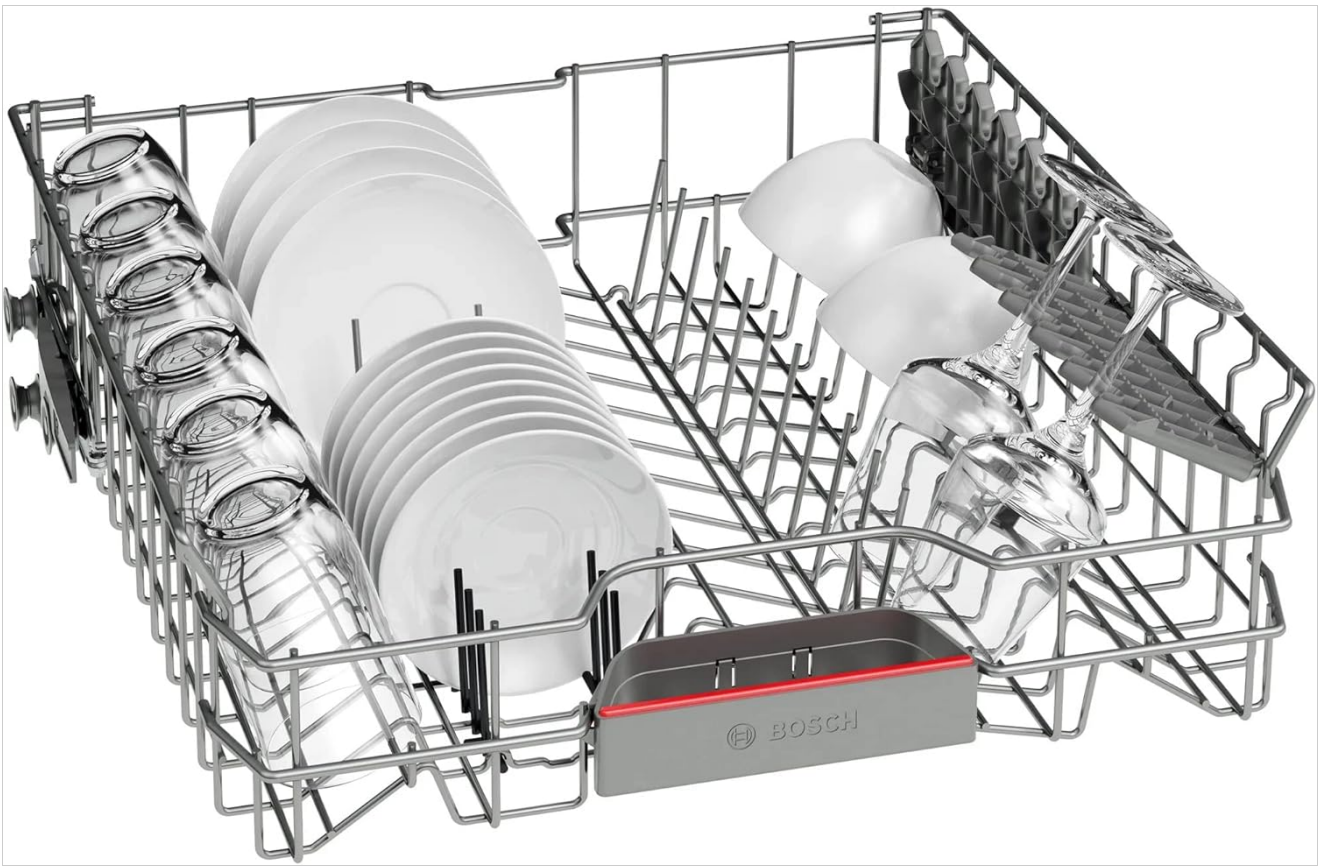 


Image: The upper rack of the dishwasher, loaded with glasses and bowls, showcasing the flexible loading options.



Image: The cutlery tray of the dishwasher, organized with various utensils for thorough cleaning.

**Rackmatic System:** The upper basket's height can be adjusted by up to 5 cm across 3 levels, even when fully loaded, providing maximum flexibility for different dish sizes.

## 4.2 Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent (tablet, powder, or gel). Close the dispenser lid securely.
- Check the rinse aid indicator. If low, refill the rinse aid dispenser to ensure streak-free drying.

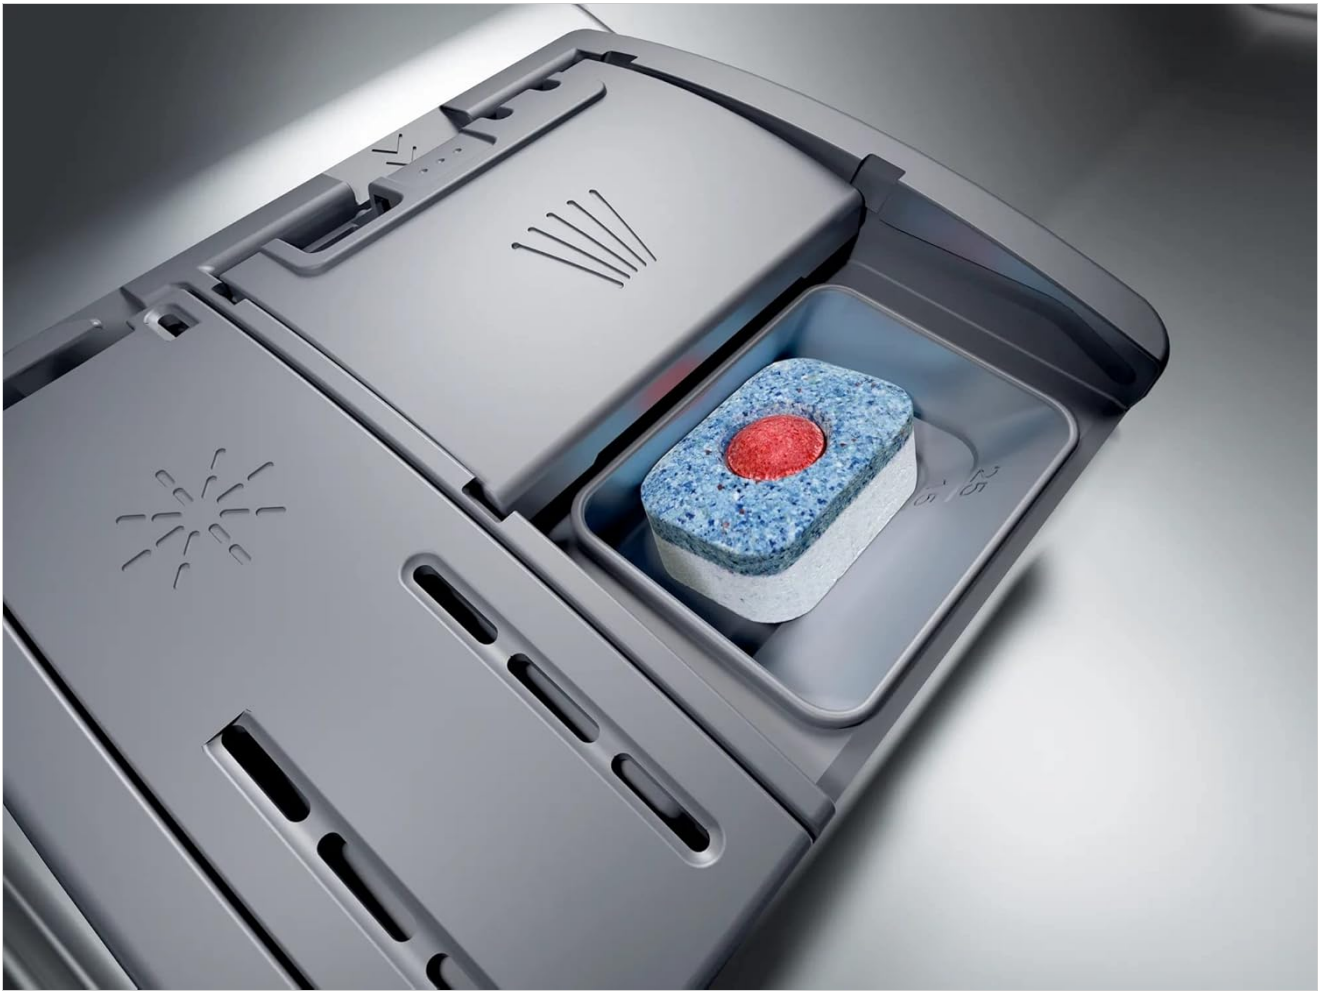 


Image: The detergent dispenser of the dishwasher, showing a dishwasher tablet placed inside, ready for a wash cycle.

### 4.3 Selecting and Starting a Program

- Close the dishwasher door.
- Use the touch panel controls to select your desired program from the following options:
  - Auto 45-65°C
  - Custom program
  - Eco
  - Intensive
  - Quick L
  - Quick S
- Press the 'Start' button to begin the wash cycle.

### 4.4 Child Lock

The dishwasher is equipped with a child lock on the door. Refer to the control panel instructions for activating and deactivating this feature to prevent unintended operation or opening by children.

## 5. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

### 5.1 Cleaning Filters

- Periodically check and clean the filter system at the bottom of the dishwasher.

- Remove any food debris to prevent blockages and ensure efficient draining.

## 5.2 Cleaning Spray Arms

- Ensure the spray arm nozzles are not blocked by food particles.
- Remove and rinse the spray arms if necessary.

## 5.3 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

# 6. TROUBLESHOOTING

---

If you encounter issues with your dishwasher, consult the following common troubleshooting tips before contacting service.

## 6.1 Common Issues

- **Dishes not clean:** Check filter, spray arms, detergent amount, and ensure dishes are loaded correctly without blocking spray.
- **Water not draining:** Check drain hose for kinks or blockages, and clean the filter system.
- **Dishwasher not starting:** Ensure the door is fully closed, the power cord is plugged in, and the circuit breaker has not tripped.
- **Error codes:** If an error code appears on the display, refer to the specific error code section in the full manual (if available) or contact customer support.

# 7. SPECIFICATIONS

---

Feature	Specification
Brand Name	Bosch
Model Number	SMS4HMB60T
Installation Type	Freestanding (with integrated possibility)
Capacity	13 Place Settings
Product Dimensions (D x W x H)	60 cm x 60 cm x 84 cm
Color	Black Inox
Special Features	Touch Panel, Rackmatic 3-stage adjustable upper basket
Voltage	240 Volts
Program List	Auto 45-65°C, Custom program, Eco, Intensive, Quick L, Quick S
Drying System	Heat Exchanger
Water Consumption (Eco program)	9.5 Liters
Child Lock	Yes, on door

Feature	Specification
Country of Manufacture	Turkey

## 8. WARRANTY AND SUPPORT

---

Your Bosch Series 4 SMS4HMB60T dishwasher comes with a comprehensive warranty.

### 8.1 Warranty Information

This product is covered by a **5-year warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal domestic use.

### 8.2 Customer Support

For technical assistance, service requests, or further information, please contact Bosch customer support. Contact details can typically be found on the official Bosch website or in your purchase documentation.