

[Manuals.plus](#) /

> [ciciglow](#) /

> ciciglow M24 Mini Portable Projector User Manual

ciciglow M24

ciciglow M24 Mini Portable Projector User Manual

Model: M24

1. INTRODUCTION

Thank you for purchasing the ciciglow M24 Mini Portable Projector. This manual provides essential information for safe operation, optimal performance, and proper maintenance of your device. Please read it thoroughly before use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Do not look directly into the projector lens when the lamp is on.
- Ensure proper ventilation around the projector to prevent overheating.
- Use only the power adapter provided with the projector.
- Keep the projector away from water or other liquids.
- Do not attempt to disassemble or repair the projector yourself. Contact qualified service personnel.
- Keep out of reach of children.

3. PRODUCT OVERVIEW

3.1 Package Contents

Verify that all items are present in your package:

- ciciglow M24 Mini Portable Projector
- Remote Control
- AV Cable
- Power Adapter
- User Manual (this document)



Image: The ciciglow M24 Mini Portable Projector shown with its included accessories: remote control, AV cable, and power adapter.

3.2 Projector Features

- **Portable Design:** Compact and lightweight for easy transport and setup.
- **Diffuse Light Source:** Designed to be gentle on the eyes during extended viewing.
- **360-Degree Surround Sound:** Connect to external speakers for an immersive audio experience.
- **Rich Connectivity:** Multiple interfaces including HDMI, USB, and AV for various devices.
- **Wide Compatibility:** Supports common video, image, and document formats.
- **Versatile Use:** Ideal for home cinema, watching TV, sports, online courses, and gaming.

With diffuse light source

Take care of your eyes



Image: A family enjoying content projected onto a screen, highlighting the diffuse light source feature designed for eye comfort.

High-efficiency audio interface



Can be connected to speakers, 360-degree sound surround, enjoy cinema-level sound at any time



Image: A person reading while the projector is connected to an external speaker, illustrating the high-efficiency audio interface and 360-degree surround sound capability.

Rich interface

Multiple devices can be connected, making it easier to use



Image: The projector positioned in front of a TV screen, with a hand holding the remote control, demonstrating its rich interface for connecting multiple devices.

3.3 Projector Parts and Interfaces



Image: Top view of the projector, showing the focus wheel and control buttons (Power, OK, Navigation).



Image: Rear and side view of the projector, highlighting the DC 5V power input, AV port, and other connectivity options. The projector features the following ports and controls:

- **Lens:** Projects the image.
- **Focus Wheel:** Adjusts image clarity.
- **Power Button:** Turns the projector on/off.
- **Navigation Buttons (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **HDMI Input:** Connects to devices like laptops, gaming consoles, Blu-ray players.
- **USB Input:** Connects to USB drives for media playback.
- **AV Input:** Connects to older devices using the included AV cable.
- **DC 5V Power Input:** For connecting the power adapter.

4. SETUP

4.1 Power Connection

1. Connect the power adapter to the DC 5V input port on the projector.
2. Plug the power adapter into a suitable electrical outlet (100-240V).
3. The power indicator light on the projector will illuminate.

4.2 Connecting Input Devices

The projector supports HDMI, USB, and AV inputs.

- **HDMI:** Connect an HDMI cable from your source device (e.g., laptop, game console) to the HDMI port on the

projector.

- **USB:** Insert a USB flash drive into the USB port for direct media playback.
- **AV:** Use the included AV cable to connect to devices with AV output (e.g., DVD players).

4.3 Projector Placement

Place the projector on a stable, flat surface or mount it on a tripod. Ensure there is sufficient distance between the projector and the projection surface (0.5-2.8 meters / 1.6-9.2 feet) for optimal image size and clarity.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press the Power button on the projector or the remote control.
- **Power Off:** Press the Power button again. Confirm shutdown if prompted.

5.2 Focus Adjustment

Rotate the focus wheel located on the top of the projector until the projected image appears clear and sharp.

5.3 Input Source Selection

Use the remote control or the navigation buttons on the projector to access the input source menu. Select the desired input (HDMI, USB, AV) corresponding to your connected device.

5.4 Audio Settings

Adjust the volume using the remote control. For enhanced audio, connect external speakers via the audio output port (if available, or use the 360-degree surround sound feature with compatible speakers).

6. MAINTENANCE

6.1 Cleaning the Lens

Gently wipe the projector lens with a soft, lint-free cloth or a lens cleaning tissue. Do not use abrasive cleaners or solvents.

6.2 General Care

- Keep the projector in a clean, dry environment.
- Avoid exposing the projector to extreme temperatures or humidity.
- When not in use, store the projector in a protective bag or cover to prevent dust accumulation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	<ul style="list-style-type: none">• Power not connected• Incorrect input source selected• Input device not connected properly	<ul style="list-style-type: none">• Check power connection.• Select the correct input source (HDMI, USB, AV).• Ensure cables are securely connected.

Problem	Possible Cause	Solution
Image is blurry	<ul style="list-style-type: none">Focus not adjustedProjector too close/far from screen	<ul style="list-style-type: none">Adjust the focus wheel.Adjust projection distance.
No sound	<ul style="list-style-type: none">Volume too low or mutedAudio cable not connectedSource device audio settings	<ul style="list-style-type: none">Increase volume or unmute.Ensure audio cables are connected.Check audio output settings on your source device.
Remote control not working	<ul style="list-style-type: none">Batteries are dead or inserted incorrectlyObstruction between remote and projector	<ul style="list-style-type: none">Replace batteries (2x AAA, not included).Ensure a clear line of sight to the projector's IR receiver.

8. SPECIFICATIONS

Brand	ciciglow
Model Name	M24 (ciciglow9h4g0f8z1y-14)
Display Resolution	640 x 480
Maximum Display Resolution	1920 x 1080 (Full HD)
Display Type	LED
Brightness	3000 Lumens
Contrast Ratio	1.4:1
Connectivity Technology	HDMI, USB, AV
Recommended Uses	Home Cinema
Special Feature	360-degree Surround Sound
Form Factor	Portable
Mounting Type	Tripod Mount
Projection Distance	0.5 - 2.8 meters (1.6 - 9.2 feet)
Voltage	100-240V
Control Type	Remote Control
Compatible Devices	Computer, smartphone, game console, Blu-ray player, media player
Video Encoding	H.264
Country of Origin	China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase.

9.2 Customer Support

If you encounter any issues or have questions regarding your ciciglow M24 Mini Portable Projector, please contact our customer support team. Contact information can typically be found on the product packaging or the brand's official website.

© 2023 ciciglow. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0BSTSX7R9>

More documents and user manuals: <https://manuals.plus/>