

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Viper](#) /

› **Viper ProScore Electronic Scoreboard User Manual**

Viper 37-0116

Viper ProScore Electronic Scoreboard User Manual

Model: 37-0116

INTRODUCTION

Thank you for choosing the Viper ProScore Electronic Scoreboard. This device is designed to enhance your dart game experience by providing automatic scoring for up to 8 players across 40 different games and 655 game options. This manual will guide you through the installation, operation, and maintenance of your new scoreboard.

PRODUCT FEATURES

- Compatible with steel-tip dartboards, bringing electronic dart game features to traditional play.
- Large, backlit LCD screen for clear visibility from the throw line.
- Supports up to 8 players with 40 distinct games and 655 game variations, including customizable handicaps.
- Features an automatic shut-off and sleep mode to conserve battery power.
- Soft-touch keypad for intuitive and easy operation.
- Compact dimensions: 12.7 cm (L) x 3.8 cm (W) x 26 cm (H).
- Battery operated: Requires 3 AA batteries (not included).

PACKAGE CONTENTS

Please ensure all items are present before proceeding with installation:

- Viper ProScore Electronic Scoreboard
- Mounting hardware (screws and wall anchors or wood screws)

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment on the back of the scoreboard.

2. Open the battery compartment cover.
3. Insert 3 AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Mounting the Scoreboard

The Viper ProScore Electronic Scoreboard can be mounted on a wall next to your dartboard for optimal viewing.



Image: Close-up view of the black mounting bracket with three screw holes, designed to secure the scoreboard to a wall.

1. Choose a suitable location on the wall, typically to the side of your dartboard, at a comfortable viewing height.
2. Use the provided mounting hardware (screws and anchors or wood screws) to securely attach the scoreboard to the wall. Ensure the scoreboard is level.



Image: The Viper ProScore Electronic Scoreboard is shown mounted on a wall to the right of a traditional dartboard, illustrating a typical installation setup.

OPERATING INSTRUCTIONS

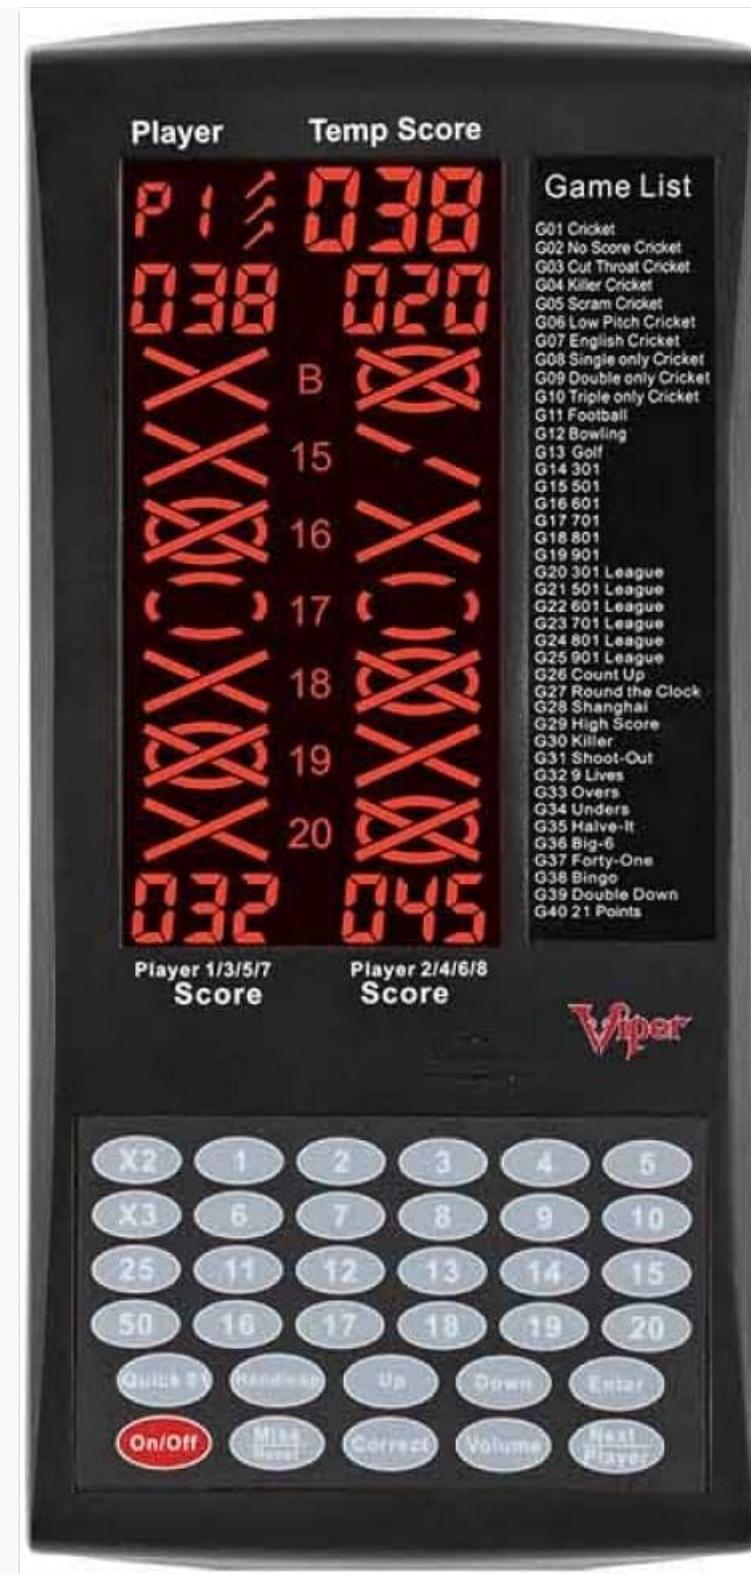


Image: The Viper ProScore Electronic Scoreboard displaying scores for two players and a list of available games. The keypad with number buttons and function keys is visible at the bottom.

1. Power On/Off

- To turn on the scoreboard, press the **On/Off** button.
- To turn off the scoreboard, press and hold the **On/Off** button until the display turns off.
- The scoreboard features an automatic shut-off and sleep mode to conserve battery life when not in use.

2. Game Selection

1. After powering on, use the **Up** and **Down** buttons to scroll through the list of 40 available games displayed on the screen.

- Once your desired game is highlighted, press the **Enter** button to select it.

3. Player Setup

- The scoreboard supports up to 8 players. Follow the on-screen prompts to select the number of players for your game.
- Some games allow for custom handicaps. Refer to the specific game rules for details.

4. Scoring

After each player's turn, manually enter the score using the numeric keypad (buttons 1-20, 25, 50). Special buttons are available for common dart scores:

- X2:** Multiplies the last entered score by 2 (Double).
- X3:** Multiplies the last entered score by 3 (Triple).
- 25:** For scoring a single bullseye.
- 50:** For scoring a double bullseye.
- Miss:** To register a missed throw.
- Next Player:** Advances to the next player's turn after scores are entered.

5. Correcting Scores

- If an incorrect score is entered, press the **Correct** button to adjust the last entry.

6. Volume Control

- Use the **Volume** button to adjust the sound level of the scoreboard's voice announcements and effects.

GAME LIST

The Viper ProScore Electronic Scoreboard includes the following 40 games:

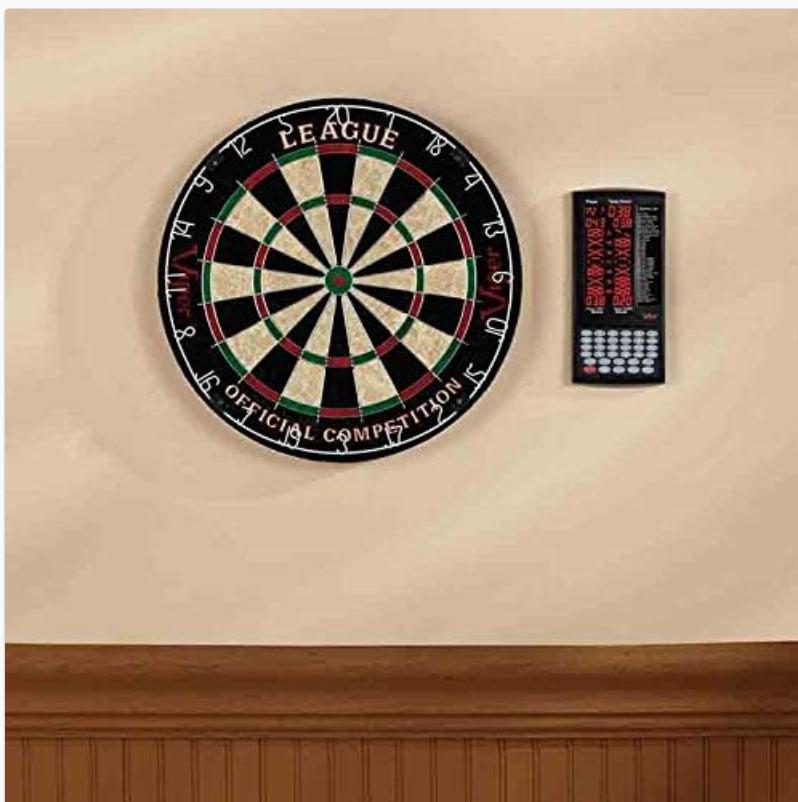


Image: A detailed view of the game list section on the scoreboard's display, showing game codes and names.

1. G01 Cricket
2. G02 No Score Cricket
3. G03 Cut Throat Cricket
4. G04 Killer Cricket
5. G05 Low Ball Cricket
6. G06 Low Pitch Cricket
7. G07 English Cricket
8. G08 Doubles Only Cricket
9. G09 Double only Cricket
10. G10 Single only Cricket
11. G11 Football
12. G12 Bowling
13. G13 Golf
14. G14 Rally
15. G15 301
16. G16 401
17. G17 501
18. G18 601
19. G19 701
20. G20 301 League
21. G21 401 League
22. G22 501 League
23. G23 601 League
24. G24 801 League
25. G25 Round the Clock
26. G26 Count Up
27. G27 Shoot-Out
28. G28 Shanghai
29. G29 Half-It
30. G30 Killer
31. G31 Shoot-Out
32. G32 9 Lives
33. G33 Over
34. G34 Unders
35. G35 High Score
36. G36 Big-6
37. G37 Forty-One
38. G38 Bingo
39. G39 Double Down
40. G40 21 Points

MAINTENANCE

- **Cleaning:** Wipe the scoreboard surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display dims or the scoreboard functions erratically. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING



- **Scoreboard does not turn on:**
 - Check if batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
- **Display is dim or flickering:**
 - Batteries may be low. Replace them.
- **Incorrect scores are registered:**
 - Ensure you are pressing the correct numeric buttons for the score.
 - Use the **Correct** button to rectify recent entries.
- **Buttons are unresponsive:**
 - Try turning the scoreboard off and on again.
 - Ensure the buttons are clean and free from debris.

SPECIFICATIONS

- **Model Number:** 37-0116
- **Dimensions (L x W x H):** 12.07 x 12.07 x 25.4 cm (4.75 x 4.75 x 10 inches)
- **Weight:** 318 grams (0.7 lbs)
- **Power Source:** 3 AA Batteries (not included)
- **Material:** Sisal (Note: This specification seems to refer to a dartboard material, not the scoreboard itself. The scoreboard is typically plastic/electronic components.)
- **Color:** Black
- **Player Capacity:** Up to 8 players
- **Games:** 40 games, 655 options

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your product or visit the official Viper website. Keep your purchase receipt for warranty claims.

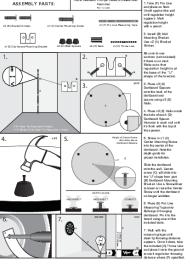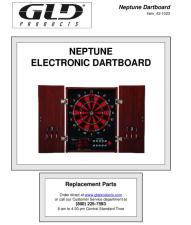	<p><u>Viper League Pro Sisal Dartboard Assembly and Game Guide</u></p> <p>Assembly instructions and game guide for the Viper League Pro Sisal Dartboard by GLD Products. Covers parts, tools, step-by-step assembly, dartboard types, scoring, popular games (301, 501, Cricket), and throwing techniques.</p>
	<p><u>Viper Neptune Electronic Dartboard: Features, Games, and Setup Guide</u></p> <p>Explore the Viper Neptune Electronic Dartboard with this comprehensive guide. Learn about its 57 games, 307 options, installation, operation, and game rules for an enhanced darting experience.</p>
	<p><u>VIPER ESC Instruction Sheet and Warranty</u></p> <p>Detailed instructions and warranty information for the VIPER ESC, covering installation, wiring, and calibration for RC models.</p>
	<p><u>Viper 7147VSEC/7147X Remote Transmitter Manual</u></p> <p>User manual for the Viper 7147VSEC/7147X remote transmitter, detailing its features, buttons, and FCC compliance.</p>
<p>Model 3108V Owner's Guide</p> <p>This product is intended for installation by a professional installer only. Attempts to install this product by a person other than a trained professional may result in damage to the vehicle's electrical system and components.</p> <p>DIRECT2CARS LLC, 1111 Lander Drive, Suite 300, Orlando, Florida 32810 - 33330</p>	<p><u>Viper 3108V Owner's Guide: Vehicle Security System</u></p> <p>Comprehensive owner's guide for the Viper 3108V vehicle security system, detailing features, operation, installation warnings, diagnostics, and warranty information.</p>
	<p><u>Manual de utilizare Viper 5706V: Ghid complet</u></p> <p>Descoperiți funcționalitățile complete ale sistemului de securitate auto Viper 5706V cu acest manual de utilizare detaliat. Ghidul acoperă instalarea, operarea, comenzi de bază și avansate, și informații despre garanție.</p>