

COSTWAY NP10766FR

COSTWAY 3-in-1 Outdoor Swing Set Instruction Manual

Model: NP10766FR

1. INTRODUCTION

Thank you for choosing the COSTWAY 3-in-1 Outdoor Swing Set. This manual provides important information regarding the safe assembly, operation, and maintenance of your swing set. Please read it thoroughly before assembly and retain it for future reference.

This multifunctional swing set is designed to provide endless fun for children aged 3 to 10 years, featuring a single swing, a face-to-face glider, and gymnastic rings. Its robust metal construction and stable design ensure a safe and enjoyable play experience.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or death.

- **Adult Supervision Required:** Always supervise children while they are using the swing set.
- **Age and Weight Limits:** Suitable for children aged 3-10 years. The maximum weight capacity for each single swing is 50 kg (110 lbs). The maximum weight capacity for the glider is 100 kg (220 lbs). The total maximum weight recommendation for the entire structure is 200 kg (440 lbs), accommodating up to 4 children simultaneously.
- **Proper Installation:** Ensure the swing set is assembled correctly according to the instructions and securely anchored to the ground using the provided stakes.
- **Safe Play Area:** Install the swing set on level ground, at least 2 meters (6.5 feet) away from any structures, fences, trees, or other obstacles. The ground beneath the swing set should be soft, such as grass, sand, or wood chips, to absorb falls.
- **Regular Inspection:** Before each use, check all nuts, bolts, ropes, and connections to ensure they are tight and secure. Replace any worn or damaged parts immediately.
- **Weather Conditions:** Do not use the swing set during strong winds, rain, or other adverse weather

conditions.

- **No Modifications:** Do not modify the swing set or attach any accessories not approved by COSTWAY.
- **Proper Use:** Instruct children to sit properly on swings, not to stand on them, and to avoid jumping off while in motion. Only one child per swing seat, and two children on the glider.

3. PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer service.

- 1 x Metal Frame for Swing Set
- 1 x Single Swing Seat with Ropes
- 1 x Face-to-Face Glider with Footrests and Ropes
- 2 x Gymnastic Rings with Ropes
- 4 x Ground Stakes
- 1 x Assembly Instruction Manual
- All necessary hardware (nuts, bolts, washers, etc.)

4. ASSEMBLY INSTRUCTIONS

Assembly requires two adults. Please follow the detailed step-by-step instructions provided in the separate assembly manual included in your package. Ensure all components are correctly identified and securely fastened.

1. **Unpack Components:** Lay out all parts on a clean, flat surface and compare them with the parts list in the assembly manual.
2. **Assemble the Main Frame:** Connect the metal tubes to form the A-shaped frame structure. Ensure all connections are tight.
3. **Attach Swings and Glider:** Securely attach the single swing, face-to-face glider, and gymnastic rings to the main frame using the provided hardware.
4. **Adjust Swing Height:** The height of the swing seats can be adjusted between 88cm and 128cm. Refer to the manual for specific adjustment mechanisms.
5. **Anchor to Ground:** Once assembled, position the swing set in its desired location. Use the four ground stakes to firmly anchor the swing set to the lawn or soft ground. This is crucial for stability and safety.
6. **Final Check:** Before first use, double-check all nuts, bolts, and connections to ensure they are fully tightened and secure.

Dimension du Produit



Âge Approprié:
3-10 ans



Utilisateurs
Maximum: 4


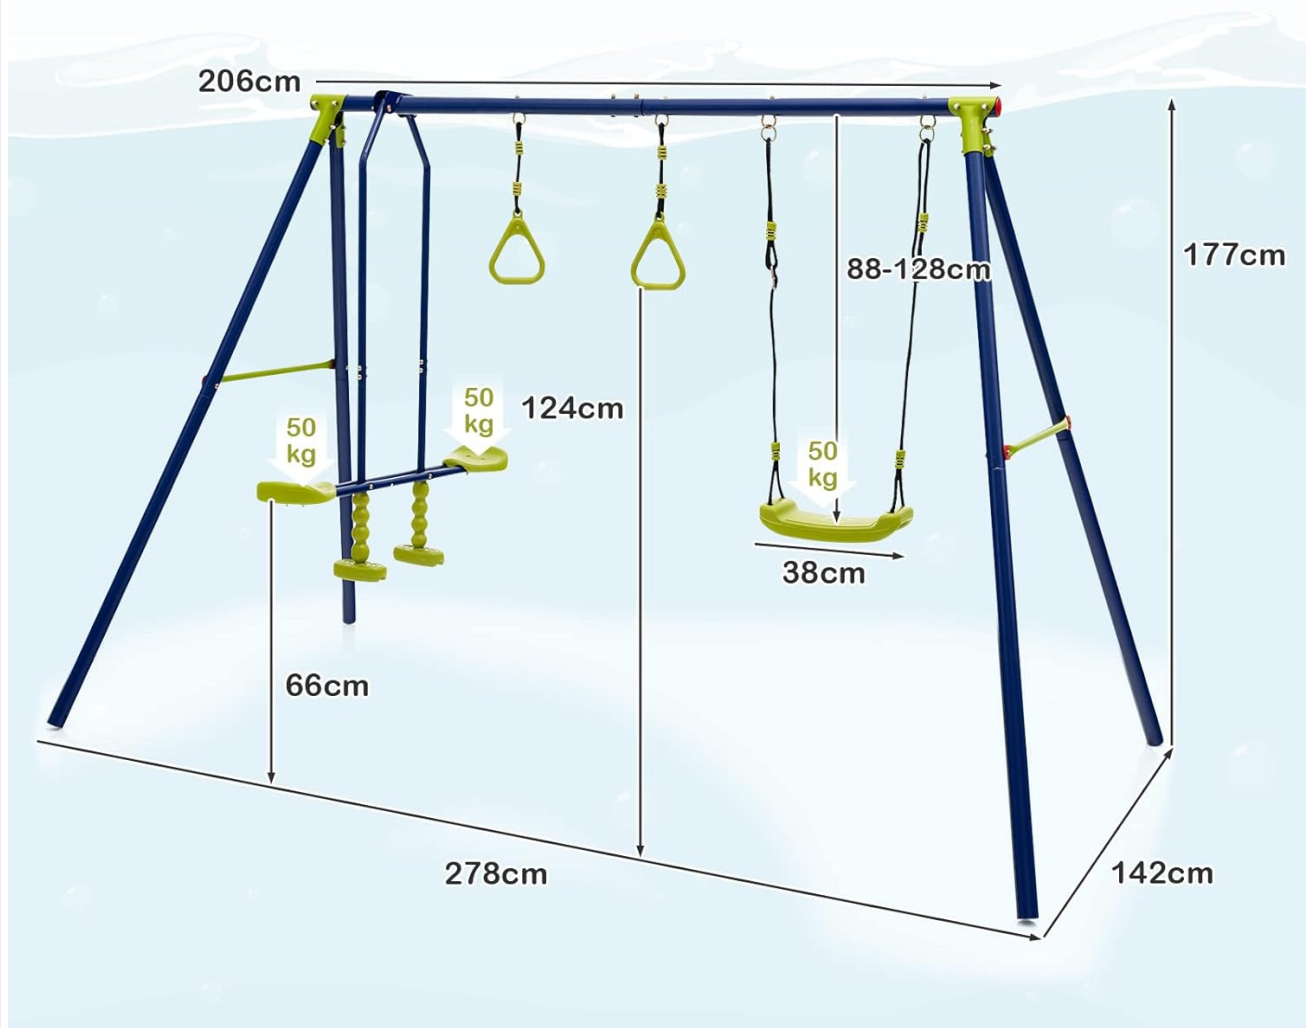


Image: Product dimensions diagram, illustrating the overall length, width, height, and individual component measurements.

Détails à Mentionner



Cadre Stable en Forme de A

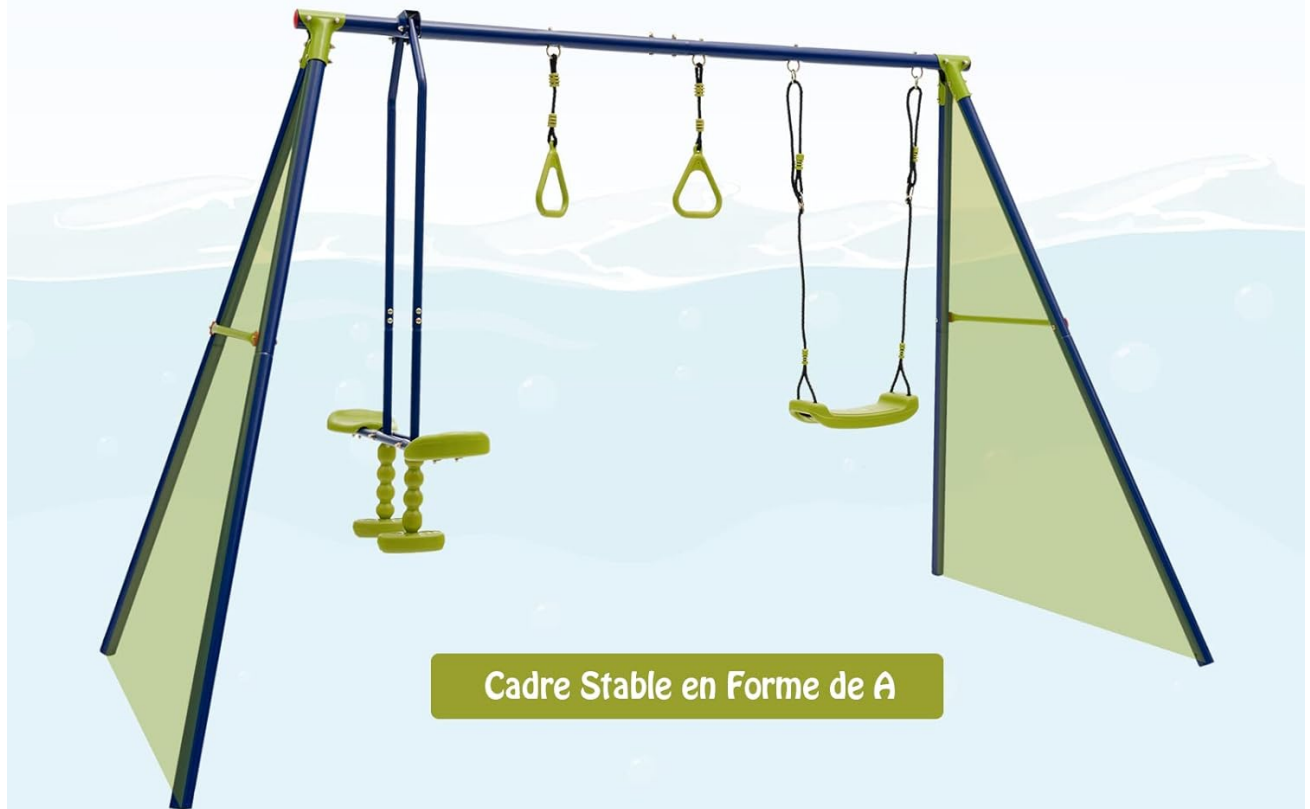

Connexion
Renforcée



Barre Transversale
Robuste



Cordes Tressées
Multicouches Durables



4 Piquets de Sol

Image: Detailed view of the swing set's construction features, highlighting reinforced connections, a robust crossbar, durable multi-layer braided ropes, and the four ground stakes for secure anchoring.

5. OPERATING INSTRUCTIONS

The COSTWAY 3-in-1 Outdoor Swing Set offers multiple play options:

- **Single Swing:** One child can use the single swing. Ensure they sit securely and hold onto the ropes.
- **Face-to-Face Glider:** Two children can use the glider, sitting opposite each other and pushing off the ground to create motion.
- **Gymnastic Rings:** Children can use the gymnastic rings for hanging and developing balance and upper body strength.

Adjusting Swing Height

The height of the swing seats can be adjusted to suit different children's heights. To adjust, locate the adjustment mechanism on the ropes (usually a buckle or clip system). Carefully raise or lower the swing seat to the desired height between 88cm and 128cm, ensuring it is securely locked in place before use. Always check that both sides of the swing are adjusted to the same height to prevent uneven swinging.

Siège de Balançoire Amusant



88-128cm



Cordes Suspendues pour le Réglage de la Hauteur



Siège Antidérapant Confortable en Forme de U

Image: A child enjoying the single swing. An inset image demonstrates the adjustable height feature of the swing ropes, allowing customization between 88cm and 128cm.

Balançoire Multifonctionnelle 3 en 1

Moins de Temps d'Écran et Plus de Divertissement en Plein Air



Planeur pour 2
Personnes

Anneaux de Gymnastique



Balançoire

Image: Children engaging with the multi-functional swing set, illustrating the use of the two-person glider, gymnastic rings, and a single swing.

6. MAINTENANCE

Regular maintenance is essential to ensure the longevity and safety of your swing set.

- **Daily/Before Each Use:** Visually inspect the swing set for any loose parts, sharp edges, or damaged components. Ensure the ground stakes are firmly in place.
- **Weekly:** Check all nuts, bolts, and connections for tightness. Tighten any loose hardware. Inspect ropes and seats for signs of wear, fraying, or cracks.
- **Monthly:** Clean the metal frame and plastic components with a mild soap and water solution. Rinse thoroughly and dry. Check the powder coating for any chips or rust spots and touch up if necessary to prevent further corrosion.
- **Seasonal:** Before and after periods of heavy use or storage, perform a thorough inspection of the entire structure. Consider lubricating moving parts if they become stiff or squeaky (use a non-toxic, outdoor-safe lubricant).
- **Storage:** If storing the swing set for an extended period, especially during winter, disassemble it and store

components in a dry, protected area to prevent weather damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing set feels unstable or wobbly.	Ground stakes not fully inserted or loose; uneven ground; loose frame connections.	Ensure ground stakes are fully driven into the ground. Check and tighten all frame bolts and nuts. Relocate to a more level surface if necessary.
Squeaking noises during use.	Friction at connection points or hooks.	Apply a small amount of non-toxic, outdoor-safe lubricant to the metal-on-metal contact points (e.g., swing hangers).
Swing ropes appear worn or frayed.	Normal wear and tear; exposure to elements.	Immediately cease use. Contact customer service for replacement ropes. Do not attempt to repair frayed ropes.
Missing parts during assembly.	Packaging error.	Refer to the package contents list and contact COSTWAY customer service with your model number and details of the missing parts.

8. SPECIFICATIONS

Feature	Detail
Model Number	NP10766FR
Overall Dimensions (L x W x H)	278 cm x 142 cm x 177 cm (109.4 in x 55.9 in x 69.7 in)
Material	Powder-coated Metal Frame, PE Plastic Seats/Rings
Adjustable Swing Height	88 cm - 128 cm (34.6 in - 50.4 in)
Max Weight per Single Swing	50 kg (110 lbs)
Max Weight for Glider	100 kg (220 lbs)
Total Max Weight Recommendation	200 kg (440 lbs)
Maximum Number of Children	4
Recommended Age	3-10 years
Net Weight	21 kg (46.3 lbs)
Color	Blue, Green
Assembly Required	Yes

Convient à Divers Endroits Extérieurs



Développer
l'Équilibre des
Enfants



Améliorer la
Coordination



Rendre l'Exercice
Amusant



Booster la
Confiance en Soi



Promouvoir
l'Amitié



Image: The swing set shown in different outdoor settings, emphasizing its suitability for gardens, yards, and parks.

9. WARRANTY AND SUPPORT

COSTWAY products are designed for quality and durability. For warranty information, please refer to the specific warranty card included with your purchase or visit the official COSTWAY website. If you encounter any issues, require replacement parts, or have questions not covered in this manual, please contact COSTWAY customer support.

Customer Support: Please visit www.costway.com for contact information and support resources.