

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PlayStation](#) /

› [PlayStation DualSense Edge Wireless Controller User Manual](#)

PlayStation 1

PlayStation DualSense Edge Wireless Controller User Manual

Model: 1

INTRODUCTION

The PlayStation DualSense Edge Wireless Controller is engineered for high performance and extensive personalization, allowing players to tailor their gaming experience. This advanced controller builds upon the immersive features of the standard DualSense controller, offering enhanced customization options to suit individual playstyles.



Image: The DualSense Edge Wireless Controller shown alongside its dedicated carrying case.

SETUP

Initial Charging and Connection

Before first use, ensure your DualSense Edge controller is fully charged. Connect the controller to your PlayStation 5 console using the supplied USB braided cable. The controller can be charged while stored in its carrying case for convenience.

- **Wired Connection:** Connect the USB cable from the controller to a USB port on your PS5 console.
- **Wireless Pairing:** Once connected via USB, the controller will automatically pair with your PS5. You can then disconnect the cable and use the controller wirelessly.



©2022 Sony Interactive Entertainment Inc. All rights reserved.
Design and specifications are subject to change without notice.

Image: Contents of the DualSense Edge package, including the controller, carrying case, and USB-C cable.

OPERATING THE CONTROLLER

Core Features

- **Haptic Feedback:** Experience varying force and tension at your fingertips, simulating in-game actions and environments.
- **Adaptive Triggers:** Feel different levels of force and tension when interacting with in-game gear and environments.
- **Built-in Microphone:** Communicate with teammates or friends directly through the controller.
- **Motion Controls:** Utilize the integrated motion sensor for intuitive control in supported games.

Customization Options

The DualSense Edge offers extensive customization to fine-tune your gameplay:

- **Changeable Stick Caps:** Three types of stick caps (standard, high dome, low dome) are included to help you stay comfortable and maintain grip.
- **Remappable Buttons:** Customize the layout of your favorite games by remapping or deactivating specific button inputs.
- **Adjustable Trigger Lengths:** Manually set the travel distance of your left and right triggers for optimal response in different game genres.
- **Mappable Back Buttons:** Two swappable sets of back buttons can be configured to any other button input, providing quick access to game-changing actions.
- **Stick Sensitivity & Dead Zones:** Fine-tune your aim by adjusting stick sensitivity and dead zones for precise control.
- **Quick-Swap Control Profiles:** Save your ideal control settings to unique profiles and switch between them on-the-fly using the dedicated Fn button.



©2022 Sony Interactive Entertainment Inc. All rights reserved.
Design and specifications are subject to change without notice.

Image: Side view of the controller highlighting its ergonomic design.



©2022 Sony Interactive Entertainment Inc. All rights reserved.
Design and specifications are subject to change without notice.

Image: Rear view of the controller showing the mappable back buttons and trigger adjustment switches.



©2022 Sony Interactive Entertainment Inc. All rights reserved.
Design and specifications are subject to change without notice.

Image: Different stick cap options for personalized comfort and grip.

MAINTENANCE

Cleaning

To maintain the longevity and appearance of your controller, regularly wipe it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

Battery Care

The controller is equipped with a Lithium Ion battery. For optimal battery life, avoid fully discharging the controller frequently. Charge it regularly using the provided USB cable or a compatible charging dock.

Replacing Stick Modules

The DualSense Edge features replaceable stick modules, allowing you to maintain peak performance. Replacement stick modules are available for purchase separately. Refer to the official PlayStation support website for detailed instructions on how to replace them.



©2022 Sony Interactive Entertainment Inc. All rights reserved.
Design and specifications are subject to change without notice.

Image: An exploded view demonstrating the replaceable stick module component.

TROUBLESHOOTING

- Connectivity Issues:** Ensure the controller is within range of the PS5 console. If using a wired connection, check the USB cable and ports. Try re-pairing the controller by connecting it via USB.
- Charging Problems:** Verify the USB cable is securely connected to both the controller and the PS5 or charging dock. Ensure the charging port on the controller is clean and free of debris.
- Unresponsive Buttons/Stick Drift:** If buttons are unresponsive or joysticks exhibit unintended movement (stick drift), try resetting the controller. If the issue persists, consider replacing the stick module or contacting PlayStation support.
- Resetting the Controller:** Locate the small reset button on the back of the controller (often inside a small hole). Use a straightened paperclip to press and hold the button for 5 seconds.

SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	1
Brand	PlayStation
Dimensions	8 x 8 x 4.5 inches
Item Weight	2.57 pounds
Batteries	1 Lithium Ion battery (included)
Manufacturer	Sony
Release Date	February 23, 2023

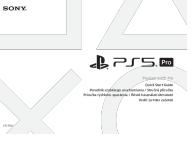
WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official PlayStation website or contact PlayStation customer service. Keep your proof of purchase for any warranty claims.

Online Support: www.playstation.com/support/

Related Documents - 1

	<p>PowerA Solo Charging Station for DualSense Controllers - User Manual</p> <p>User manual for the PowerA Solo Charging Station, detailing setup, troubleshooting, specifications, warranty, and compliance information for PlayStation 5 DualSense and DualSense Edge wireless controllers.</p>
	<p>How to Connect and Use the DualSense Edge Wireless Controller</p> <p>A guide on how to connect, pair, update, charge, and use the DualSense Edge wireless controller with PS5 consoles and PCs. Includes setup instructions and compatibility information.</p>
	<p>Sony DualSense Edge Wireless Controller Instruction Manual</p> <p>Comprehensive instruction manual for the Sony DualSense Edge Wireless Controller, covering safety precautions, features, setup, and handling for PlayStation 5 users.</p>

 <p>PDP Afterglow Wave Dual Charger Quick Start Guide</p> <p>English Français Español - Mexico Español - Argentina Français - Canada Italiano Português - Brasil Português - Argentina</p>	<p><u>PDP Afterglow Wave Dual Charger Quick Start Guide for PlayStation 5 & 4</u></p> <p>This quick start guide provides instructions for setting up and using the PDP Afterglow Wave Dual Charger for PlayStation 5 and PlayStation 4 consoles, covering assembly, charging, lighting features, and troubleshooting.</p>
	<p><u>PlayStation®5 Pro Quick Start Guide</u></p> <p>Get started with your PlayStation®5 Pro console. This guide provides essential steps for setup, connecting your console, account creation, navigating the interface, and beginning your gaming experience.</p>
	<p><u>PlayStation 5 Pro Quick Start Guide: Setup and Operation</u></p> <p>Get started with your Sony PlayStation 5 Pro console. This guide covers initial setup, controller pairing, connecting to your TV, and essential features like parental controls. Find setup instructions and support links for the PS5 Pro.</p>