

Sharp SPC483

Sharp SPC483 Digital Alarm Clock User Manual

Model: SPC483

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Sharp SPC483 Digital Alarm Clock. Please read this guide thoroughly to ensure proper use and to maximize the clock's features. This battery-operated alarm clock features a tactile rubberized finish, a clear LCD display with an on-demand blue backlight, and an ascending alarm for a gentle wake-up.



Image: The Sharp SPC483 Digital Alarm Clock, showcasing its compact design and clear digital display.

PRODUCT OVERVIEW

The Sharp SPC483 Digital Alarm Clock is designed for simplicity and portability. Its key features include:

- **Tactile Rubberized Case:** Provides a comfortable grip and durable protection.
- **Large 1-inch LCD Display:** Ensures easy readability from a distance.
- **Battery Operated:** Requires 2 AAA batteries (not included), offering cordless convenience.
- **On-Demand Blue Backlight:** Illuminates the display for 5 seconds when activated, ideal for night viewing.
- **Ascending Alarm:** Starts softly and gradually increases in volume.
- **5-Minute Snooze:** Allows for additional rest before the alarm sounds again.
- **Compact Size:** Measures approximately 4 inches (L) x 1.7 inches (W) x 2.3 inches (H), making it suitable for travel or small spaces.



Image: Key features of the Sharp SPC483 Digital Alarm Clock, including its display, finish, backlight, and alarm type.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover off.
3. Insert two (2) new AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.

SHARP®

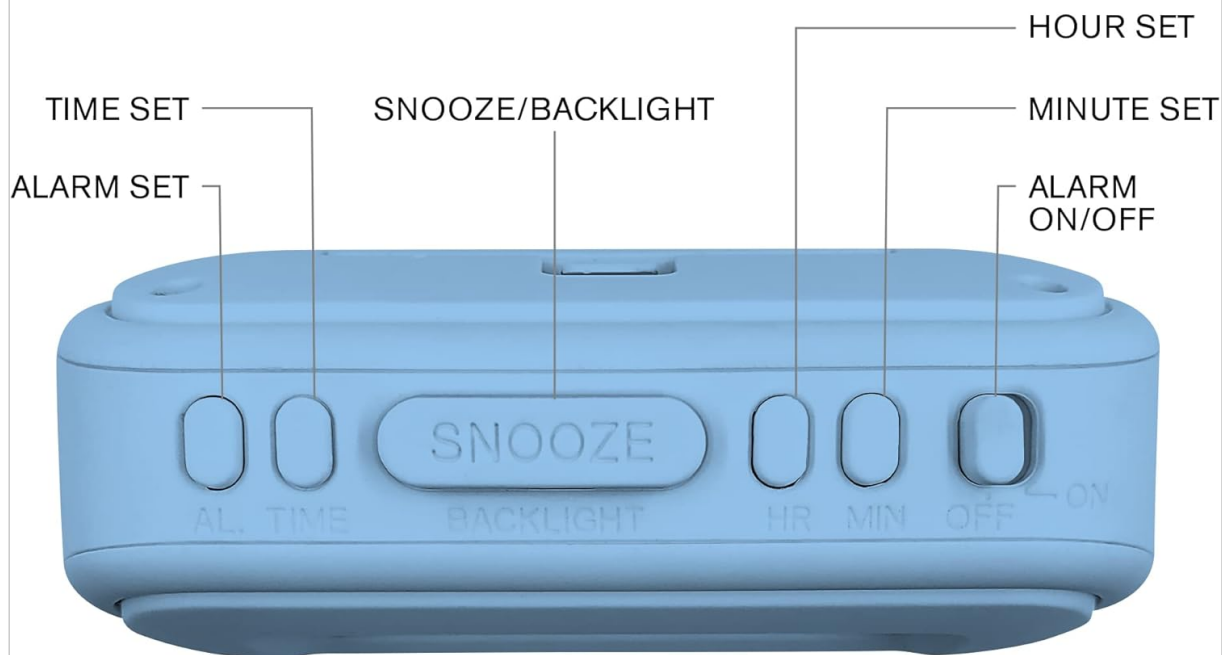


Image: Top controls of the Sharp SPC483 Digital Alarm Clock, indicating button functions for time and alarm settings.

2. Setting the Time

1. Press and hold the **TIME SET** button (labeled 'AL. TIME' on the left side) until the hour digits begin to flash.
2. Press the **HR** button to adjust the hour. Note the PM indicator for afternoon hours.
3. Press the **MIN** button to adjust the minutes.
4. Press the **TIME SET** button again to confirm the time and exit time setting mode.

OPERATING INSTRUCTIONS

1. Setting the Alarm

1. Press and hold the **ALARM SET** button (labeled 'AL. TIME' on the left side, same button as time set but a short press will show alarm time, long press for setting) until the alarm hour digits begin to flash.
2. Press the **HR** button to adjust the alarm hour.
3. Press the **MIN** button to adjust the alarm minutes.
4. Press the **ALARM SET** button again to confirm the alarm time.
5. To activate the alarm, slide the **ALARM ON/OFF** switch (on the right side) to the 'ON' position. An alarm icon will appear on the display.
6. To turn off the alarm, slide the **ALARM ON/OFF** switch to the 'OFF' position. The alarm icon will disappear.

2. Snooze Function

When the alarm sounds, press the large **SNOOZE/BACKLIGHT** button located on the top center of the clock. The alarm will pause for approximately 5 minutes before sounding again. This can be repeated multiple times.

3. On-Demand Blue Backlight

To illuminate the display in low-light conditions, press the **SNOOZE/BACKLIGHT** button. The blue backlight will activate for 5 seconds and then automatically turn off to conserve battery life.

PRESS THE SNOOZE BUTTON TO ACTIVATE THE BACKLIGHT

PLEASE REFERENCE THE BULLET POINTS IN THE LISTING FOR MORE PRODUCT INFORMATION



LCD DISPLAY WITH 5 SECOND BACKLIGHT FOR QUICK AND EASY NIGHT TIME VIEWING

Image: The clock display illuminated by its blue backlight for easy viewing in the dark.

4. Official Product Video

Your browser does not support the video tag.

Video: An official product video showcasing the Sharp Digital Alarm Clock in Light Blue, demonstrating its features and ease of use.

MAINTENANCE

To ensure the longevity and optimal performance of your Sharp SPC483 Digital Alarm Clock, follow these maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the finish or display.
- **Battery Replacement:** Replace batteries when the display becomes dim or the clock stops functioning. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Keep the clock away from extreme temperatures, direct sunlight, and high humidity.

TROUBLESHOOTING

Problem	Solution
Display is blank or dim.	Check battery installation. Replace with new AAA batteries if necessary. Ensure correct polarity.
Alarm does not sound.	Ensure the ALARM ON/OFF switch is in the 'ON' position. Verify the alarm time is set correctly.
Time is incorrect.	Reset the time using the 'Setting the Time' instructions. Check battery strength.
Backlight does not activate.	Ensure batteries are fresh. The backlight is on-demand and only stays on for 5 seconds.

SPECIFICATIONS

- **Model Number:** SPC483
- **Display Type:** Digital LCD
- **Power Source:** Battery Powered (2 x AAA batteries, not included)
- **Product Dimensions:** 4 inches (L) x 1.7 inches (W) x 2.3 inches (H)
- **Special Features:** Ascending Alarm, 5-Minute Snooze, On-Demand Blue Backlight
- **Case Material:** Rubberized
- **Room Type:** Bedroom, Travel

SHARP®

SPACE SAVING COMPACT DESIGN



Image: Dimensions of the Sharp SPC483 Digital Alarm Clock, illustrating its compact size.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Sharp website. Keep your proof of purchase for any warranty claims.