

- Manuals.plus /
- > [Nautica](#) /
 - > Nautica NST 47mm Men's Chronograph Watch User Manual

Nautica NAPNSS303

Nautica NST 47mm Men's Chronograph Watch User Manual

Model: NAPNSS303

INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Nautica NST 47mm Men's Chronograph Watch, model NAPNSS303. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The Nautica NST Chronograph Watch features a robust 47mm stainless steel case, a striking blue dial, and a comfortable blue silicone strap. It is equipped with a precise quartz movement and offers chronograph functionality, along with 100 meters of water resistance.



Figure 1: Front view of the Nautica NST 47mm Men's Chronograph Watch with blue dial and silicone strap.

COMPONENTS

Familiarize yourself with the main components of your watch:

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Hour, Minute, Second Hands:** Indicate current time.
- **Chronograph Sub-dials:** Measure elapsed time (seconds, minutes, 24-hour indicator).
- **Date Window:** Displays the current date.
- **Bezel:** Unidirectional rotating bezel (if applicable, for timing).



Figure 2: Detailed view of the watch dial, highlighting the crown, pushers, and chronograph sub-dials.

SETUP

1. Setting the Time

1. Pull the crown out to position 2 (the outermost position). The second hand will stop.
2. Rotate the crown to move the hour and minute hands clockwise until the desired time is set. Ensure AM/PM is correctly observed if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into position 0 (normal operating position) to start the watch.

2. Setting the Date

1. Pull the crown out to position 1 (the first click).
2. Rotate the crown clockwise or counter-clockwise (depending on the model) until the correct date appears in the date window. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
3. Push the crown back into position 0.

3. Adjusting the Strap

The silicone strap features a standard buckle clasp. Adjust the strap by inserting the pin into the desired hole for a comfortable and secure fit. Ensure the watch is not too tight or too loose on your wrist.

OPERATING THE CHRONOGRAPH

Your Nautica NST watch is equipped with a chronograph function for measuring elapsed time.

1. **Start:** Press Pusher A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press Pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press Pusher B (bottom pusher) to reset all chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some chronographs allow for split time measurement. Refer to specific movement instructions if your model supports this.

Water Resistance

This watch is water resistant to 100 meters (330 feet). This rating makes it suitable for swimming and snorkeling, but not for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.

MAINTENANCE

Cleaning

Regularly clean your watch with a soft, damp cloth. For the silicone strap, mild soap and water can be used. Avoid harsh chemicals or abrasive materials that could damage the watch finish or strap.

Battery Replacement

Your watch is powered by a quartz battery. When the battery runs low, the watch may stop or the second hand may jump in irregular intervals (End-of-Life indicator). Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original gift box can be used for storage.



Figure 3: Rear view of the watch, displaying the stainless steel case back with model number NAPNSS303 and water resistance rating.

TROUBLESHOOTING

- **Watch not running:**

Check if the crown is fully pushed in to position 0. If the watch still does not run, the battery may need replacement. Consult a professional watch technician.

- **Chronograph hands not resetting to zero:**

This may require a chronograph reset procedure. Pull the crown out to position 2. Press Pusher A to advance the chronograph second hand, and Pusher B to advance the chronograph minute hand (or vice versa, depending on the movement) until they align to zero. Push the crown back in to position 0.

- **Date not changing correctly:**

Ensure the time is set correctly, especially the AM/PM cycle. Avoid setting the date between 9 PM and 3 AM. If the

issue persists, consult a service center.

• **Water inside the watch:**

If you notice condensation or water droplets inside the watch, immediately take it to a qualified watch repair center. Do not attempt to open the watch yourself, as this will void the warranty and can cause further damage.

SPECIFICATIONS

Model Number	NAPNSS303
Brand	Nautica
Case Material	Stainless Steel
Case Diameter	47 mm
Case Thickness	12.75 mm
Crystal	Mineral Crystal
Dial Color	Blue
Strap Material	Silicone
Strap Color	Blue
Strap Width	24 mm
Band Length	22 cm
Movement	Quartz
Display Type	Analog
Water Resistance	100 Meters (330 Feet)
Clasp Type	Buckle
Product Dimensions	6 x 4 x 0.8 cm
Item Weight	90 Grams
Included Components	Gift Box

WARRANTY INFORMATION

This Nautica watch comes with a manufacturer's warranty. The provided information indicates **a43-year manufacturer warranty**. Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty card included with your watch or contact Nautica customer service.
Note: Warranty coverage typically applies to manufacturing defects and does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

SUPPORT AND CONTACT

For further assistance, technical support, or service inquiries regarding your Nautica NST watch, please contact Nautica

customer service through their official website or the contact information provided in your watch's packaging. You can visit the official Nautica store for more information:[Nautica Official Store](#)

© 2026 Nautica. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question