

[Manuals.plus](#) /

> [Hoover](#) /

> Hoover TurboScrub XL Upright Carpet Cleaner Machine User Manual

Hoover FH68020V

Hoover TurboScrub XL Upright Carpet Cleaner Machine User Manual

Model: FH68020V

PRODUCT OVERVIEW





Image Description: The Hoover TurboScrub XL Upright Carpet Cleaner Machine is shown with its main unit, featuring clear tanks for water and solution, and the SpinScrub brush system at the base. Alongside the machine, various accessories are displayed, including a bottle of Hoover Paws & Claws deep clean and neutralize solution, a cleaning tool, a mesh storage bag, and several attachment nozzles for different cleaning tasks.

The Hoover TurboScrub XL Upright Carpet Cleaner Machine is designed for deep cleaning carpets and tackling tough stains. It features 5-counter-rotating SpinScrub Brushes for effective dirt removal and HeatForce technology for faster drying. The patented TruMax Recovery Tank allows for extended cleaning sessions by minimizing the need for frequent emptying and refilling. This model also includes a variety of versatile tools to address stubborn messes on various surfaces beyond just carpets.

SETUP

Before first use, ensure all components are present and undamaged. Refer to the packaging contents for a complete list.

1. Assembly:

- Carefully remove the main unit and all accessories from the packaging.
- Attach the handle to the main body of the cleaner. Ensure it clicks securely into place.
- Verify that the clean water tank and dirty water recovery tank are properly seated.

2. Filling the Clean Water Tank:

- Remove the clean water tank from the machine.
- Unscrew the cap and fill the tank with warm tap water up to the indicated fill line.
- Add the recommended amount of Hoover cleaning solution. Do not overfill.
- Securely replace the cap and reinsert the tank into the machine.

3. Power Connection:

- Unwind the power cord completely.
- Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for effective carpet cleaning:

1. Pre-Cleaning:

- Vacuum the area thoroughly to remove loose dirt and debris.
- Pre-treat heavily soiled areas or stubborn stains with a suitable carpet pre-treatment solution, following the product's instructions.

2. Starting the Machine:

- Turn on the power switch, usually located near the handle or base.
- Recline the handle to the operating position.

3. Cleaning Technique:

- Press the solution trigger on the handle and make a slow, forward wet pass.
- Release the trigger and make a slow, backward dry pass over the same area to extract the dirty solution.
- Overlap each cleaning path slightly to ensure complete coverage.
- For heavily soiled areas, repeat the wet and dry passes as needed.

4. Using Attachments:

- To use the hose and attachment tools, ensure the machine is off and unplugged.
- Connect the hose to the designated port on the machine.
- Attach the desired tool (e.g., upholstery tool, crevice tool) to the end of the hose.
- Plug in and turn on the machine. Use the tool to clean stairs, upholstery, or other hard-to-reach areas.

5. Monitoring Tanks:

- Monitor the clean water tank and refill as necessary.
- Monitor the dirty water recovery tank and empty it when it reaches the "Full" line or when suction decreases.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your carpet cleaner.

1. After Each Use:

- **Empty and Rinse Tanks:** Remove and empty both the clean water and dirty water tanks. Rinse them thoroughly with warm water. Allow them to air dry before reassembling.
- **Clean Nozzle and Brushes:** Remove the nozzle cover and rinse any debris. Clean the SpinScrub brushes to remove hair and fibers. A brush cleaning tool may be included for this purpose.
- **Wipe Down Exterior:** Wipe the exterior of the machine with a damp cloth.

2. Periodic Maintenance:

- **Check Hoses and Connections:** Inspect hoses and connections for any blockages or damage.
- **Store Properly:** Store the machine in a dry, temperate area. Do not store with water in the tanks.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No Power	• Not plugged in • Circuit breaker tripped • Power switch off	• Ensure plug is fully inserted into a working outlet. • Check and reset the circuit breaker. • Turn the power switch to the "ON" position.
Poor Suction	• Dirty water tank full • Nozzle or hose clogged • Tank not seated properly	• Empty the dirty water tank. • Clear any blockages from the nozzle or hose. • Ensure the dirty water tank is securely latched.
No Solution Dispensing	• Clean water tank empty • Solution tank cap not sealed • Solution line clogged	• Refill the clean water tank. • Ensure the solution tank cap is tightly closed. • Check and clear any clogs in the solution dispensing system.

SPECIFICATIONS

- **Brand:** Hoover
- **Model Name:** FH68020V
- **Product Type:** Upright Carpet Cleaner Machine
- **Technology:** SpinScrub Brushes, HeatForce
- **Tank System:** TruMax Recovery Tank
- **Color:** Black
- **Power Source:** Battery Powered
- **UPC:** 073502048016
- **ASIN:** B0BT226DKK
- **Date First Available:** January 25, 2023

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Hoover website or contact their customer service.

- **Official Hoover Store:** [Visit the Hoover Store on Amazon](#)
- **Customer Service:** Refer to your product packaging or the official Hoover website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does water leak out from the bottom of my Hoover TurboScrub XL Upright Carpet Cleaner?

Water leaking from the bottom of your Hoover TurboScrub XL is typically caused by improper tank seating or seal issues. Please check the following: Check Tank Seating: Ensure both the Clean Water Tank and...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0BT226DKK>

More documents and user manuals: <https://manuals.plus/>