

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MY ARCADE](#) /
- › [MY ARCADE DGUNL-7012 Atari GameStation Pro: User Manual](#)

## MY ARCADE DGUNL-7012

# MY ARCADE DGUNL-7012 Atari GameStation Pro: User Manual

Model: DGUNL-7012

## 1. INTRODUCTION

The MY ARCADE DGUNL-7012 Atari GameStation Pro is a plug-and-play video game system designed to bring classic Atari gaming to your television. This system includes over 200 officially licensed games from Atari 2600, Atari 5200, Atari 7800, and Atari arcade titles. It features two 2.4 GHz wireless joysticks with built-in paddle controls, an intuitive user interface, dynamic RGB LED lighting, and game save options. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure an optimal gaming experience.



Image 1.1: The MY ARCADE Atari GameStation Pro console with its two wireless joysticks. The console is black with an Atari logo, and the joysticks feature colorful LED rings.

## 2. SETUP

Follow these steps to set up your Atari GameStation Pro:

1. **Unpack Contents:** Carefully remove the console, two wireless controllers, HDMI cable, USB power cable, and user guide from the packaging.
2. **Install Controller Batteries:** Each wireless joystick requires 2 AA batteries (not included). Open the battery compartment on the underside of each joystick and insert the batteries, ensuring correct polarity. Close the compartment securely.



*Image 2.1: A wireless joystick being held, showing its ergonomic design and paddle control. Batteries are inserted into the base.*

3. **Connect to TV:** Connect one end of the included HDMI cable to the HDMI OUT port on the GameStation Pro console and the other end to an available HDMI input on your television.



*Image 2.2: The GameStation Pro console and two joysticks positioned in front of a television screen, illustrating the connection setup.*

- 4. Power Connection:** Connect the USB power cable to the USB-C power input on the console. Plug the other end of the USB power cable into a standard USB power adapter (not included) or a powered USB port.



Image 2.3: A close-up side view of the GameStation Pro console, highlighting the USB-C ports for power and potential accessories.

5. **Power On:** Turn on your television and select the correct HDMI input. Press the power button on the GameStation Pro console. The console's RGB LED lights will illuminate, and the main menu should appear on your screen.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Console Controls

The console features a power button and two main control dials with integrated buttons.

- **Power Button:** Press to turn the console on or off.
- **Navigation Dial/Button:** Used for menu navigation and selection.
- **Action Dial/Button:** Used for in-game actions or menu selections.



## GAMESTATION PRO GAME LIST

### DGUNL-7012 | 201 GAMES

#### **ATARI 2600**

3D Tic-Tac-Toe  
Adventure  
Adventure II  
Air-Sea Battle  
Aquaventure  
Asteroids  
Atari Video Cube  
Basic Math  
Basketball  
Bowling  
Boxing  
Breakout  
Canyon Bomber  
Centipede  
Championship Soccer  
Circus Atari  
Combat  
Combat Two  
Crystal Castles  
Dark Chambers  
Demons To Diamonds  
Desert Falcon  
Dodge 'Em  
Double Dunk  
Drag Race  
Fast Eddie  
Fatal Run  
Flag Capture  
Football  
Frog Pond  
Golf  
Gravitar  
Hangman  
Haunted House  
Home Run  
Human Cannonball  
Indy 500  
Maze Craze  
Millipede  
Miniature Golf  
Missile Command  
MotoRodeo  
Night Driver  
Off the Wall  
Outlaw  
Pong (Video Olympics)  
Quadrun  
Radar Lock  
RealSports Baseball

RealSports Basketball  
RealSports Boxing  
RealSports Football  
RealSports Soccer  
RealSports Tennis  
RealSports Volleyball  
Road Runner  
Saboteur  
Save Mary!  
Secret Quest  
Sky Diver  
Slot Racers  
Solaris  
Space Raid  
Space War  
Sprint Master  
Steeplechase  
Street Racer  
Stunt Cycle  
Submarine Commander  
Super Baseball  
Super Breakout  
Super Football  
Surround  
Swordquest: Earthworld  
Swordquest: Fireworld  
Swordquest: Waterworld  
Tempest  
Video Checkers  
Video Pinball  
Warlords  
Wizard  
Yars' Revenge

#### **ATARI 5200**

Centipede  
Frisky Tom  
Meebzork  
Millipede  
Missile Command  
Realsports Baseball  
Realsports Basketball

#### **ATARI 7800**

Alien Brigade  
Asteroids  
Basketbrawl  
Centipede  
Dark Chambers  
Desert Falcon  
Food Fight  
Motorpsycho  
Realsports Baseball  
Scrapyard Dog

#### **ATARI ARCADE**

Alpha One  
Asteroids  
Asteroids Deluxe  
Atari Baseball  
Atari Football  
Atari Soccer  
Avalanche  
Basketball  
Canyon Bomber  
Centipede  
Cloud 9  
Crystal Castles  
Dominos  
Drag Race  
Fire Truck  
Food Fight  
Gravitar  
I, Robot  
Liberator  
Lunar Battle  
Lunar Lander  
Major Havoc  
Millipede  
Missile Command  
Monte Carlo  
Night Driver  
Pool Shark  
Quantum  
Red Baron  
Runaway  
Sky Diver  
Sky Raider  
Space Duel  
Super Breakout  
Super Bug  
Tempest  
Tournament Table

Ultra Tank  
Warlords

#### **PIKO INTERACTIVE**

##### **8-BIT**

8 Eyes  
Bad Street Brawler  
Dash Galaxy  
Eliminator Boat Duel  
Escape From Atlantis  
Exploding Fist  
Free Fall  
Gorodki  
Lan Master  
Lawn Mower  
Little Lancelot  
Mermaids of Atlantis  
Metal Mech  
Motor City Patrol  
Nightshade: Part 1  
Noah's Ark  
Pow 2  
Power Punch II  
Pyramids of Ra  
(Handheld)  
Pyramids of Ra (Console)  
Snakky  
Stanley  
Super Hunchback  
Target: Renegade  
The Fidgetts  
The Humans  
The Immortal  
The Mutant Virus  
Thunderbolt  
Treasure Master  
Viking Child  
Zooming Secretary

#### **PIKO INTERACTIVE**

##### **16-BIT**

Beast Ball  
Brave Battle Saga  
Canon  
The Humans  
The Immortal  
Jim Power  
Mega 3D Noah's Ark  
Radical Rex  
Street Racer

Sumo Slam  
Switchblade  
Sword of Sodan  
The Gadget Twins  
Thunderbolt II  
Tinhead  
Top Racer 2  
Water Margin  
World Trophy Soccer  
Zany Golf

#### **PIKO INTERACTIVE**

##### **ARCADE**

Burglar X  
Cheese Chase  
Diver Boy  
Fancy World  
Galaxy Gunners  
Lucky Boom  
Maniac Square  
Mighty Warriors  
Ping Pong Masters 93  
Snow Board  
Championship  
Steel Force  
World Rally

© 2025 Atari Interactive, Inc. ATARI, the ATARI logo and all individual Atari game names and logos are trademarks or registered trademarks of Atari Interactive, Inc. in the U.S. and other countries. All Rights Reserved. 2025 by Piko Interactive LLC.

Image 3.1: A detailed view of the GameStation Pro console's top surface, showing the power button and the two illuminated control dials.

### 3.2. Wireless Joystick Controls

The wireless joysticks replicate the classic Atari experience with modern enhancements.

- **Joystick:** Directional control for movement in games.
- **Fire Button (Red):** Primary action button for most games.

- **Paddle Control (Dial):** Rotational control for games like PONG® and Breakout®.
- **Home Button:** Returns to the main menu.
- **Select Button:** Used for various in-game functions or menu navigation.
- **Start Button:** Used to begin games or pause.

### 3.3. Navigating the Menu and Selecting Games

Upon powering on, the system will display the main game selection menu.

1. Use the joystick or the console's navigation dial to scroll through the list of available games. Games are categorized by Atari system (2600, 5200, 7800, Arcade) and bonus games.
2. Press the Fire button on the joystick or the console's action button to select a game.
3. Once a game is selected, you may see options to start the game, view game information, or adjust settings.
4. To return to the main menu from a game, press the Home button on the joystick.



Image 3.2: A comprehensive list displaying the 201 games included with the GameStation Pro, categorized by original Atari platform.

### 3.4. Game Save Options

The GameStation Pro supports game save options. Consult the on-screen prompts within individual games or the system menu for specific instructions on saving and loading game progress.

## 4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the system in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace controller batteries when performance degrades. Always use new AA alkaline batteries and dispose of old batteries responsibly.

- **Firmware Updates:** Periodically check the MY ARCADE official website for any available firmware updates for your GameStation Pro. Follow the instructions provided with the update carefully.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power to console	USB power cable not connected or power adapter faulty.	Ensure the USB power cable is securely connected to the console and a working USB power source. Try a different USB power adapter if available.
No video output on TV	HDMI cable not connected or incorrect TV input selected.	Verify the HDMI cable is securely connected to both the console and the TV. Ensure your TV is set to the correct HDMI input channel.
Wireless joystick not responding	Low or dead batteries, or joystick not paired.	Replace batteries with fresh AA alkaline batteries. If the issue persists, refer to the pairing instructions (usually pressing a button on the controller and console simultaneously, check the quick start guide for specific pairing steps).
Game lag or performance issues	Interference or outdated firmware.	Ensure no other 2.4 GHz devices are causing interference. Check for and install any available firmware updates from the MY ARCADE website.

## 6. SPECIFICATIONS

- **Model Number:** DGUNL-7012
- **Brand:** MY ARCADE
- **Games Included:** 200+ (Atari 2600, 5200, 7800, Arcade, Bonus)
- **Connectivity:** HDMI output
- **Controllers:** Two 2.4 GHz wireless joysticks with built-in paddle controls
- **Controller Power:** 2 x AA batteries per joystick (4 AA batteries required total, not included)
- **Console Power:** USB-C (USB power cable included, adapter not included)
- **Hardware Interface:** HDMI
- **Display Type:** Digital
- **Product Dimensions:** 17.78 x 10.64 x 3.02 cm (Console)
- **Item Weight:** 1.45 kg (Total package weight)
- **UPC:** 845620070121

## 7. WARRANTY INFORMATION

Warranty information for the MY ARCADE DGUNL-7012 Atari GameStation Pro is typically provided with the product packaging or can be found on the official MY ARCADE website. Please retain your proof of purchase for warranty claims.

## 8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your MY ARCADE DGUNL-7012 Atari GameStation Pro,

please visit the official MY ARCADE website or contact their customer service department.

**Official Website:** [www.myarcadegaming.com](http://www.myarcadegaming.com)



© 2023 MY ARCADE. All rights reserved. Atari® and the Atari logo are trademarks of Atari Interactive, Inc.