

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Braun](#) /

› [Braun HC5330 Hair Clipper User Manual for Men, Home Hair Trimmer with 17 Length Settings and 50-Minute Battery](#)

Braun HC5330

Braun HC5330 Hair Clipper User Manual

Model: HC5330 | Brand: Braun

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Braun HC5330 Hair Clipper. Designed for home use, this hair clipper features ultra-sharp blades, 17 length settings, and a durable NiMH battery for convenient hair trimming.

SAFETY WARNINGS

- Do not use the appliance near water.
- Ensure batteries are removed and disposed of according to local regulations.
- Use the appliance only on dry hair.
- The sharp blades can cause skin irritation or injury if not handled properly.
- This product is not intended for use by children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x Braun HC5330 Hair Clipper
- 1x Small Comb (3-24 mm)
- 1x Large Comb (14-35 mm)
- 1x Cleaning Brush
- 1x Power Adapter/Charger

BRAUN

Hair Clipper
Series 5

Hair

Effortless
Hair Style
at Home

+2
Styling Tools



Image: The Braun HC5330 Hair Clipper shown with its two included attachment combs, ready for use.

SETUP

- Initial Charge:** Before first use, fully charge the hair clipper. Connect the power adapter to the clipper and a power outlet. The charging indicator (if present) will show charging status.
- Attaching Combs:** Select the desired comb (small for 3-24mm, large for 14-35mm) and slide it onto the clipper head until it clicks securely into place.
- Adjusting Length:** Use the integrated length adjustment dial or slider on the comb to select one of the 17 available length settings. The Memory SafetyLock feature will retain your last used setting.

OPERATING INSTRUCTIONS

- Preparation:** Ensure your hair is clean and dry before trimming.
- Power On:** Press the power button to turn on the clipper.
- Trimming:** Hold the clipper with the comb flat against the head, moving it against the direction of hair growth. Use smooth, even strokes. For detailed styling or edging, remove the comb and use the bare blades carefully.
- Length Adjustment:** Adjust the cutting length as needed during the trimming process. The 17 length

settings provide versatility for various styles.

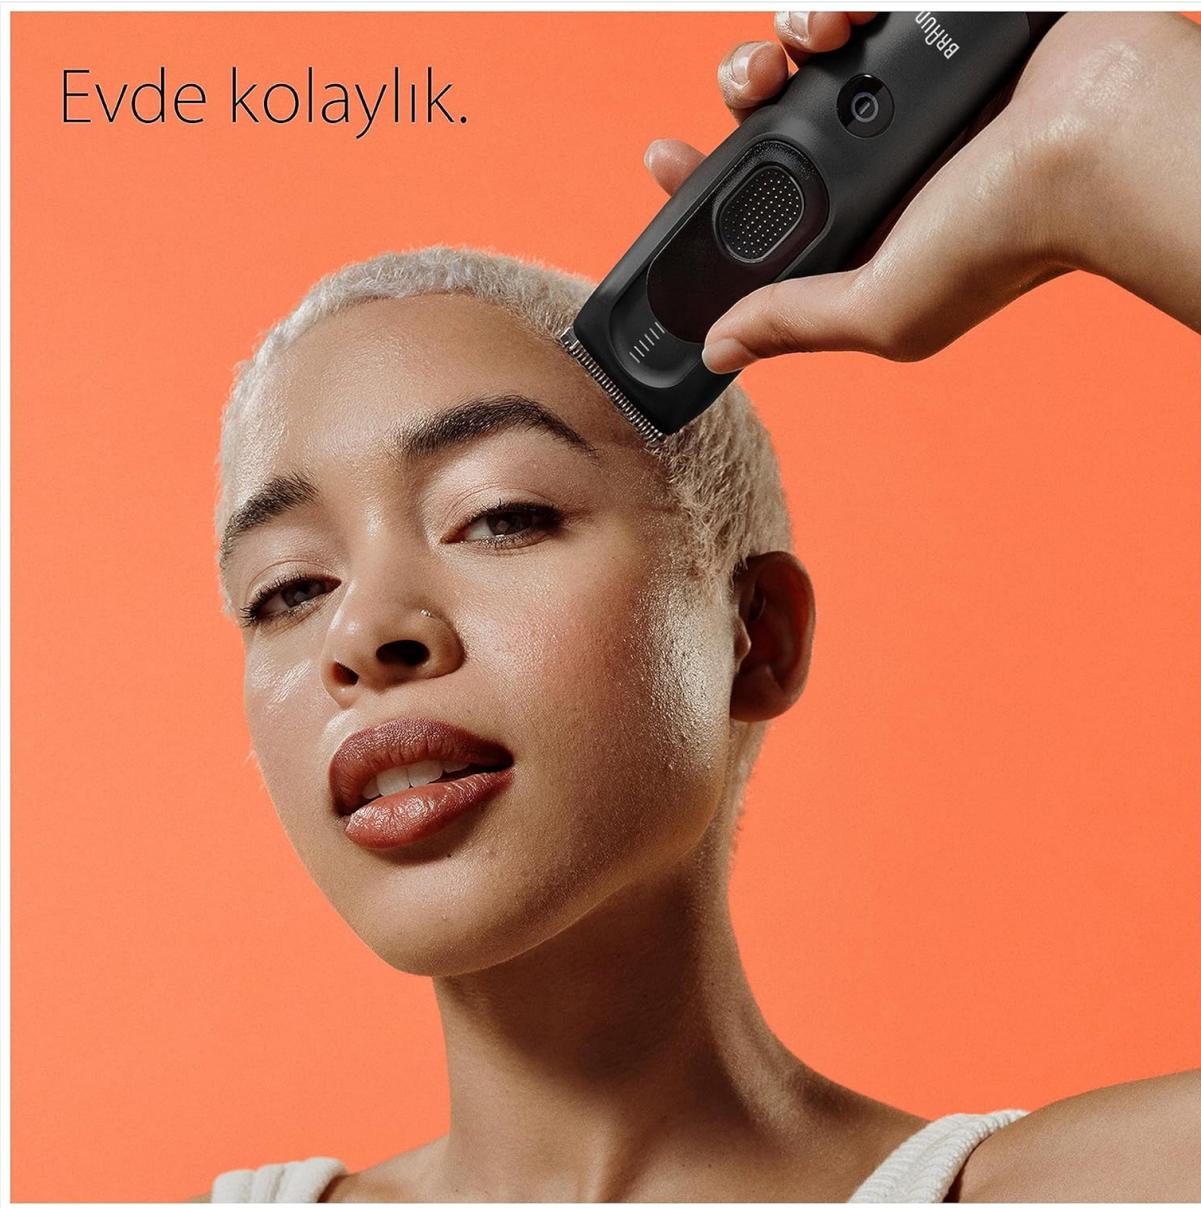


Image: A person demonstrating the use of the Braun HC5330 Hair Clipper for trimming hair.



Kolay kullanım için
Memory SafetyLock.



Image: Visual representation of the 17 different length settings achievable with the Braun HC5330 Hair Clipper and its combs.

Her uzunluk,
her stil.

Orta uzunlukta
düzeltme

Kısa uzunlukta
düzeltme

Kısa saç



Image: A detailed view of the Braun HC5330 Hair Clipper highlighting the Memory SafetyLock mechanism for consistent length settings.

MAINTENANCE

- Cleaning After Use:** Turn off and unplug the clipper. Remove the comb. The clipper is washable; rinse the head and blades under running water. Use the provided cleaning brush to remove any trapped hairs from the blades and inside the clipper head.
- Drying:** Allow the clipper to air dry completely before storing or recharging.
- Lubrication:** Periodically apply a small drop of light machine oil (not included, but commonly recommended for clippers) to the blades to maintain optimal cutting performance and longevity.

TROUBLESHOOTING

If you encounter issues with your Braun HC5330 Hair Clipper, consider the following:

- Clipper not turning on:** Ensure the battery is fully charged.
- Poor cutting performance:** Clean the blades thoroughly to remove hair buildup. Ensure blades are properly lubricated. Check if the comb is securely attached.

- **Battery not holding charge:** Ensure the charger is correctly connected and the power outlet is functional. If issues persist, the battery may need servicing.

SPECIFICATIONS

Model Number	HC5330
Brand	Braun
Power Source	Battery Powered (NiMH)
Battery Run Time	Up to 50 minutes
Blade Material	Stainless Steel
Length Settings	17 (with 2 combs)
Special Feature	Ergonomic design, Memory SafetyLock
Dimensions (L x W x H)	13.7 x 5.7 x 28.2 cm
Weight	369.7 Grams



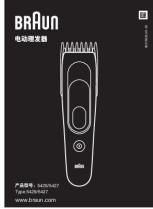
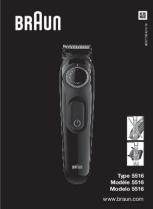
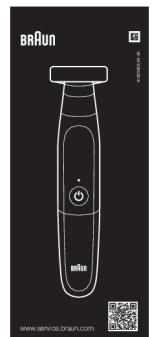
Ni·MH ➔

50 dk
kablosuz çalışma
süresi.

Image: The Braun HC5330 Hair Clipper, highlighting its NiMH battery and 50 minutes of cordless operation.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Braun website. You may also contact Braun customer service for assistance.

	<p><u>Braun Hair Clipper User Manual - Models 5429 and 5427</u></p> <p>Comprehensive user manual for Braun hair clippers, models 5429 and 5427, covering safety instructions, product description, charging, hair cutting techniques, cleaning, maintenance, and warranty information.</p>
	<p><u>Braun MGK 3080 Grooming Kit User Manual and Safety Guide</u></p> <p>This comprehensive user manual provides detailed instructions for the Braun MGK 3080 grooming kit. It covers safety precautions, product description, charging, usage for beard trimming, hair clipping, precision styling, ear/nose trimming, and body grooming, as well as cleaning, maintenance, battery removal, and warranty information for both the USA and Canada. Available in English, French, and Spanish.</p>
	<p><u>Braun Hair Clipper 5429/5427 User Manual</u></p> <p>User manual for the Braun Hair Clipper models 5429 and 5427, providing instructions on usage, charging, cleaning, maintenance, and warranty information.</p>
	<p><u>Braun HC 5090/5050/5030/5010 Hair Clipper User Manual</u></p> <p>Comprehensive user manual for Braun HC 5090, HC 5050, HC 5030, HC 5010 hair clippers. Includes operating instructions, safety information, charging, cleaning, and maintenance details for household use.</p>
	<p><u>Braun Beard Trimmer BT3221 User Manual and Safety Instructions</u></p> <p>Comprehensive guide for the Braun Beard Trimmer 3 (BT3221), including setup, usage, cleaning, maintenance, and warranty information. Learn how to achieve precise beard styles with 20 length settings.</p>
	<p><u>Braun Type 5590 Rasierer und Trimmer: Bedienungsanleitung und Sicherheitshinweise</u></p> <p>Entdecken Sie die vollständige Bedienungsanleitung für den Braun Type 5590 Rasierer und Trimmer. Erfahren Sie mehr über sichere Anwendung, Reinigung, Wartung und Garantieinformationen für Ihr Braun Grooming-Gerät.</p>