

Starfrit 024725-006-0000

Starfrit Electric Mini Waffle Maker Instruction Manual

Model: 024725-006-0000

1. INTRODUCTION

Thank you for purchasing the Starfrit Electric Mini Waffle Maker. This compact appliance is designed for convenient preparation of 4-inch waffles. Its non-stick cooking surface ensures easy food release and simplified cleaning. Please read this manual thoroughly before initial use to ensure safe operation and optimal performance.



Image: The Starfrit Electric Mini Waffle Maker open next to a plate of freshly made waffles.

2. IMPORTANT SAFEGUARDS

- Read all instructions before use.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The Starfrit Electric Mini Waffle Maker features a compact design with essential components for easy waffle preparation.

- **Indicator Light:** Illuminates when the appliance is heating and turns off when ready for use or when cooking is complete.
- **Non-Stick Plate:** The cooking surface designed for easy release of waffles and simple cleaning.
- **Cool Touch Handle:** Provides a safe grip for opening and closing the appliance during operation.



Image: Labeled components of the waffle maker.

4. SETUP AND FIRST USE

- 1. Unpack:** Remove all packaging materials and labels from the waffle maker.
- 2. Clean:** Wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
- 3. Position:** Place the waffle maker on a stable, heat-resistant surface near an electrical outlet.
- 4. Preheat:** Plug the appliance into a standard electrical outlet. The indicator light will illuminate, signaling that the waffle maker is preheating.
- 5. Ready:** The indicator light will turn off once the waffle maker has reached its optimal cooking temperature. It is now ready for use.

During the first use, a slight odor or light smoke may be noticeable. This is normal for new appliances and will dissipate quickly.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare waffles using your Starfrit Electric Mini Waffle Maker:

- 1. Prepare Batter:** Mix your preferred waffle batter according to its recipe.
- 2. Preheat:** Ensure the waffle maker is plugged in and preheated until the indicator light turns off.
- 3. Add Batter:** Carefully pour or spoon approximately 1/4 cup of batter onto the center of the bottom cooking plate. Do not overfill.
- 4. Close:** Gently close the lid. The indicator light may turn back on during cooking.

5. **Cook:** Allow the waffle to cook for 1-3 minutes, or until golden brown and steam stops escaping from the sides. Cooking time may vary based on batter type and desired crispness.
6. **Remove Waffle:** Once cooked, use a heat-resistant, non-metallic utensil (e.g., plastic or wooden spatula) to carefully remove the waffle. Avoid using metal utensils to prevent damage to the non-stick coating.
7. **Repeat:** If making additional waffles, close the lid and wait for the indicator light to turn off again before adding more batter.

EASY TO USE / FACILE À UTILISER



Image: Step-by-step guide for waffle preparation.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your waffle maker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wipe Plates:** Use a soft, damp cloth or sponge to wipe down the non-stick cooking plates. For stubborn

residue, a small amount of cooking oil can be applied to soften it before wiping.

3. **Clean Exterior:** Wipe the exterior of the waffle maker with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
4. **Do Not Immers:** Never immerse the waffle maker in water or any other liquid.
5. **Storage:** Once clean and dry, store the waffle maker in an upright position to save space.

Durable nonstick surface makes cleanup a breeze – just easy peasy!

La surface antiadhésive durable facilite le nettoyage un vrai jeu d'enfant !



Image: Features of the waffle maker, including non-stick and easy cleaning.

7. TROUBLESHOOTING

- **Waffle not cooking evenly:** Ensure the waffle maker is fully preheated before adding batter. Distribute batter evenly.
- **Waffles sticking:** Although the plates are non-stick, a light application of cooking spray or oil before the first waffle can help. Avoid using metal utensils.
- **Indicator light not working:** Check if the appliance is properly plugged into a functioning outlet. If the issue persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** 024725-006-0000

- **Brand:** Starfrit
- **Power:** 350 Watts
- **Cooking Surface:** 4-inch diameter, Non-Stick (PTFE & PFOA-free)
- **Features:** Compact design, Cool-touch handle, Power light indicator, Scratch-resistant surface
- **Dimensions:** 4.92 x 6.5 x 3.15 inches
- **Item Weight:** 14.9 ounces (0.93 Pounds)
- **Material:** Alloy Steel
- **UPC:** 069858247258

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Starfrit website. Keep your proof of purchase for any warranty claims.

© 2023 Starfrit. All rights reserved.

Related Documents - 024725-006-0000

	<p><u>Starfrit Electric Mini Waffle Maker 024771 - User Manual and Instructions</u> Official user manual and instructions for the Starfrit Electric Mini Waffle Maker (Model 024771). Includes safety precautions, operating instructions, care and maintenance, and recipes.</p>
	<p><u>Starfrit Programmable Drip Coffee Maker 024001 - User Manual & Care Instructions</u> Comprehensive user manual and care instructions for the Starfrit Programmable Drip Coffee Maker (Model 024001), covering operation, safety, cleaning, and warranty information.</p>
	<p><u>Guide d'utilisation de la Machine à Pâtes et Nouilles Starfrit</u> Guide complet pour la Machine à Pâtes et Nouilles Starfrit, incluant l'assemblage, la préparation de pâtes fraîches, la fabrication de nouilles, une recette de base et les instructions de nettoyage.</p>
	<p><u>Starfrit Pasta and Noodle Machine: Instructions, Dough Recipe, and Usage Guide</u> A comprehensive guide for the Starfrit Pasta and Noodle Machine, covering assembly, operation, a basic dough recipe, colored dough variations, noodle thickness settings, and cleaning instructions. Includes tips for optimal pasta making.</p>

<p>EcoCopper - 11" (28cm) Fry Pan</p>  <p>EcoCopper 11" (28cm) Fry Pan Care and Use Instructions Starfrit</p> <p>Detailed care and use instructions for the Starfrit EcoCopper 11" (28cm) Fry Pan, covering initial cleaning, pre-use preparation, cooking guidelines, cleaning methods, and oven safety information.</p>	
 <p>Starfrit Pasta and Noodle Maker: User Manual and Recipes</p> <p>Comprehensive guide to using and caring for your Starfrit pasta and noodle maker, including assembly, operation, troubleshooting, cleaning, and simple pasta recipes.</p>	