

Vivitar DVR4K

Vivitar 4K Video Camera

USER MANUAL

Model: DVR4K

Introduction

This manual provides essential information for the safe and effective operation of your Vivitar 4K Video Camera. Please read this manual thoroughly before using the device and retain it for future reference. This camcorder is designed to capture high-quality video in 4K resolution and still photos up to 56-megapixels, featuring an 18x digital zoom, a 3-inch IPS touchscreen, Wi-Fi connectivity, and night vision capabilities.


What's in the Box

Verify that all items listed below are included in your package:

- Vivitar 4K Camcorder
- USB Cable
- HDMI Cable
- Remote Control
- Lens Cap
- Carry Bag
- Rechargeable Lithium Ion Batteries (2 included)
- User Manual (this document)



ACCESORIES INCLUDED

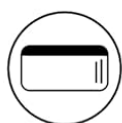

CAMERA
BAG



RECHARGEABLE
LITHIUM BATTERY



REMOTE
CONTROLLER



LENS
COVER



HDMI
CABLE

Image: All accessories included with the Vivitar 4K Video Camera, such as the camera bag, battery, remote control, lens cover, HDMI cable, and USB cable.

Safety Information

- Do not expose the camera to water or moisture.
- Avoid dropping or subjecting the camera to strong impacts.
- Keep the camera away from extreme temperatures and direct sunlight.
- Use only the specified power adapter and cables for charging.
- Do not attempt to disassemble or modify the camera.
- Keep out of reach of children.

Setup

1. Charging the Battery

Insert the included rechargeable Lithium Ion battery into the battery compartment. Connect the camera to a power source using the supplied USB cable. The charging indicator light will illuminate during charging and turn off when fully charged.

2. Inserting an SD Card

Locate the SD card slot on the camera. Insert a compatible SD card (not included) into the slot until it clicks into place. Ensure the card is inserted in the correct orientation. The camera supports various capacities; refer to specifications for maximum supported size.

3. Attaching the Lens Cap

Place the lens cap over the camera lens when not in use to protect it from dust and scratches.



Image: The Vivitar 4K Video Camera shown with its included lens cover, emphasizing its protective function.

Operating the Camera

1. Powering On/Off

To power on the camera, simply open the 3-inch IPS touchscreen display. To power off, close the display or press and hold the power button (if available).

2. Basic Controls and Touchscreen Navigation

The camera features a 3-inch IPS touchscreen with 270-degree rotation for easy viewing and control. Navigate menus and settings by tapping the screen. Physical buttons for common functions like zoom, record, and photo capture are also available on the camera body.



TOUCH
SCREEN



Image: The Vivitar 4K Video Camera with its 3-inch IPS touchscreen display open, revealing the control buttons for mode, menu, Wi-Fi, and navigation.

3. Recording Video

Press the Record button to start and stop video recording. The camera records in 4K Ultra HD resolution. Utilize the 18x digital zoom by pressing the zoom controls to get closer to your subject.



REAL 4K ULTRA HD VIDEO RECORDING

Image: A side view of the Vivitar 4K Video Camera, prominently displaying the '4K' logo and indicating its Ultra HD video recording capability.

4. Taking Photos

Switch to photo mode (if applicable) and press the Photo button to capture still images. The camera supports up to 56-megapixel still photo resolution.

5. Wi-Fi Connectivity

The camera features built-in Wi-Fi for wireless transfer of files. Refer to the on-screen menu for Wi-Fi setup and connection instructions with compatible devices.



**BUILT IN
WIFI**



Image: The back view of the Vivitar 4K Video Camera, featuring a hand strap and a clear indication of its built-in Wi-Fi functionality.

6. Night Vision Mode

Activate night vision mode through the camera's settings to record clear videos in low-light conditions.

7. Playback

Access the playback mode to review your recorded videos and photos directly on the touchscreen display. Use the navigation buttons or touchscreen gestures to browse through your media.

Official Product Video

Video: An official product video demonstrating the features of the Vivitar 4K Video Camera, including its Wi-Fi capabilities and 18x digital zoom.

Maintenance

Cleaning

Use a soft, dry cloth to clean the camera body. For the lens and touchscreen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.

Storage

Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery.

Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on	Battery is low or not inserted correctly.	Charge the battery fully. Ensure battery is inserted with correct polarity.
Cannot record video/take photos	SD card is full, corrupted, or not inserted.	Insert a valid SD card. Delete unnecessary files or format the card (this will erase all data).
Poor image/video quality	Lens is dirty. Insufficient lighting.	Clean the lens. Use night vision mode in low light or ensure adequate lighting.
Wi-Fi connection issues	Incorrect password. Out of range.	Verify Wi-Fi password. Move closer to the Wi-Fi source.

Specifications

Feature	Detail
Brand	Vivitar
Model Number	DVR4K
Video Capture Resolution	4K Ultra HD
Still Photo Resolution	56 Megapixels
Digital Zoom	18x
Screen Type	3-inch IPS Touchscreen (270-degree rotation)
Connectivity	Wi-Fi, USB, HDMI
Special Features	Night Vision, Lightweight, Remote Control, Slow Motion, Time Lapse
Storage Media	SD Card Slot
Batteries	2 Lithium Ion batteries (included)
Item Weight	1.34 pounds
Product Dimensions	4 x 2 x 2 inches

Warranty and Support

For warranty information and technical support, please refer to the official Vivitar website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Vivitar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question