

[Manuals.plus](#) /

› [Wessel-Werk](#) /

› Wessel-Werk Villa Plus Collection Central Vacuum System Accessories and EBK 360 Powerhead Kit (35ft. Direct Connect) User Manual

Wessel-Werk Villa+

Wessel-Werk Villa Plus Collection Central Vacuum System Accessories and EBK 360 Powerhead Kit (35ft. Direct Connect) User Manual

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Wessel-Werk Villa Plus Collection Central Vacuum Accessory Kit. This kit includes the EBK360 Electric Powerhead, a 35-foot crushproof hose with a 3-way switch, and a variety of attachments designed to enhance your central vacuum system's cleaning capabilities. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

PRODUCT COMPONENTS

Your Wessel-Werk Villa Plus Collection kit includes the following items:

- EBK360 Electric Powerhead with LED headlight
- 35-foot 4-wire Crushproof Central Vacuum Hose with 3-way switch
- Stainless Steel Telescopic Wand (for EBK360) with enclosed wiring
- D330 Flexible Wall, Carpet, and Hard Floor Vacuum Brush Attachment
- Stainless Steel Telescopic Wand (for D330)
- Two 19-inch Plastic Extension Tubes
- PT160 Handheld Turbo Brush
- 12-inch Crevice Tool
- 25-inch Flexible Crevice Tool
- Universal Dust Brush with natural fibers
- Cob Web Brush
- Upholstery Brush Tool with swivel neck
- Central Vacuum Hose Rack
- Mesh Storage Bag
- Clip-on Vacuum Tool Holder



Figure 1: Overview of the Wessel-Werk Villa Plus Central Vacuum Accessory Kit, showing the EBK360 powerhead, 35ft hose, various attachments, and storage solutions.

SETUP INSTRUCTIONS

1. Connecting the Central Vacuum Hose

1. Locate a standard 1.5-inch direct connect wall inlet for your central vacuum system.
2. Insert the direct connect end of the 35-foot crushproof hose firmly into the wall inlet. Ensure the two metal prongs on the hose end align with the corresponding holes in the inlet for power connection.
3. A secure connection will activate the central vacuum system if the hose switch is in the "ON" position.



Fits all Standard 1.5in. Direct Connect Wall Inlets

Figure 2: Close-up view of the direct connect hose end, illustrating how it fits into a standard 1.5-inch wall inlet for power and suction.

2. Assembling the EBK360 Powerhead and Wand

1. Extend the stainless steel telescopic wand (with enclosed wiring) to your desired length. The wand has a collapsed length of 25 inches and extends up to 40 inches.
2. Connect the lower end of the telescopic wand to the quick connect/disconnect neck of the EBK360 Electric Powerhead. Ensure it clicks securely into place.
3. Attach the upper end of the telescopic wand to the hose handle. The enclosed wiring in the wand will connect the powerhead to the hose's electrical contacts.

3. Attaching Other Accessories

For the D330 floor brush and other universal accessories, attach them directly to the end of the hose handle or to the stainless steel telescopic wand (for the D330) or the plastic extension tubes as needed. Ensure a snug fit for optimal suction.

OPERATING INSTRUCTIONS

1. Using the 3-Way Hose Switch

The 35-foot crushproof hose features a convenient 3-way switch on its handle, providing complete control over your central vacuum system:

- **OFF:** Turns off both the central vacuum unit and the powerhead.
- **SUCTION ONLY:** Activates the central vacuum unit for suction, but the powerhead motor remains off. Ideal for delicate surfaces or when only suction is required.
- **SUCTION + POWERHEAD:** Activates both the central vacuum unit for suction and the EBK360 powerhead motor for deep cleaning.

The hose-to-grip connection offers a full 360-degree swivel, preventing tangles during operation.

2. Operating the EBK360 Powerhead

The EBK360 Electric Powerhead is designed for effective carpet cleaning. When the switch is set to "SUCTION + POWERHEAD", the brush roll will spin, and the integrated LED headlight will illuminate your cleaning path, making dust particles more visible.

3. Utilizing the D330 Floor Brush

The D330 flexible wall and floor vacuum brush attachment is versatile for various surfaces. It can be used with its dedicated stainless steel telescopic wand. For hard floors, use the brush without the carpet plate. For carpeted areas, attach the carpet plate. The kit also includes a mop cleaning attachment set for wet cleaning tasks (ensure your central vacuum system is suitable for wet pickup if using this feature).

4. Using Universal Accessories

- **PT160 Handheld Turbo Brush:** Ideal for upholstery, stairs, and pet hair removal.
- **Crevice Tools (12-inch and 25-inch Flexible):** Perfect for reaching tight spaces, corners, and between cushions.
- **Universal Dust Brush:** Features soft, sturdy natural fibers for dusting delicate surfaces, blinds, and furniture.
- **Cob Web Brush:** Designed for removing cobwebs from ceilings and high corners.
- **Upholstery Brush Tool:** With a swivel neck and tilting brush, it effectively cleans upholstered furniture.

MAINTENANCE

1. General Cleaning

- Regularly wipe down all attachments and the hose exterior with a damp cloth to remove dust and debris.
- Ensure all connections are free of obstructions.

2. Powerhead Maintenance (EBK360)

- Periodically check the brush roll for tangled hair, threads, or debris. Use scissors to carefully cut and remove any obstructions.
- Ensure the LED headlight is clean and free from dust for optimal illumination.

3. Hose Care

- Store the crushproof hose on the provided hose rack to prevent kinks and damage.
- If suction decreases, check the hose for blockages. Carefully feed a blunt object (like a broom handle) through the hose to dislodge any clogs.

TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power to central vacuum or powerhead.	Hose not fully inserted into wall inlet; 3-way switch in OFF position; central vacuum circuit breaker tripped.	Ensure hose is fully seated with prongs connected; set 3-way switch to SUCTION ONLY or SUCTION + POWERHEAD; check and reset central vacuum's circuit breaker.
Powerhead brush roll not spinning.	3-way switch not in SUCTION + POWERHEAD mode; brush roll obstructed; belt broken.	Set switch to SUCTION + POWERHEAD; clear any obstructions from brush roll; contact support for belt replacement if necessary.
Reduced suction.	Hose blockage; central vacuum unit full or filter clogged; attachment not sealed properly.	Check hose for clogs; empty central vacuum canister and clean/replace filter; ensure attachments are securely fitted.
LED headlight not working.	Powerhead not receiving power; LED bulb failure.	Verify power to powerhead; contact support if LED bulb needs replacement.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Wessel-Werk
Model Number	Villa+
Item Weight	25 pounds
Product Dimensions	24 x 15 x 12 inches (packaging)
Hose Length	35 feet
Hose Connection Type	Direct Connect
Material	Acrylonitrile Butadiene Styrene (ABS)
Voltage	120 Volts (AC)
Number of Pieces in Kit	19
Powerhead Light Type	LED
Telescopic Wand Length	25 inches (collapsed) to 40 inches (extended)

WARRANTY INFORMATION

The Wessel-Werk Villa Plus Collection Central Vacuum Accessory Kit is covered by a manufacturer's warranty for 365 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For specific terms and conditions, or to make a warranty claim, please retain your proof of purchase and contact Wessel-Werk customer support.

SUPPORT

For further assistance, technical support, or inquiries regarding your Wessel-Werk Villa Plus Collection Central Vacuum Accessory Kit, please visit the official Wessel-Werk website or contact their customer service department. You can often find contact details on the product packaging or through the [Wessel-Werk Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question