

Coby CD201BK

Coby CD201BK Portable Bluetooth CD Player User Manual

Model: CD201BK

[Introduction](#) [What's in the Box](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#)

1. INTRODUCTION

Thank you for purchasing the Coby CD201BK Portable Bluetooth CD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Image: The Coby CD201BK Portable Bluetooth CD Player, showcasing its compact black design, digital display, control buttons, and the included USB charging cable and wired earbuds.

2. WHAT'S IN THE BOX

The package should contain the following items:

- Coby CD201BK Portable Bluetooth CD Player
- Micro-USB Charging Cable
- 3.5mm Wired Earbuds
- User Manual (this document)

Earbuds Included: Enjoy your favorite CDs out of the box with our 3.5mm wired earbuds



Image: A person wearing the included 3.5mm wired earbuds while holding the Coby CD201BK CD player, demonstrating the direct audio connection option.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the CD player. Connect the micro-USB charging cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

3.2 Initial Power On

Press and hold the Power button to turn on the device. The display will light up.

3.3 Inserting a CD

1. Gently open the CD compartment lid.
2. Place a CD with the label side facing up onto the spindle.
3. Gently press the center of the CD until it clicks into place.
4. Close the CD compartment lid firmly.



Image: The Coby CD player with its lid open, revealing a compact disc placed inside, illustrating the CD insertion process.

4. OPERATING INSTRUCTIONS

4.1 CD Playback

After inserting a CD, the player will typically begin playback automatically. Use the control buttons for functions such as Play/Pause, Skip Forward/Backward, and Stop.

- **Play/Pause:** Press to start or pause playback.
- **Skip Forward/Backward:** Press briefly to skip to the next/previous track.
- **Fast Forward/Rewind:** Press and hold to fast forward or rewind within a track.
- **Stop:** Press to stop playback.
- **Volume Control:** Use the dedicated volume buttons to adjust the audio level.

The CD201BK supports various CD formats, including MP3 CDs.



COBY



Image: A person holding several compact discs, with the Coby brand logo and text indicating the player's compatibility with all CD formats, including MP3.

4.2 Bluetooth Connectivity

The CD201BK can transmit audio wirelessly to Bluetooth-enabled speakers, headphones, or car audio systems.

1. Ensure the CD player is powered on.
2. Activate Bluetooth pairing mode on your external Bluetooth device.
3. On the CD player, press the Bluetooth button (often combined with FM). The Bluetooth indicator will flash, indicating pairing mode.
4. Select "Coby CD201BK" from the list of available devices on your external Bluetooth device.
5. Once connected, the Bluetooth indicator on the CD player will become solid.

Wirelessly Connect
to a Variety
of Bluetooth-Enabled
Devices



wireless earbuds & speaker not included

Image: A visual representation of the Coby CD player wirelessly connecting to various Bluetooth-enabled devices, including a home speaker, wireless earbuds, and a car's infotainment system, highlighting its versatile connectivity.



Seamless Bluetooth Connectivity
Play your favorite CDs in
newer cars via Bluetooth

Image: The Coby CD player positioned in a car's center console, with blue waves indicating a seamless Bluetooth connection to the car's display, allowing for CD playback through the car's audio system.



Image: The Coby CD player shown alongside a pair of Apple AirPods, with text confirming its ability to pair with AirPods and other wireless earbuds/speakers.

4.3 FM Radio Operation

The CD201BK includes a programmable FM radio tuner.

1. Press the FM button (often combined with Bluetooth) to switch to FM radio mode.
2. Use the Skip Forward/Backward buttons to tune to different frequencies.
3. To auto-scan and save stations, refer to the specific instructions in the full manual (if applicable, or typically press and hold a scan button).



Image: The Coby CD player with an overlay indicating FM radio functionality, showing frequency ranges and the FM/BT button for mode selection.

4.4 Advanced Playback Controls

- **Program Play:** Allows you to program a specific order of tracks.
- **Repeat:** Repeat the current track (Repeat 1) or the entire disc (Repeat All).
- **Shuffle:** Play tracks in a random order.
- **Intro:** Plays the first 10 seconds of each track on the disc.
- **Super Bass:** Enhances bass frequencies for a richer sound.

5. MAINTENANCE

5.1 Cleaning the Device

Wipe the exterior of the CD player with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the optical lens, use a specialized CD lens cleaning kit if necessary, following its instructions carefully.

5.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.



Image: The Coby CD player with an overlay highlighting its "Up to 6h" battery life, indicating its portability and extended

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is drained.	Charge the device using the provided USB cable.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD with a soft cloth. Check for scratches. Reinsert the CD correctly. Ensure the lid is fully closed.
No sound from headphones/speakers.	Volume is too low; headphones/speakers not connected properly; Bluetooth not paired.	Increase volume. Check headphone/AUX cable connection. Re-pair Bluetooth device.
Bluetooth connection unstable.	Distance too far; interference; other devices connected.	Move closer to the paired device. Avoid obstacles. Disconnect other Bluetooth devices.
FM radio static.	Weak signal; interference.	Adjust position for better reception. Try auto-scanning for stronger stations.




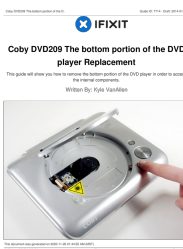


7. SPECIFICATIONS

Feature	Detail
Model Number	CD201BK
Product Dimensions	5.91 x 5.43 x 1.18 inches
Item Weight	12.3 ounces
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm AUX)
Special Features	Portable, Anti-Skip Protection, FM Radio, MP3 Playback
Battery	1 Lithium Ion battery (included)
Manufacturer	Summit Electronics, LLC
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Coby website or contact their customer service. Details can typically be found on the product packaging or the manufacturer's website.

Related Documents - CD201BK

	<p>Coby MP201 USB MP3 Player Instruction Manual</p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
	<p>Coby CD201 Wireless Anti-Skip CD Player User Manual</p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p>
	<p>Coby MP-610 MP3 & Video Player Quick Setup Guide</p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
	<p>Coby CHBT590 Wireless Headphones Instruction Manual</p> <p>Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.</p>
	<p>COBY CHBT835 Wireless Bluetooth Headphones User Manual</p> <p>Comprehensive user manual for the COBY CHBT835 wireless Bluetooth headphones, covering setup, controls, charging, specifications, safety, and warranty information.</p>